









#### i Important!

This replacement procedure can be used for:

BMW 3 Touring (E91) 325i 3.0, BMW 3 Saloon (E90) 318d 2.0, BMW 3 Touring (E91) 318i 2.0, BMW 1 Coupe (E82) 118d 2.0, BMW 3 Coupe (E92) 318i 2.0, BMW 3 Convertible (E93) 318i 2.0, BMW 1 Hatchback (E81) 116i 1.6, BMW 1 Hatchback (E81) 120d 2.0, BMW 3 Saloon (E90) 320i 2.0, BMW 3 Saloon (E90) 325i 2.5, BMW 3 Saloon (E90) 330i 3.0, BMW 3 Saloon (E90) 320d 2.0, BMW 1 Hatchback (E81) 130i 3.0, BMW 3 Touring (E91) 320i 2.0, BMW 3 Touring (E91) 325i 2.5, (+ 55)

The steps may slightly vary depending on the car design.


CLUB.AUTODOC.CO.UK 1–9







## REPLACEMENT: BRAKE PAD WEAR SENSOR – BMW E82. LIST OF THE TOOLS YOU'LL NEED:

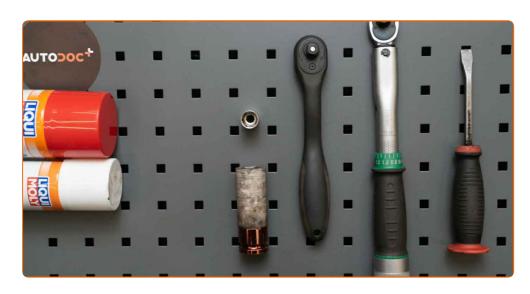

- Brake cleaner
- Copper grease
- Drive socket # 10
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Crow bar
- Wheel chock

**BUY TOOLS** 

CLUB.AUTODOC.CO.UK 2-9







#### Replacement: brake pad wear sensor – BMW E82. AUTODOC recommends:

- The replacement procedure is identical for both brake pad wear sensors on the same axle.
- Warning! Shut down the engine before starting any work BMW E82.

#### CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- 1 Secure the wheels with chocks.
- Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the rear of the car and secure on supports.



Unscrew the wheel bolts.

4



CLUB.AUTODOC.CO.UK 3-9







#### Replacement: brake pad wear sensor – BMW E82. Tip:

• To avoid injury, hold up the wheel when unscrewing the bolts.

Remove the wheel.

8



6 Remove the brake pad wear sensor from the brake pad.



Disconnect the brake pads wear sensor. Use a crowbar.



Unscrew the wheel arch cover fasteners. Use a drive socket #10. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 4–9







9 Move the part aside.



Disconnect the brake pad wear sensor plug.



Connect the brake pad wear sensor plug.



Install the wheel arch cover to its mounting seat. Screw in the fasteners. Use a drive socket #10. Use a ratchet wrench.



Connect the brake pads wear sensor.

13



CLUB.AUTODOC.CO.UK 5–9







14 Install the wear sensor on the brake pads.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.



### Replacement: brake pad wear sensor – BMW E82. Tip from AUTODOC:

• After applying the spray, wait a few minutes.

17 Install the wheel.



CLUB.AUTODOC.CO.UK 6-9







#### **AUTODOC** recommends:

 Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. BMW E82

Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



Remove the jacks and chocks.





**VIEW MORE TUTORIALS** 

CLUB.AUTODOC.CO.UK 7-9







# AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**BUY SPARE PARTS FOR BMW** 

**BRAKE PAD WEAR SENSOR: A WIDE SELECTION** 

CLUB.AUTODOC.CO.UK 8-9