MFE MR11 System — User Guide

Oct 21, 2026 · @nurizzat

Most users need three steps: sign in, upload their department's latest workbook, and check their columns on the MR11 page. This guide covers every screen in the order users meet them. The screenshots come from version 1.0 running with sample workbooks, so the projects and figures shown are examples.

Document	User Guide
System	MFE Formwork MR11 System, version 1.0
Prepared for	MFE Formwork
Prepared by	MyIntellX project team
Readers	All users: department staff, CEO, administrators

1. Quick start by role

You are	You will mostly	Sections
Department user (BD, Finance, Shell Plan, Design, Planning, Production, Dispatch)	Upload your workbook, check your columns in the MR11	2, 3, 4, 5
CEO or executive	Read the CEO Executive Hub and the MR11	2, 5, 6
System administrator	Create users, set roles, delete or restore MR11 rows	2, 5, 7

2. Signing in, passwords and the sidebar

Sign in

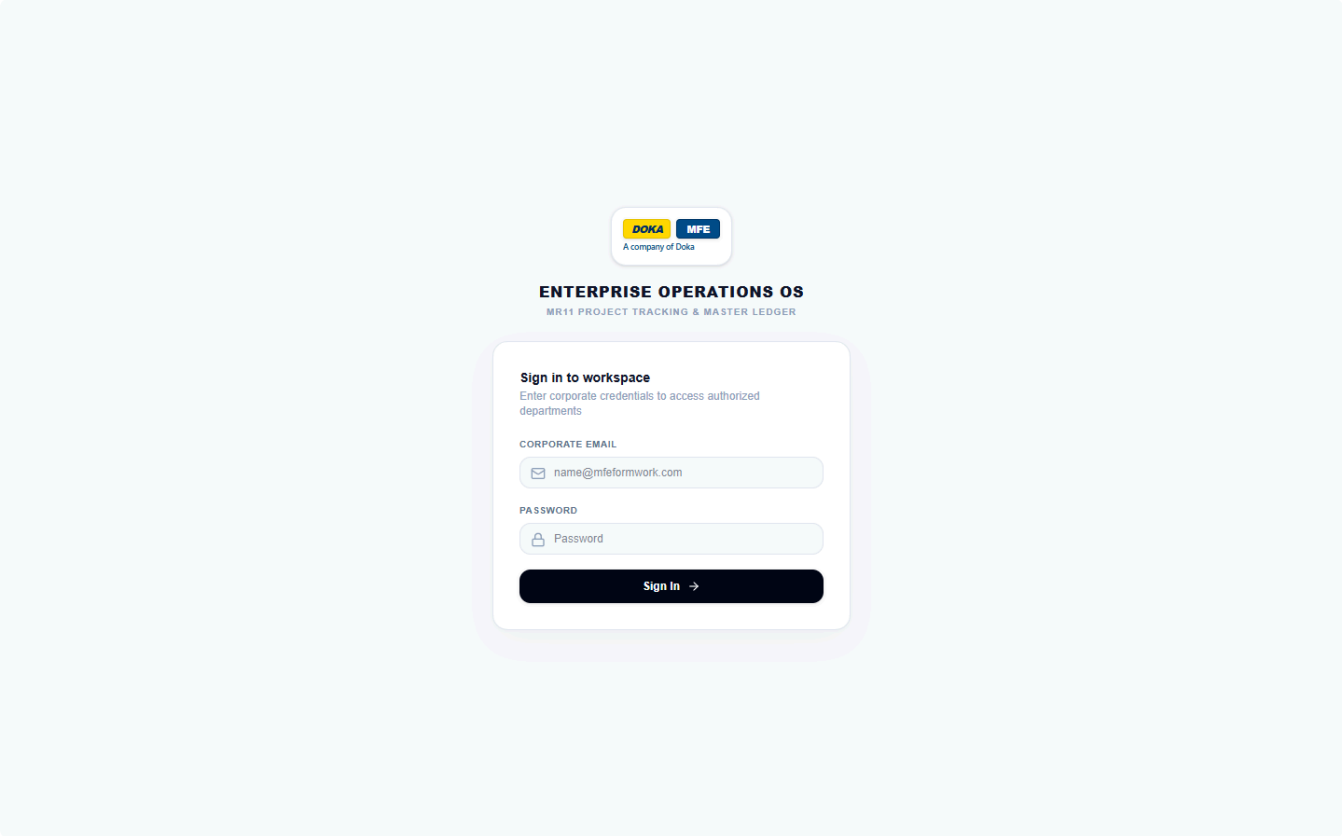


Figure 1 — The sign-in page

1. Open the system address in Chrome, Edge, Firefox or Safari on a desktop or laptop.
2. On **Sign in to workspace**, enter your corporate email and password, then click **Sign In**.
3. A wrong email shows "No account found for this email"; a wrong password shows "Wrong password". Ask your administrator if you are locked out.
4. To sign out, click the **Sign out** icon at the bottom of the sidebar. Sessions end on their own after 7 days.

Change your password

New accounts start with a default password. Until you change it, the sidebar shows "You are using the default password" and the key icon turns amber.

1. Click the **Change password** icon at the bottom of the sidebar.
2. Enter your current password and the new one twice. The new password needs at least 8 characters and must differ from the current and default passwords.
3. Click Change password. You see "Password changed. Use your new password the next time you sign in."

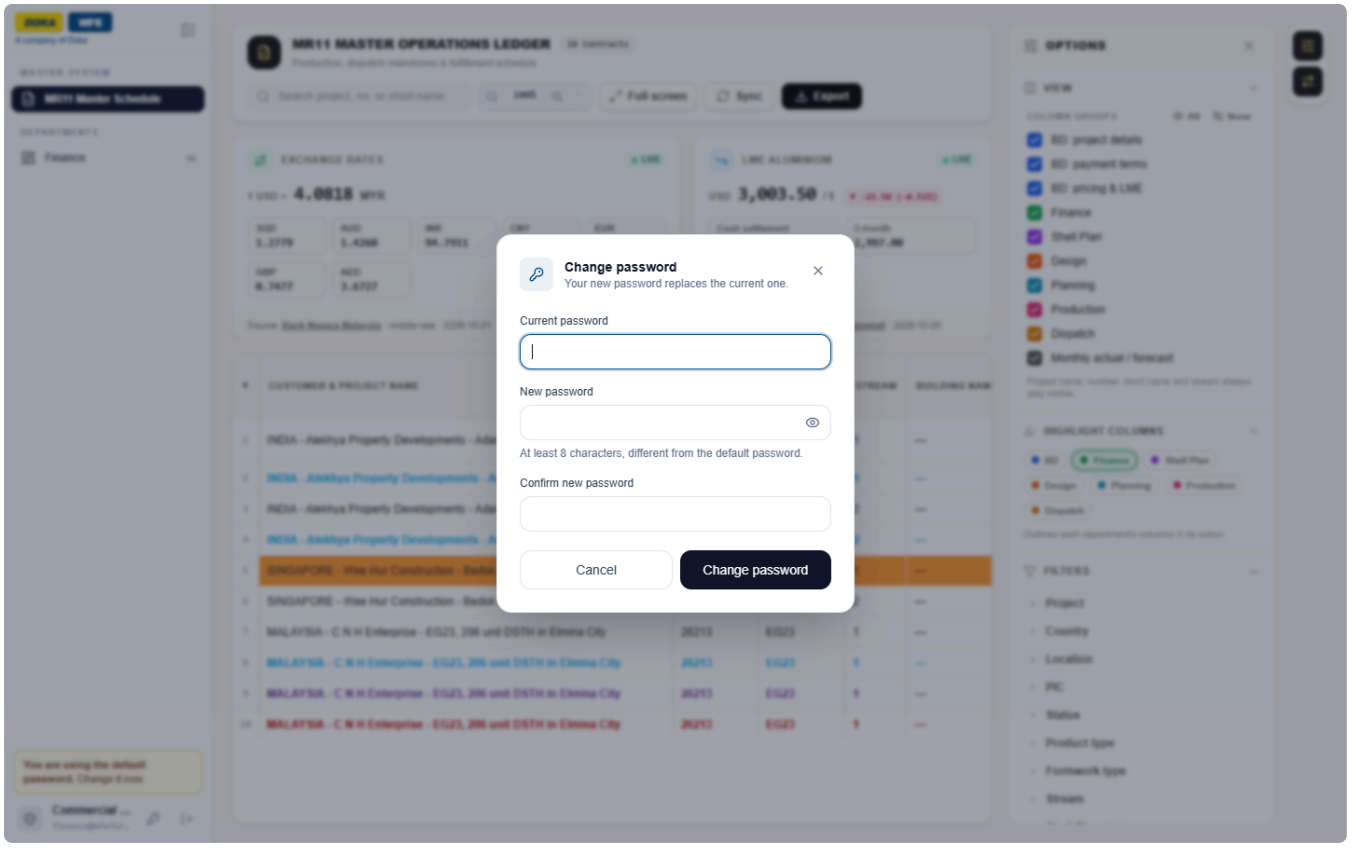


Figure 2 — The Change password box, opened from the key icon in the sidebar

The sidebar shows only the pages your role can open.

Item	Who sees it
MR11 Master Schedule	Everyone
CEO Executive Hub	CEO and administrators
Admin Permissions	Administrators
Business Development, Finance, Shell Plan & Design, Planning, Production, Dispatch	Users of that department, and administrators


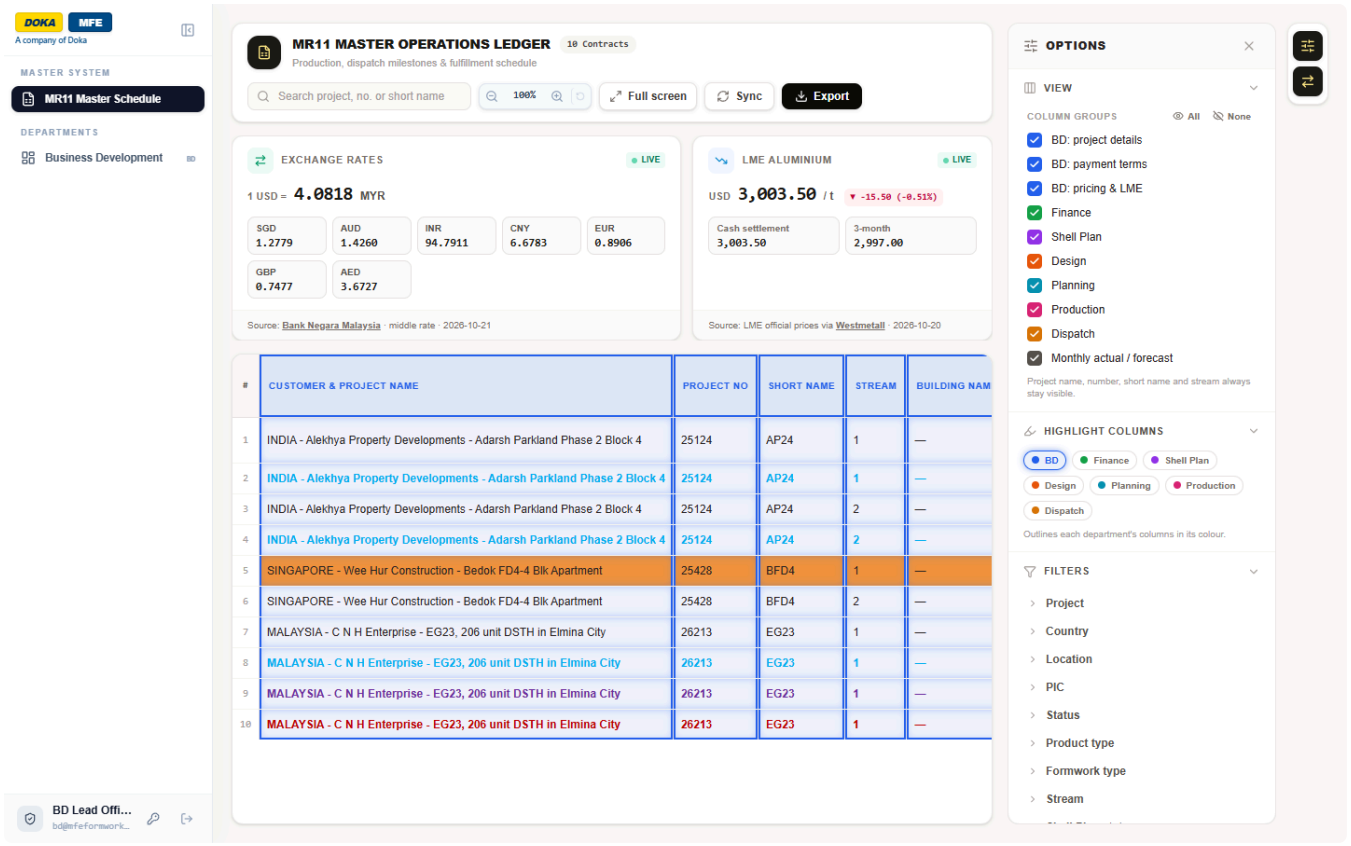


Figure 3 — What a BD user sees: the MR11 and their own department only, with the BD columns outlined

If you see "No department tabs assigned", ask an administrator to add your department role. After a role change, sign out and in again.

3. Uploading your department workbook

Each department page shows the active workbook as a spreadsheet with its original colours and merged cells, plus the file name and who uploaded it. Use **Zoom**, **Full screen** and the **Sheets** tabs at the bottom to move around.

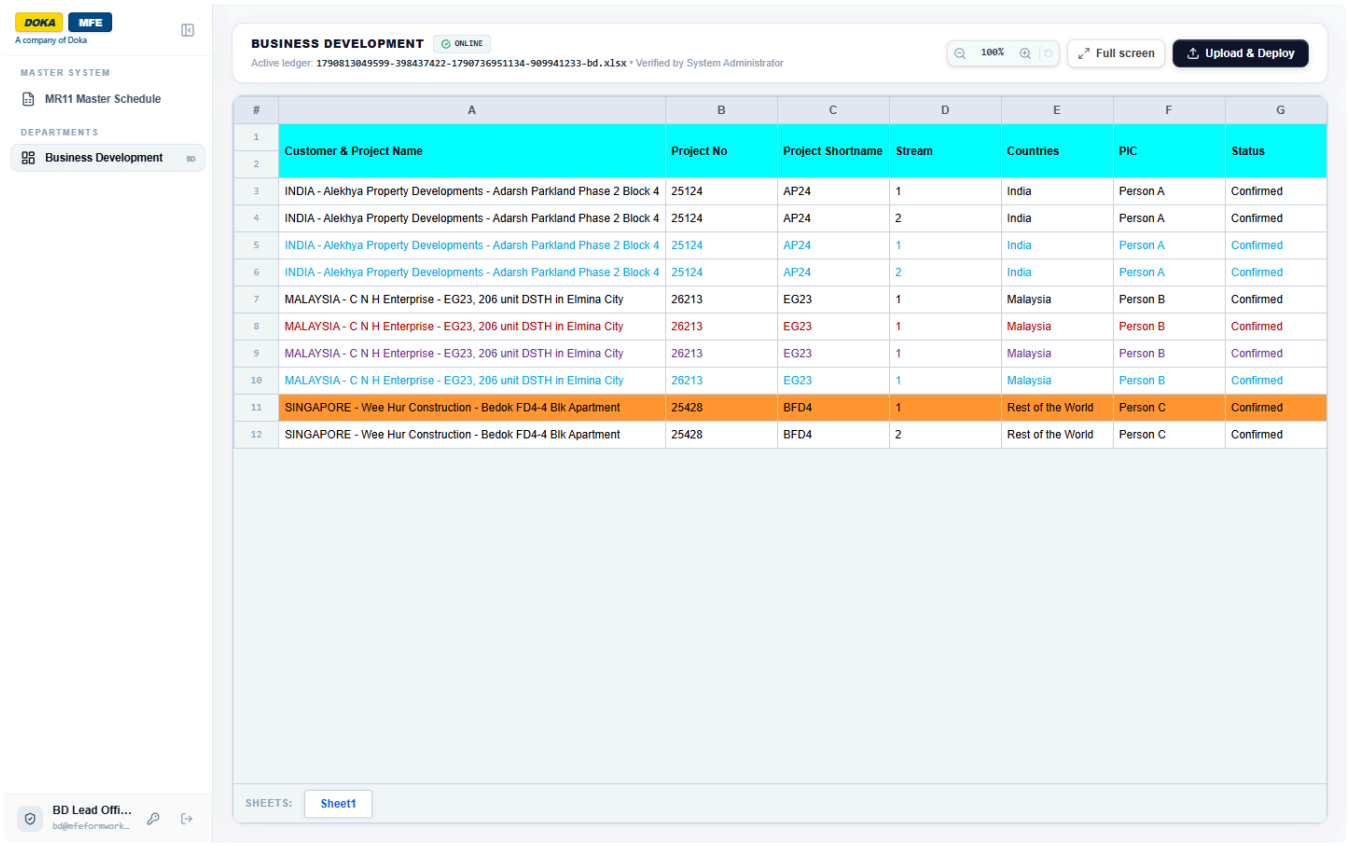

#	A	B	C	D	E	F	G
1							
2	Customer & Project Name	Project No	Project Shortname	Stream	Countries	PIC	Status
3	INDIA - Alekhya Property Developments - Adarsh Parkland Phase 2 Block 4	25124	AP24	1	India	Person A	Confirmed
4	INDIA - Alekhya Property Developments - Adarsh Parkland Phase 2 Block 4	25124	AP24	2	India	Person A	Confirmed
5	INDIA - Alekhya Property Developments - Adarsh Parkland Phase 2 Block 4	25124	AP24	1	India	Person A	Confirmed
6	INDIA - Alekhya Property Developments - Adarsh Parkland Phase 2 Block 4	25124	AP24	2	India	Person A	Confirmed
7	MALAYSIA - C N H Enterprise - EG23, 206 unit DSTH in Elmina City	26213	EG23	1	Malaysia	Person B	Confirmed
8	MALAYSIA - C N H Enterprise - EG23, 206 unit DSTH in Elmina City	26213	EG23	1	Malaysia	Person B	Confirmed
9	MALAYSIA - C N H Enterprise - EG23, 206 unit DSTH in Elmina City	26213	EG23	1	Malaysia	Person B	Confirmed
10	MALAYSIA - C N H Enterprise - EG23, 206 unit DSTH in Elmina City	26213	EG23	1	Malaysia	Person B	Confirmed
11	SINGAPORE - Wee Hur Construction - Bedok FD4-4 Blk Apartment	25428	BFD4	1	Rest of the World	Person C	Confirmed
12	SINGAPORE - Wee Hur Construction - Bedok FD4-4 Blk Apartment	25428	BFD4	2	Rest of the World	Person C	Confirmed

Figure 4 — The Business Development page showing the active BD workbook

1. Save your workbook as .xlsx (up to 25 MB). Keep the usual header names and colour conventions.
2. Open your department page and click **Upload & Deploy** (on the Planning and Production pages the button reads **Upload & Sync**).
3. Choose the file. The button shows "Deploying…" while the system reads and saves it.
4. When it finishes, the page shows the new workbook and the MR11 has been rebuilt with your data.
5. If an error appears (for example "could not be saved to the database"), your previous workbook stays active. Try again, and contact support if it repeats.

Keep your own copy of each uploaded file: in this release the original file cannot be downloaded back from the system.

4. Notes for each department

Department	What to know
Business Development	BD is the master list: only projects in the BD workbook appear in the MR11. Use blue font for Re-Design Only rows; they stop at Planning. Fill colours group rows into blocks that other departments match.
Finance	Finance rows are matched by project, stream, closest colour, then product type.
Shell Plan & Design	Shell Plan and Design users share one combined workbook and one page. Design blocks are matched by fill colour. The **Approval history** button shows or hides the list of every Approved and Reapprove with its revision and date.
Planning	**Active Sheet** shows the workbook; **Series Ledger** lists every series with contract no., shortcode, stream, signature colour, processed and target m².
Production	**Active Sheet** shows the workbook; **Production Series** lists every series with produced m². Production files are monthly; earlier months are kept.
Dispatch	Dispatch has two files. Choose **Local** or **Overseas**, then click **Upload Local** or **Upload Overseas**. Each upload replaces only that file. **Monthly dispatched** shows m² dispatched per month.

Rules that keep your rows matched to BD

- Use the same project short name and stream as BD.
- Use the same block colours (font and fill) as BD; slightly different shades are accepted.
- Do not rename column headers. If a header must change, tell the administrator first.

4.1 Shell Plan & Design page

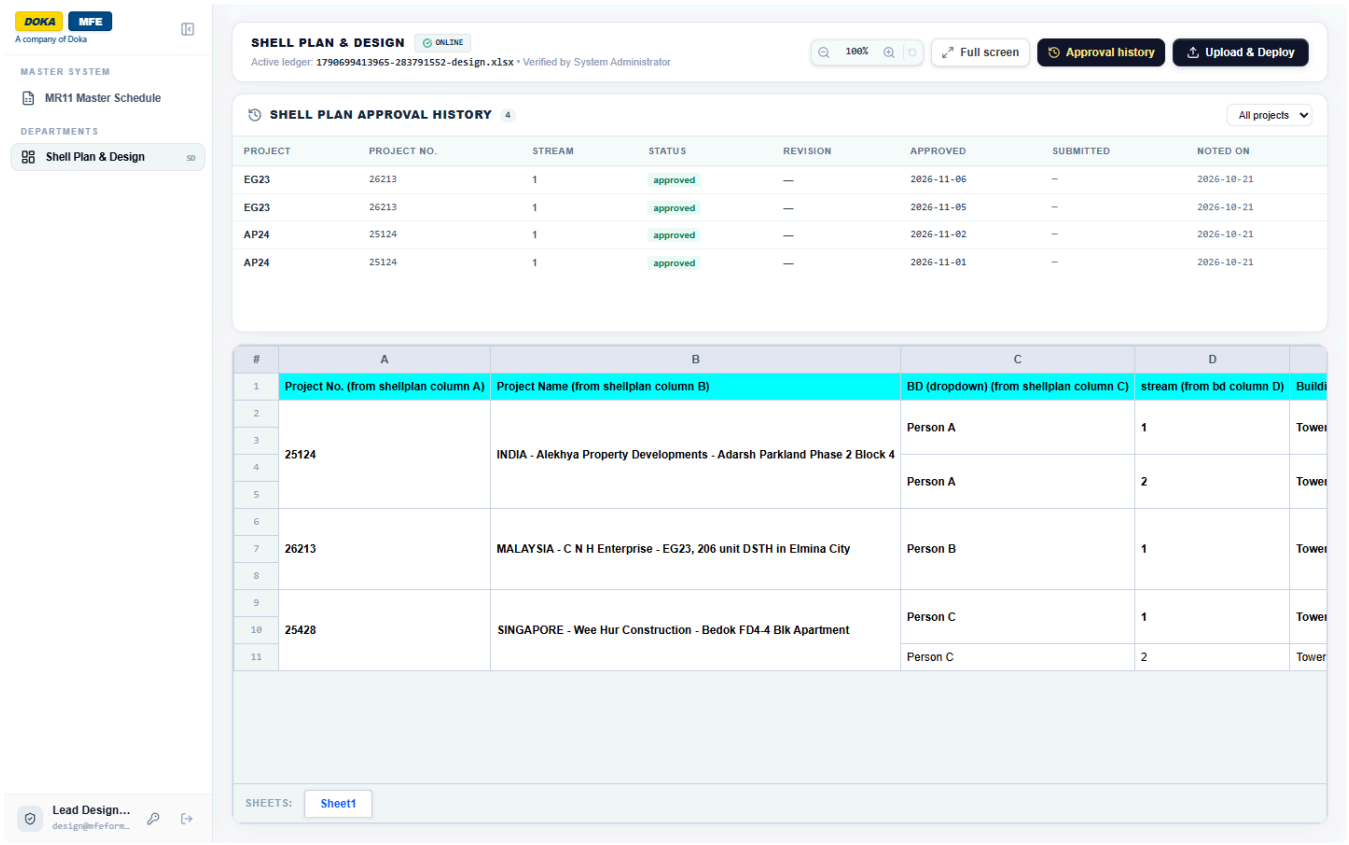


Figure 5 — Shell Plan & Design: the approval history above the combined workbook

4.2 Planning page

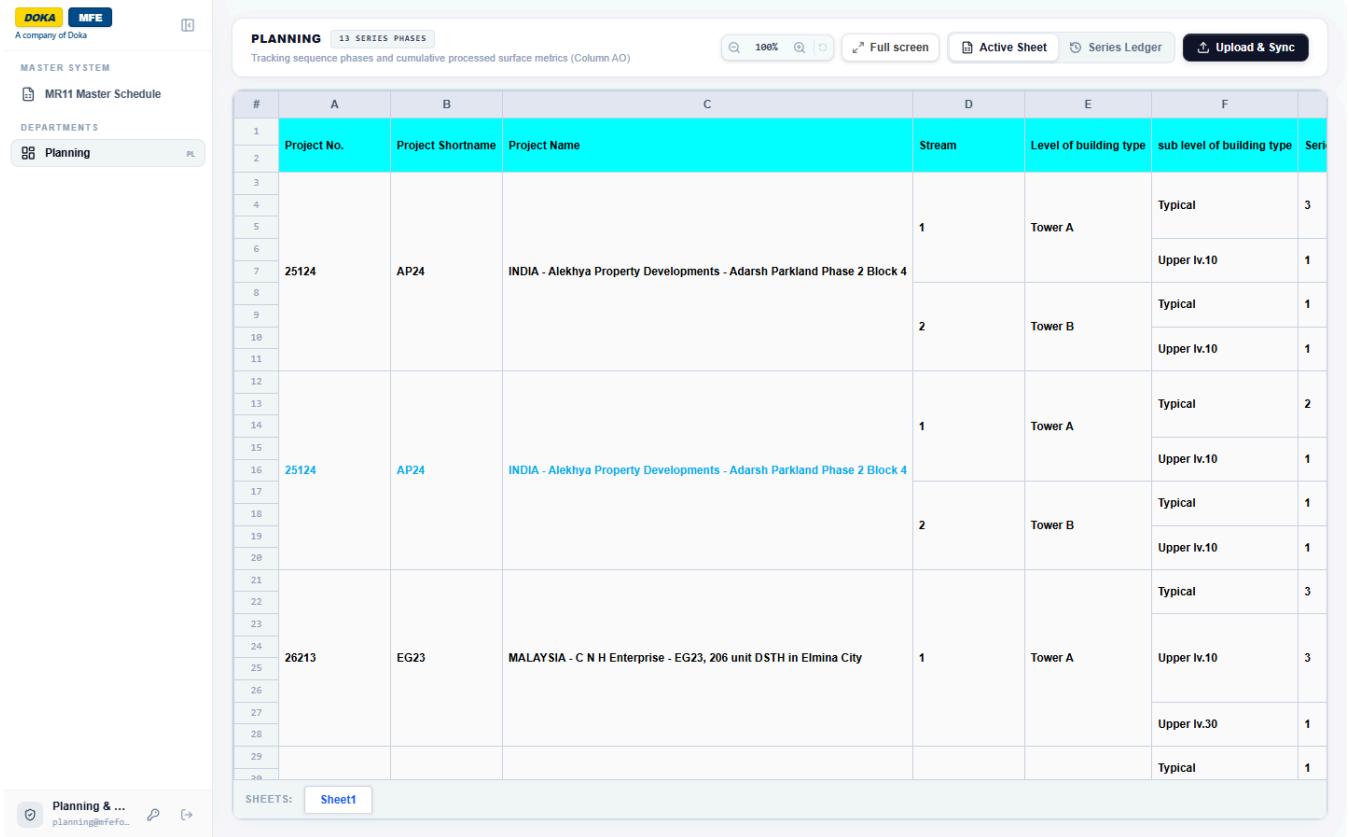


Figure 6 — Planning: the active workbook (Active Sheet)

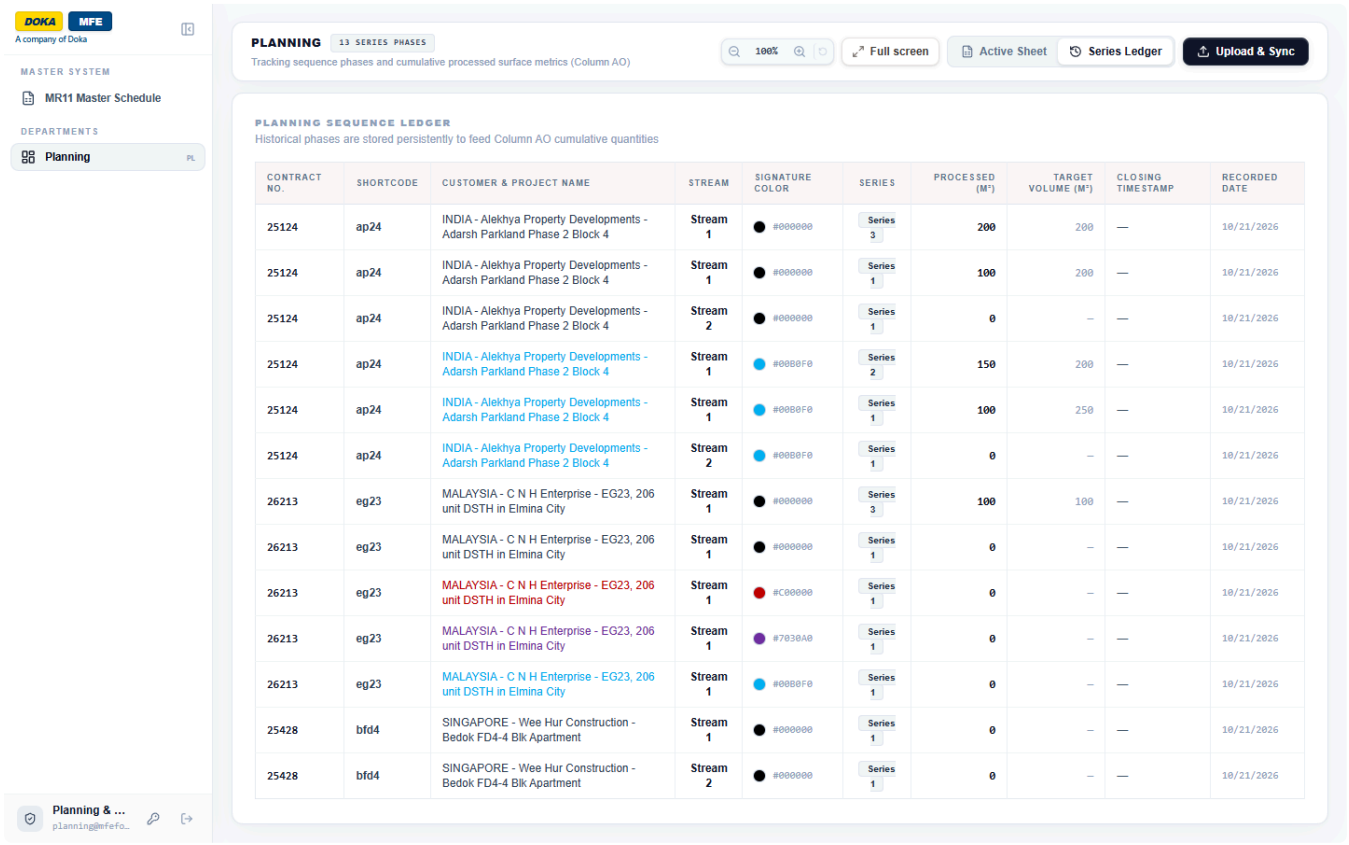


Figure 7 — Planning: the Series Ledger with processed and target m² per series

4.3 Production page

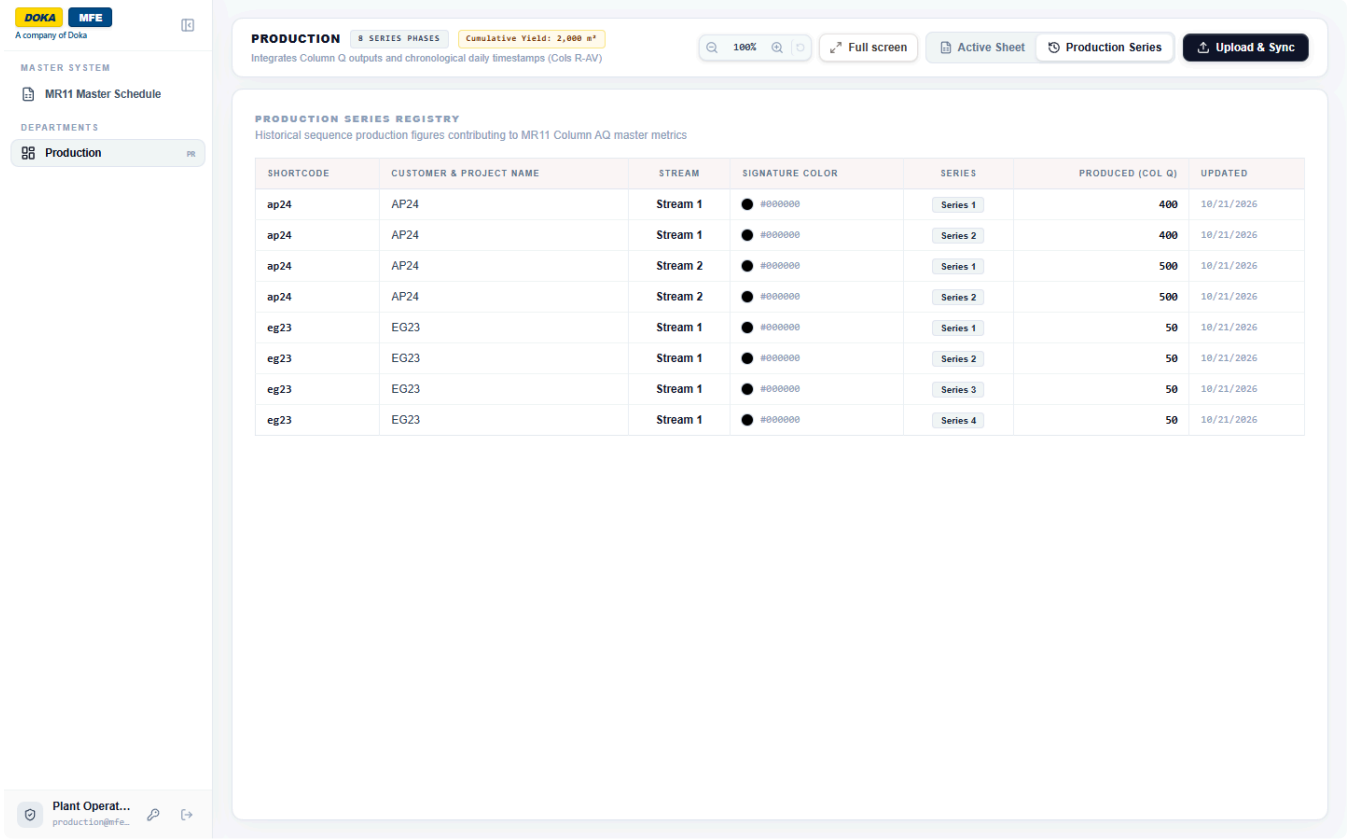


Figure 8 — Production: the Production Series list with produced m² per series

4.4 Dispatch page

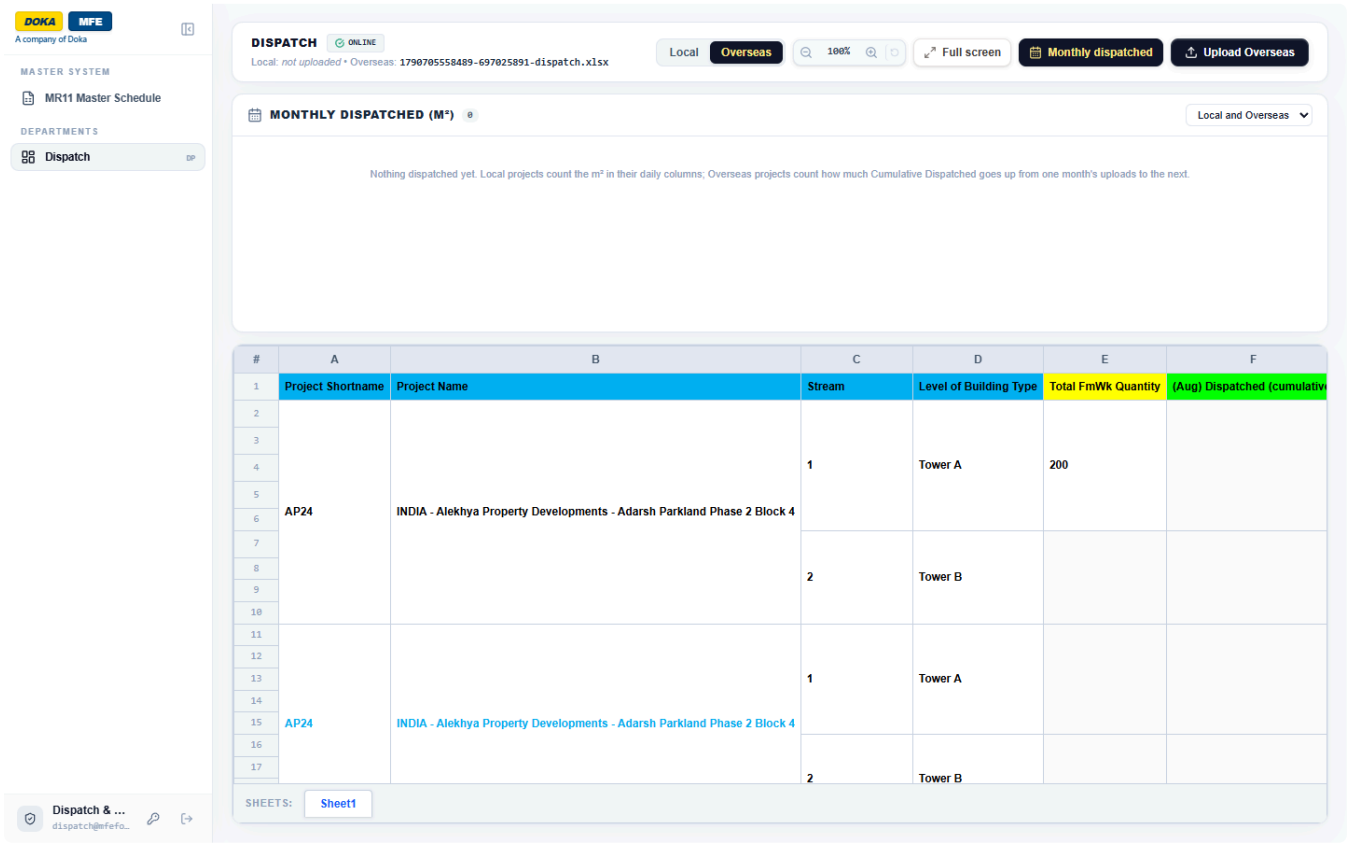


Figure 9 — Dispatch: the Overseas file selected, with the Monthly dispatched panel above it (empty in the sample data)

5. MR11 Master Schedule

The MR11 page (**MR11 Master Operations Ledger**) shows one row per BD row, with every department's columns side by side.

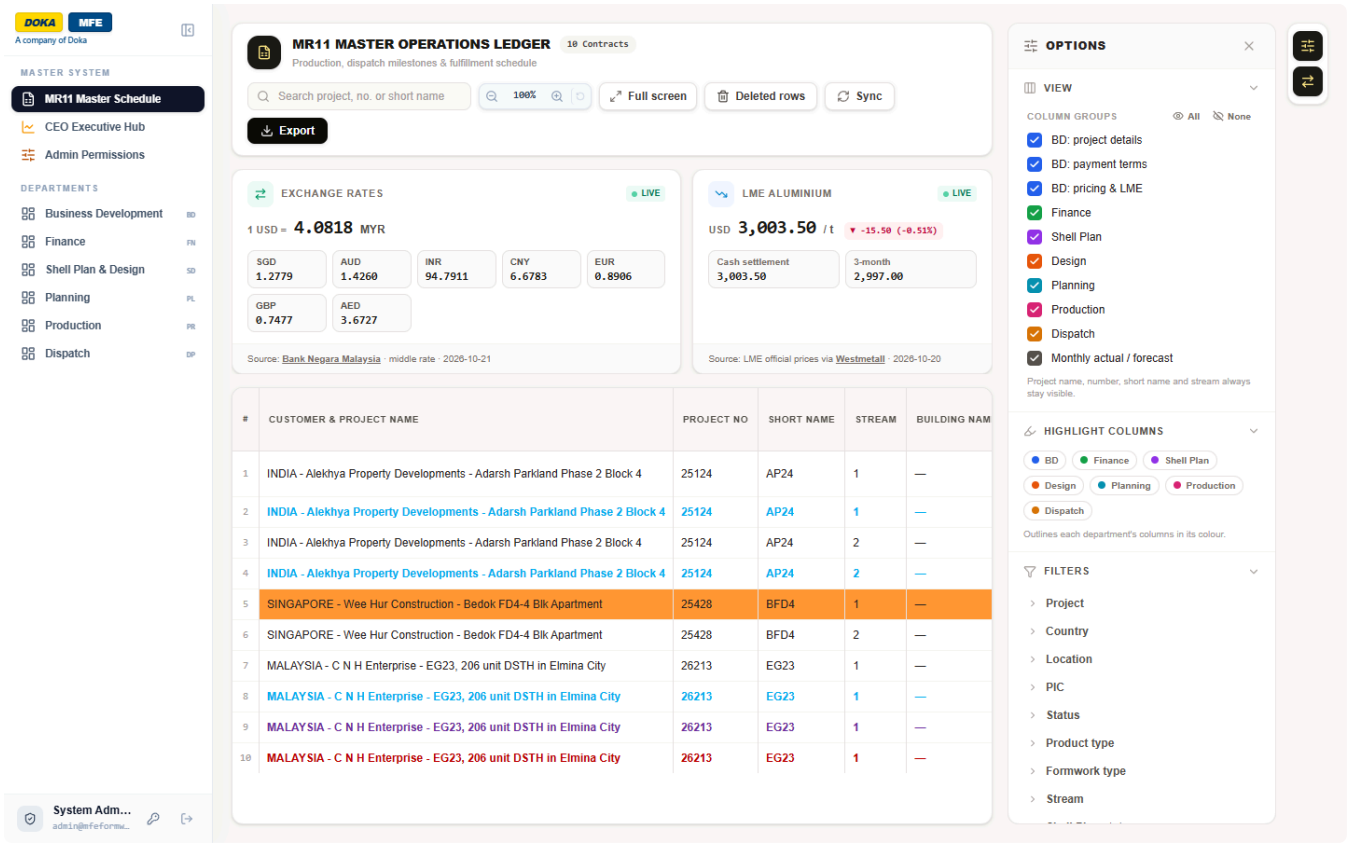


Figure 10 — The MR11 Master Schedule with the exchange-rate and LME cards and the Options panel

Top bar

Control	What it does
Search	Finds rows by project name, number or short name
Zoom	Shrinks or enlarges the table from 20% to 135%
Full screen	Shows the table on the whole screen
Deleted rows (administrators)	Lists rows removed from the MR11, with **Restore** for each
Sync	Rebuilds the MR11 from every department's latest workbook
Export	Downloads the MR11 as an Excel file with colours, merged cells and the two-row header

Market cards above the table show today's exchange rates (1 USD in MYR and other currencies) and the LME aluminium cash and 3-month prices, each with its source and a LIVE badge. "Unavailable right now" means the source could not be reached; the last known value is used.

Options panel (right side)

- The two icons at the far right show or hide the Options panel and the market cards.
- **View → Column groups** — show or hide groups: BD project details, payment terms, pricing & LME, Finance, Shell Plan, Design, Planning, Production, Dispatch, Monthly actual / forecast. Project name, number, short name and stream always stay.
- **Highlight columns** — outlines each department's columns in its colour. Department users see their own columns highlighted.
- **Filters** — tick values to narrow rows: Project, Country, Location, PIC, Status, Product type, Formwork type, Stream, Shell Plan status, Design status, Payment status, LME type, Dispatch stage. Each value shows how many rows have it. **Clear all filters** resets them.

The page remembers zoom, filters, shown groups and the panel on your computer.

Reading the MR11

What you see	Meaning
Row font and fill colour	Taken from the BD row
Merged Shell Plan and Design cells	Rows of the same project and stream with the same fill colour share one design status
Completion date colours	Dark green = completed and passed; yellow = completed, date still ahead; red = not completed
"-" in Production and Dispatch	A Re-Design Only (blue font) row that stops at Planning
ETD/ATD	Overseas: latest estimated and actual departure dates with m². Local: "Delivered:" dates
Month columns	Ended months = actual m² dispatched (ACTUAL); current and later months = forecast (F'CAST)
Processed / Produced / Dispatch Date	The date the total last changed, or the latest day with output
Selling Price, LME Adjusted, Final Selling Price	Recalculated with today's exchange rates and LME price every time the page opens

Deleting and restoring a row (administrators)

1. Choose delete on the row. A box asks "Delete this row from MR11?" and names the row.
2. Click **Delete row**. The MR11 rebuilds without it.
3. To bring it back, open **Deleted rows** and click **Restore** on that row.

6. CEO Executive Hub

The **CEO Executive Intelligence Overview** gives a management view of the latest MR11.

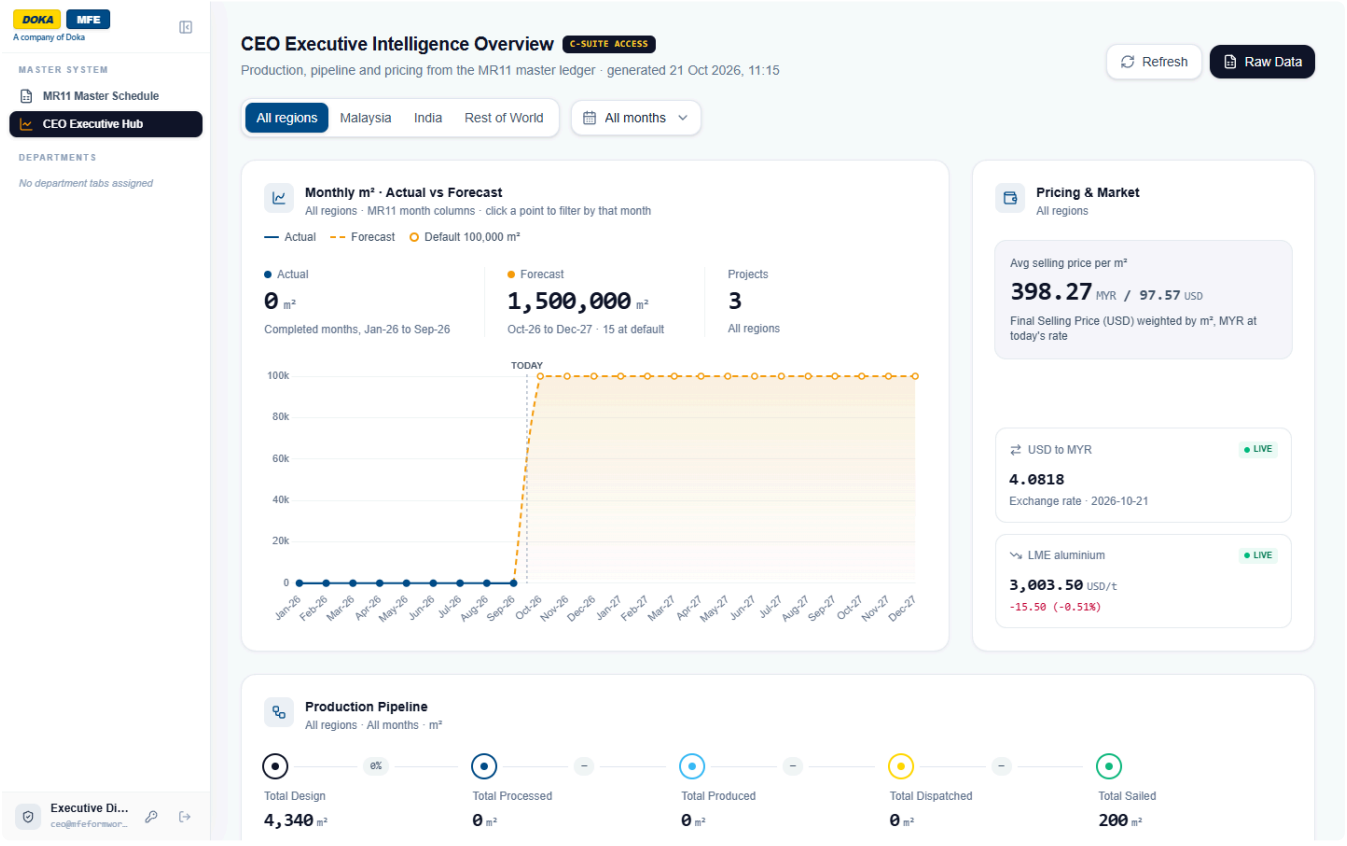


Figure 11 — The CEO Executive Hub: monthly actual against forecast, pricing and market, and the production pipeline

- **Region filter** — All regions, Malaysia, India or Rest of World.
- **Month filter** — All months, or one month to see its pipeline. Clicking a point on the chart also picks that month.
- **Monthly m² · Actual vs Forecast** — actual (solid) against forecast (dashed), with a "Today" line. Months with no forecast use the default of 100,000 m².
- **Pricing & Market** — average selling price per m² (Final Selling Price weighted by m², MYR at today's rate), USD to MYR and the LME aluminium price.
- **Production Pipeline** — Total Design, Total Processed, Total Produced, Total Dispatched and Total Sailed (m²); for one month, the BD Forecast, Design, Processed, Produced and Dispatched, with Re-Design Only rows shown apart.
- **Raw Data** — the underlying MR11 rows.

If "MR11 data could not be loaded" appears, click **Refresh**; if it persists, use **Sync** on the MR11 page.

7. Admin Permissions (administrators)

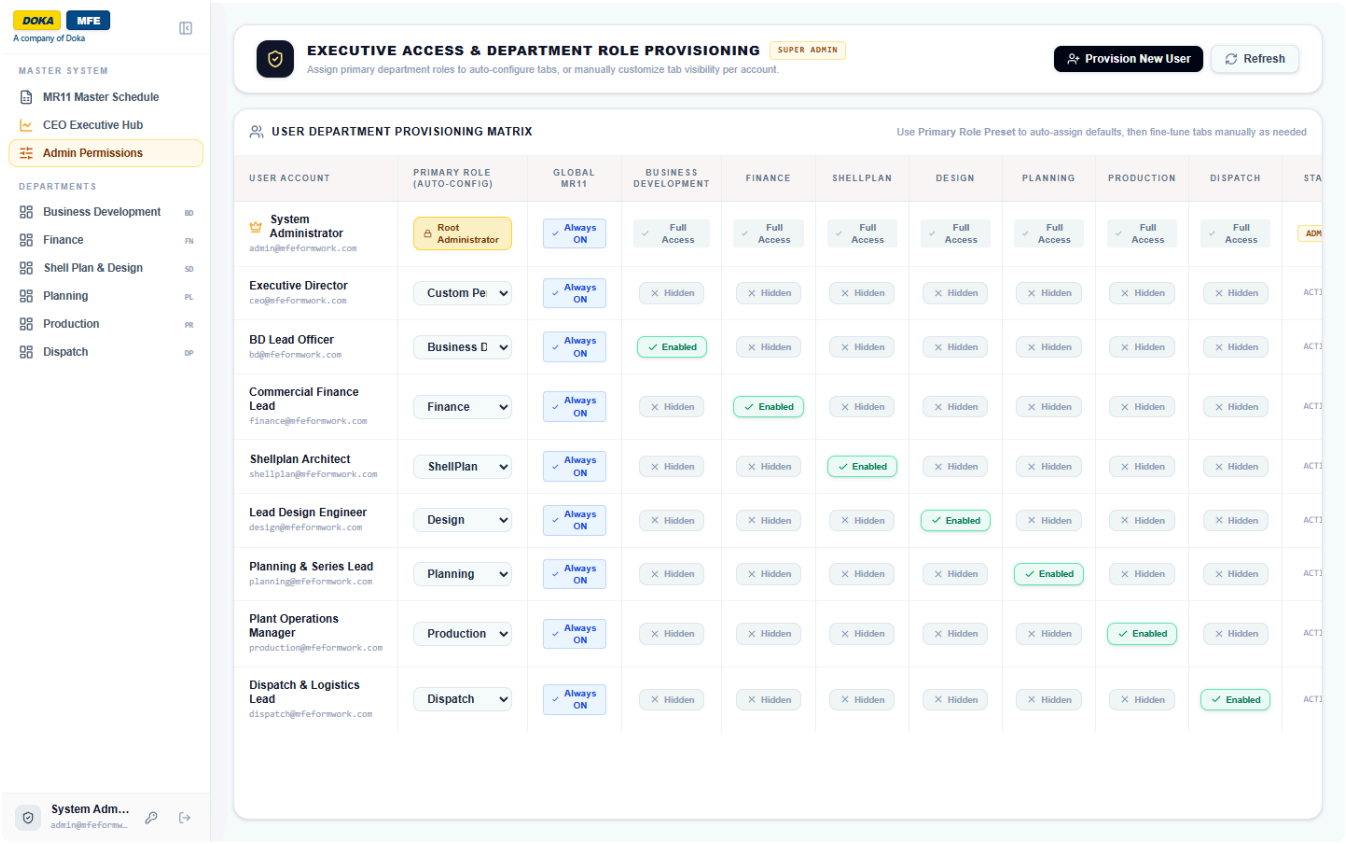


Figure 12 — Admin Permissions: each user's primary role and the departments they can open

Create a user

1. Open **Admin Permissions** and click **Provision New User**.
2. Enter full name, corporate email and a starting password.
3. Pick a **Primary Role Preset** (System Administrator, a department, or Custom Permissions) and save.
4. Give the user their email and starting password, and ask them to change it at first sign-in.

Change a user's access — in the matrix, pick a new primary role, or switch department access between Hidden and Enabled one by one. Changes save at once and apply fully when the user next signs in.

Delete a user — click **Delete User Account** and confirm; this cannot be undone. The root administrator is marked "Protected System Account" and cannot be deleted.

The CEO role cannot be given from Admin Permissions in this release; ask IT support to add it.

8. Troubleshooting and help

Problem	What to do
A column in the MR11 is empty after upload	Check the header name in your workbook matches the usual one, and that the project's short name and stream match BD
Your rows do not line up with BD rows	Check font and fill colours match BD's block colours
Prices look wrong	Check the market cards: if a source is unavailable, the last known rate is used
You cannot see a page you need	Ask the administrator for the role, then sign out and in again
Anything else	Contact support with a screenshot, the time (Malaysia time) and the file you uploaded

9. Glossary

Term	Meaning
MR11	The master schedule that tracks every project from contract to dispatch
Stream	A sub-package of a project (Stream 1, 2, 3 …)
Series	A batch of formwork processed (Planning) or fabricated (Production)
Block	Rows sharing a fill colour, which departments use to group a project's parts
LME	London Metal Exchange aluminium price used in pricing
ETD / ATD	Estimated / actual time of departure of a shipment
m²	Square metres of formwork