


Blower Motor Speed Control

 [Ford Ecat Electronic Parts Catalog](#)

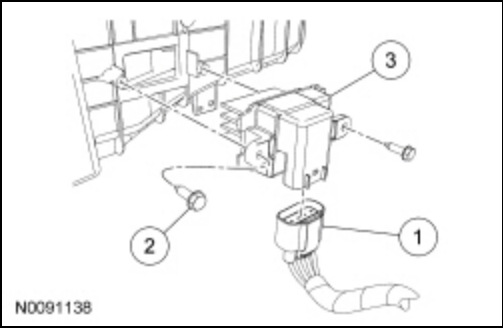

Item	Part Number	Description
1	—	Blower motor speed control electrical connector (part of 18B518)
2	W701696 W701696	Blower motor speed control screw (2 required)
3	19E624 19E624	Blower motor speed control

Removal and Installation

1. Disconnect the blower motor speed control electrical connector.
2. Remove the 2 blower motor speed control screws.
3. Remove the blower motor speed control.
4. To install, reverse the removal procedure.