


Clutch and Clutch Field Coil

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)


 ST2946-A	Holding Tool, A/C Clutch 412-150
 ST2382-A	Remover, Compressor Pulley 412-001 (T71P-19703-B)

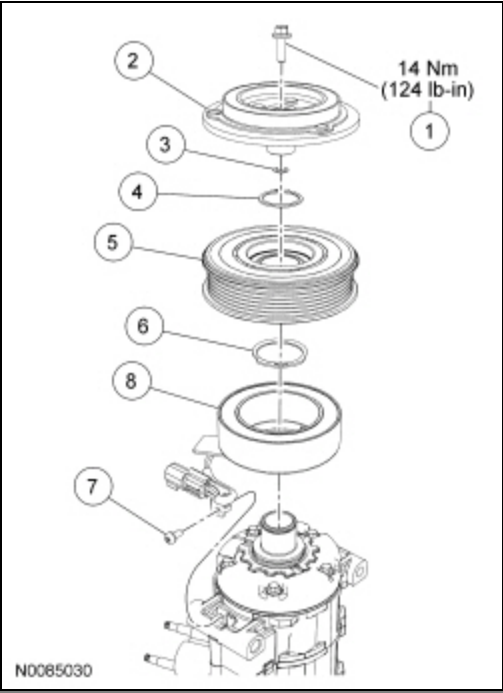

Item	Part Number	Description
1	W711887 W711887	A/C clutch disc and hub bolt
2	19D786 19D786	A/C clutch disc and hub
3	19N689 19N689	A/C clutch hub disc and hub spacer
4	N805338 N805338	A/C compressor pulley snap ring
5	19D784 19D784	A/C compressor pulley
6	W711883 W711883	A/C clutch field coil snap ring
7	W710797 W710797	A/C clutch field coil electrical connector screw
8	19D798 19D798	A/C clutch field coil

Removal


1. Remove the A/C compressor. For additional information, refer to Air Conditioning (A/C) Compressor in this section.
2. Remove the A/C clutch disc and hub.
 1. Using the A/C Clutch Holding Tool, hold the A/C clutch disc and hub.
 2. Remove the A/C clutch disc and hub bolt.

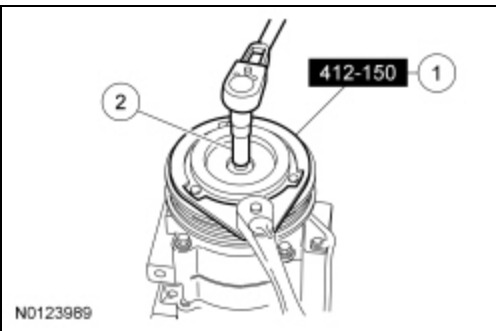

3. Remove the A/C clutch disc and hub.
4. Remove the A/C compressor pulley snap ring.
5. **NOTICE: Do not use air tools. Damage to the Air Conditioning (A/C) clutch pulley or A/C compressor may result.**

Using the Compressor Pulley Remover, remove the A/C compressor pulley.

1. Install the Compressor Pulley Remover.
2. Remove the A/C compressor pulley.

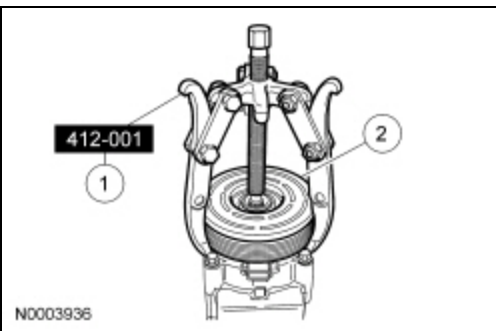

6. Remove the A/C clutch field coil snap ring.
7. Remove the A/C clutch field coil electrical connector screw.
8. Remove the A/C clutch field coil.

Installation

NOTE: A new A/C compressor may come equipped with a clutch and pulley. If not, the A/C clutch components should be reused unless obvious signs of damage are found. If excessive grooving is found on the friction surface, a new A/C clutch disc and hub and a new A/C compressor pulley must be installed together. Otherwise, each component can be installed individually where needed.

1. Visually inspect the A/C clutch disc and hub, A/C compressor pulley and A/C clutch field coil for damage.
 - Inspect for physical damage, including cracked or melted components or discoloration due to excessive heat.
 - Inspect for excessive wear, including grooving in the A/C clutch disc and hub or A/C compressor pulley that is more than fingernail depth.
 - Inspect for roughness in the A/C compressor pulley bearing.
2. Clean the A/C clutch field coil and pulley mounting surfaces.

3. Install the A/C clutch field coil.

4. Install the A/C clutch field coil electrical connector screw.

5. Install the A/C clutch field coil snap ring.

6. **NOTE:** *The A/C compressor pulley is a tight fit on the A/C compressor. It must be correctly aligned during installation.*

Install the A/C compressor pulley.

7. Install the A/C compressor pulley snap ring with the bevel side out.


8. Place one nominal thickness A/C clutch disc and hub spacer inside the clutch hub spline opening.

9. Install the A/C clutch disc and hub.


10. Using the A/C Clutch Holding Tool, install the A/C compressor clutch disc and hub bolt.

1. Hold the A/C clutch disc and hub with the A/C Clutch Holding Tool.

2. Tighten the bolt to 14 Nm (124 lb-in).

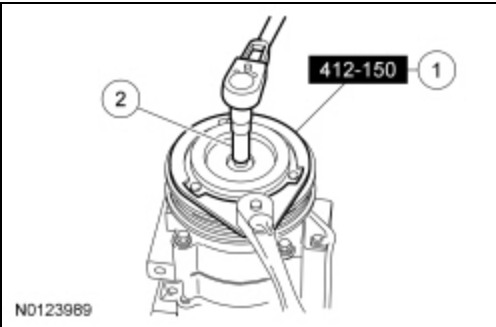

11. Measure and adjust the clutch air gap at 3 spaces by removing or adding A/C clutch disc and hub spacers.

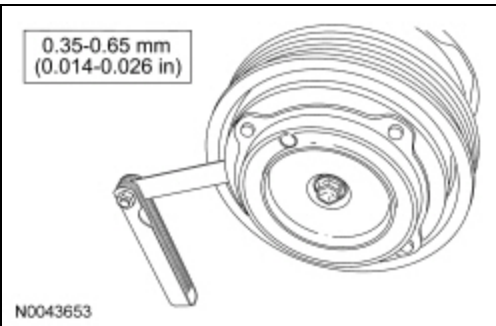

12. Install the A/C compressor. For additional information, refer to Air Conditioning (A/C) Compressor in this section.