


Heater Core

 [Ford Ecat Electronic Parts Catalog](#)

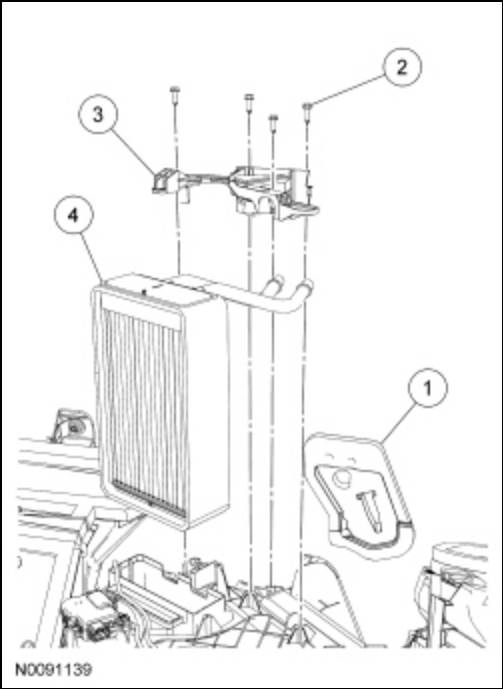

Item	Part Number	Description
1	19C593 19C593	Heater tube dash panel seal
2	W701696 W701696	Heater core bracket screw (4 required)
3	18B689 18B689	Heater core bracket
4	18476 18476	Heater core

Removal and Installation

NOTE: If a heater core leak is suspected, the heater core must be leak tested before it is removed from the vehicle.

1. Remove the heater core and evaporator core housing. For additional information, refer to Heater Core And Evaporator Core Housing in this section.
2. Remove the heater hose quick disconnect clips from the heater core.
3. Remove the heater tube dash panel seal.
4. Remove the 4 heater core bracket screws and the bracket.
5. Remove the heater core.
6. **NOTE:** The heater core seal must be correctly installed to prevent airflow from bypassing the heater core.

To install, reverse the removal procedure.