

Heating Ventilation Air Conditioning (HVAC) Module




Removal and Installation


NOTE: If installing a new HVAC module, the new module must be configured for the vehicle. For additional information, refer to Section 418-01.

With Electronic Automatic Temperature Control or Electronic Manual Temperature Control Remote Mount


1. Remove the upper instrument panel storage tray mat.

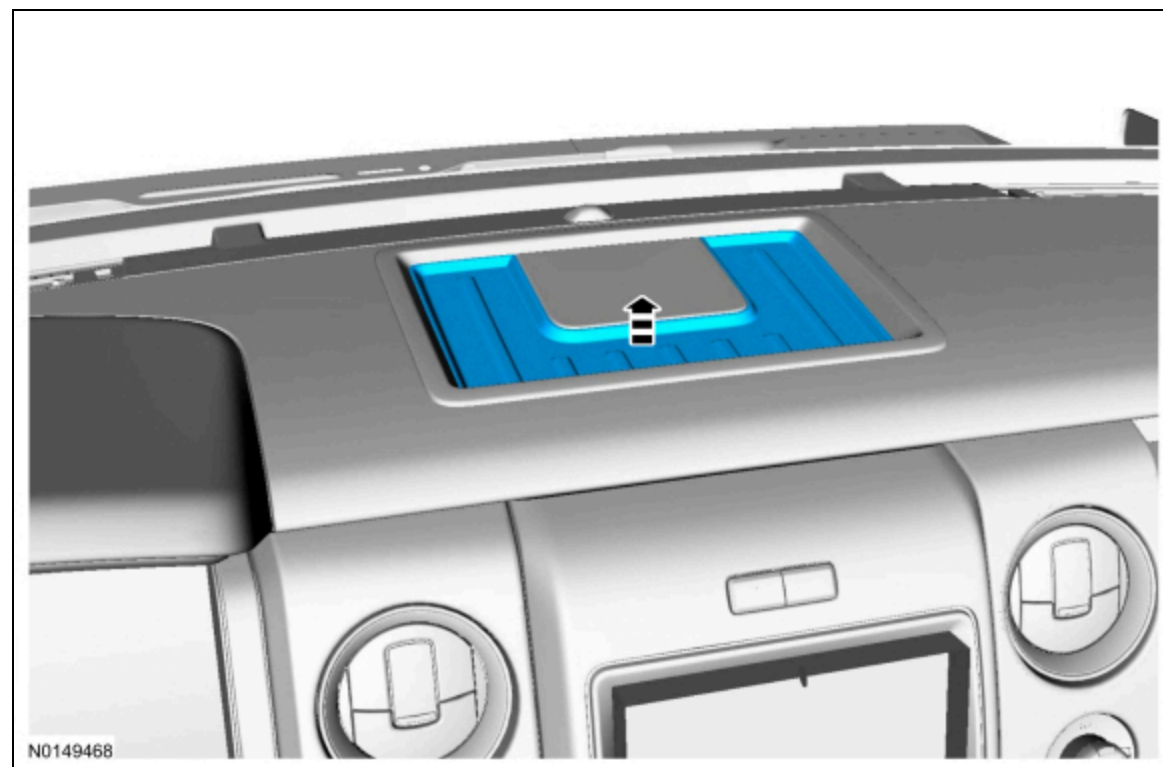

2. Remove the 2 upper instrument panel storage tray screws.

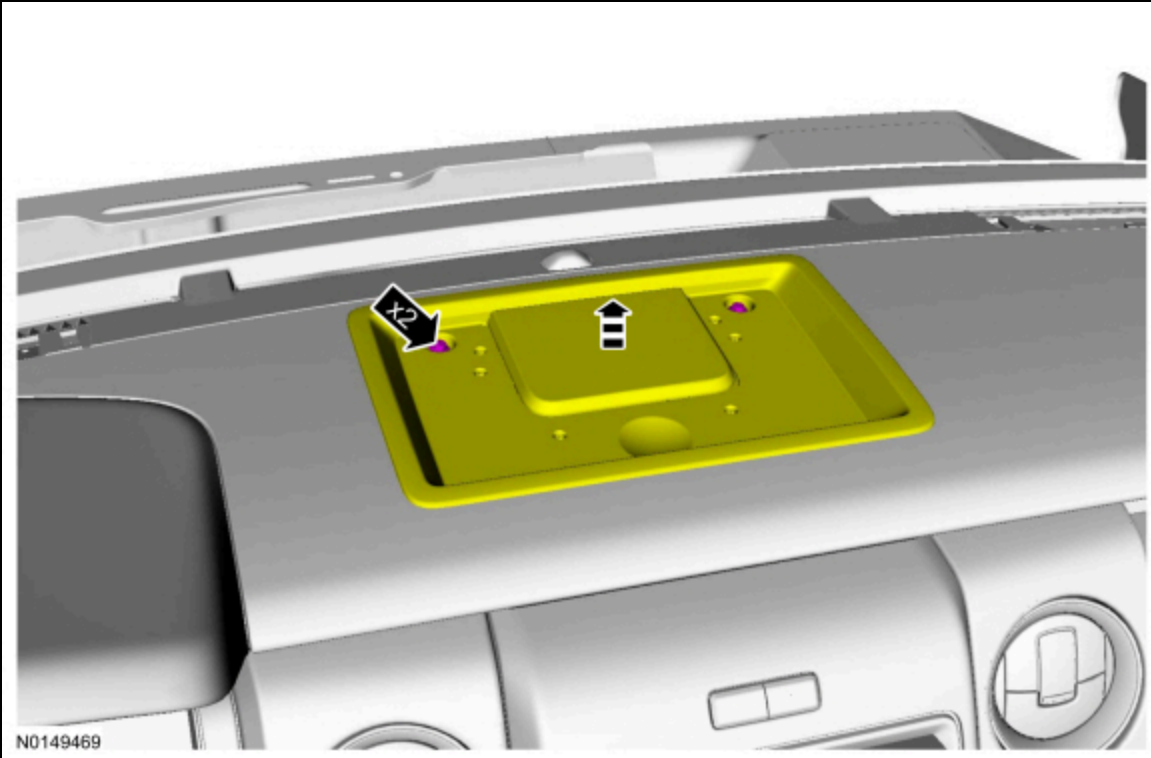


3. Disconnect the speaker electrical connector (if equipped), and remove the upper instrument panel storage tray.

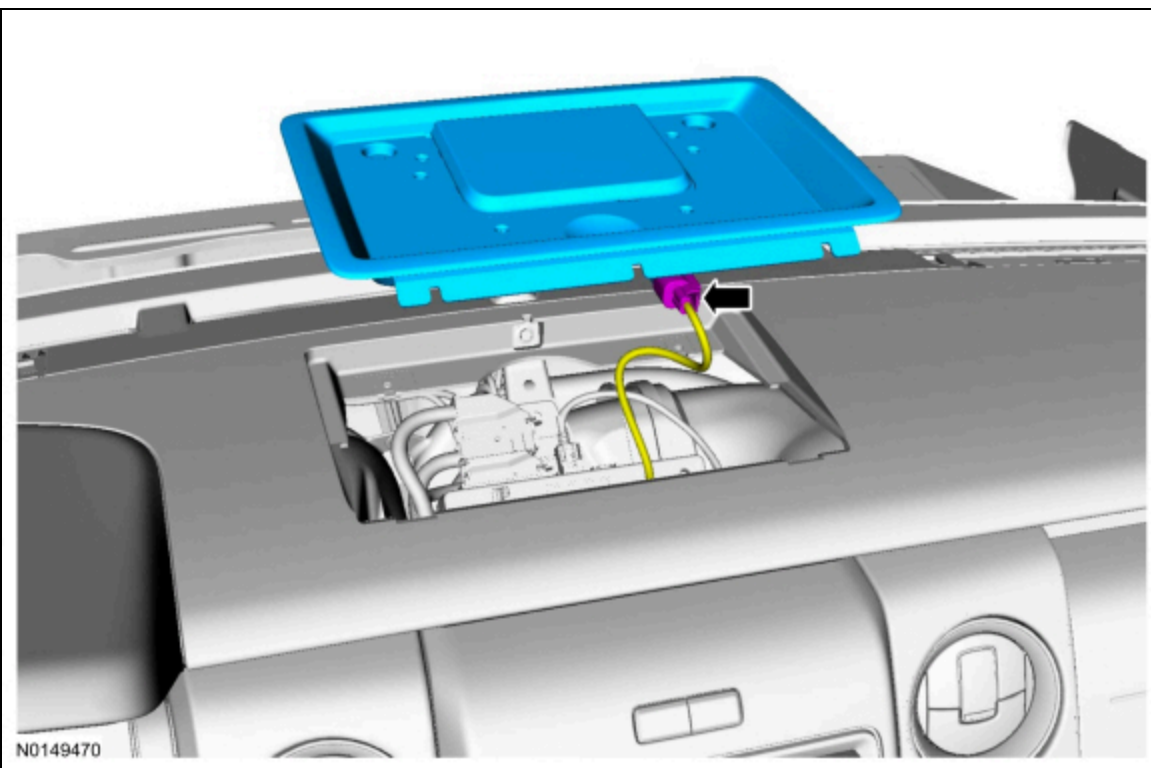


4. Remove the HVAC module.

- Disconnect the HVAC module electrical connectors.
- Remove the 4 HVAC module screws.

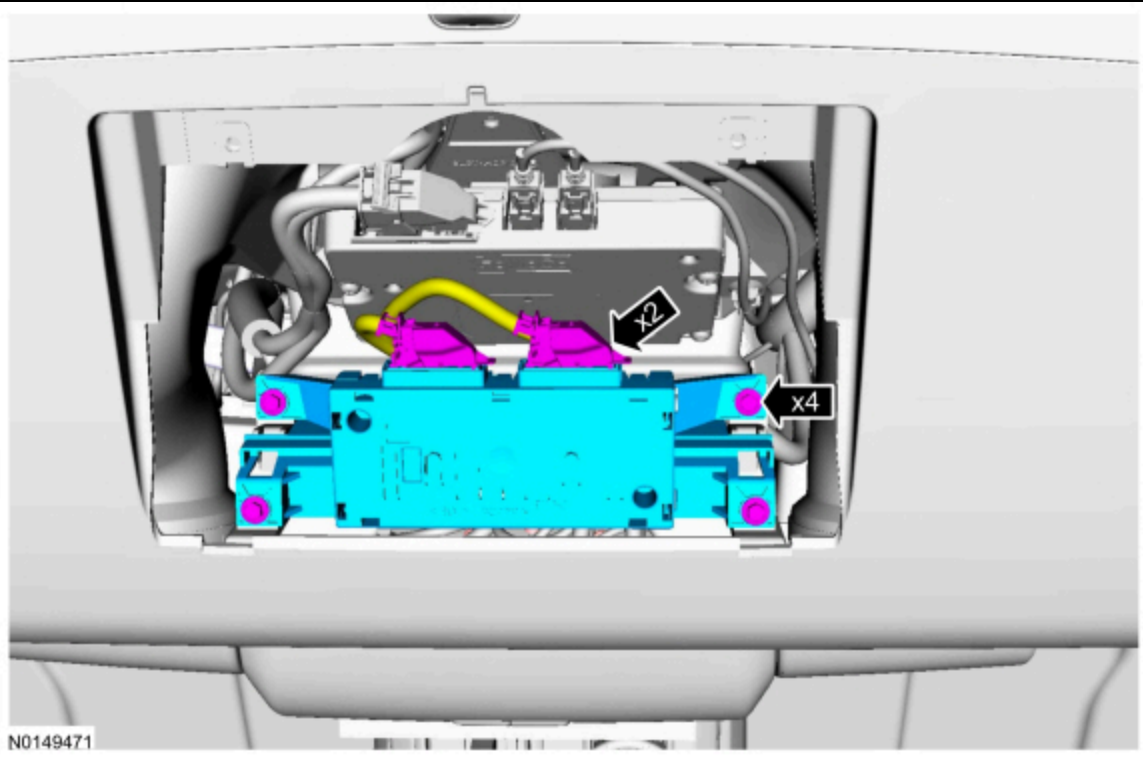

Vehicles with Electronic Manual Temperature Control Base

- 5. Remove the instrument panel finish panel – center, lower. For additional information, refer to Section 501-12.
- 6. Remove the HVAC module.
 - Remove the 4 HVAC module screws.

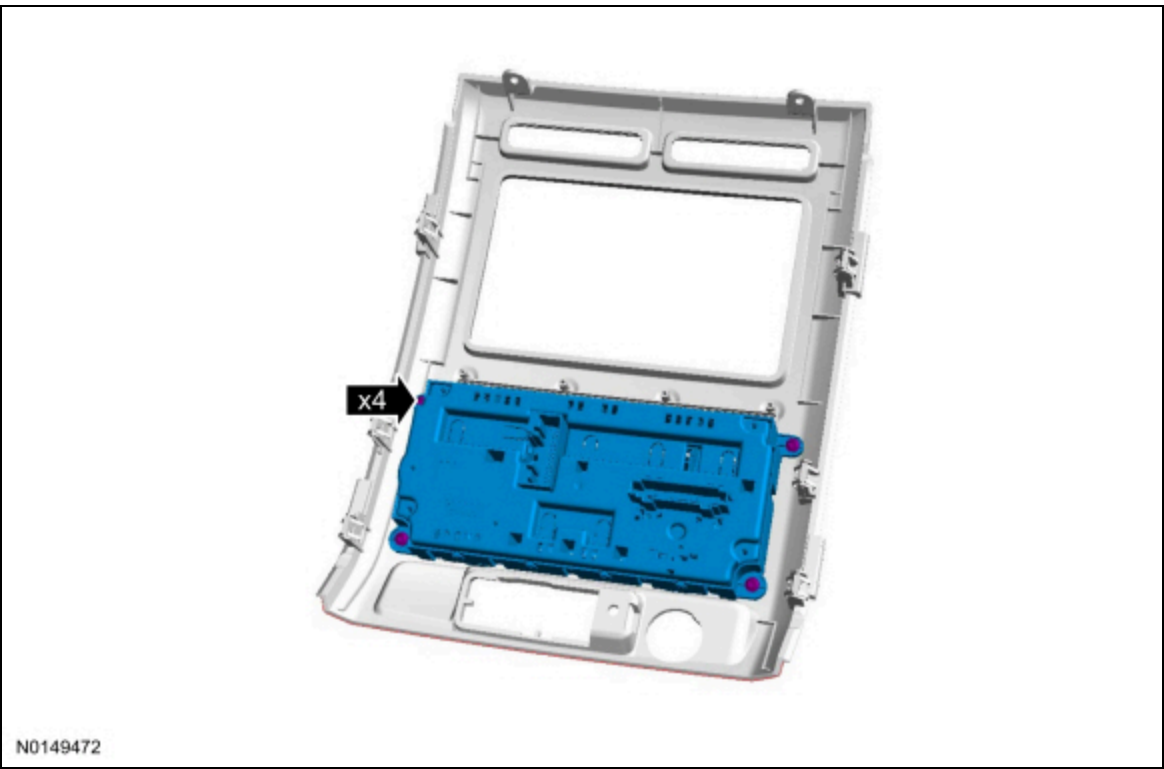

All vehicles

- 7. To install, reverse the removal procedure.