


In-Vehicle Temperature and Humidity Sensor

 [Ford Ecat Electronic Parts Catalog](#)

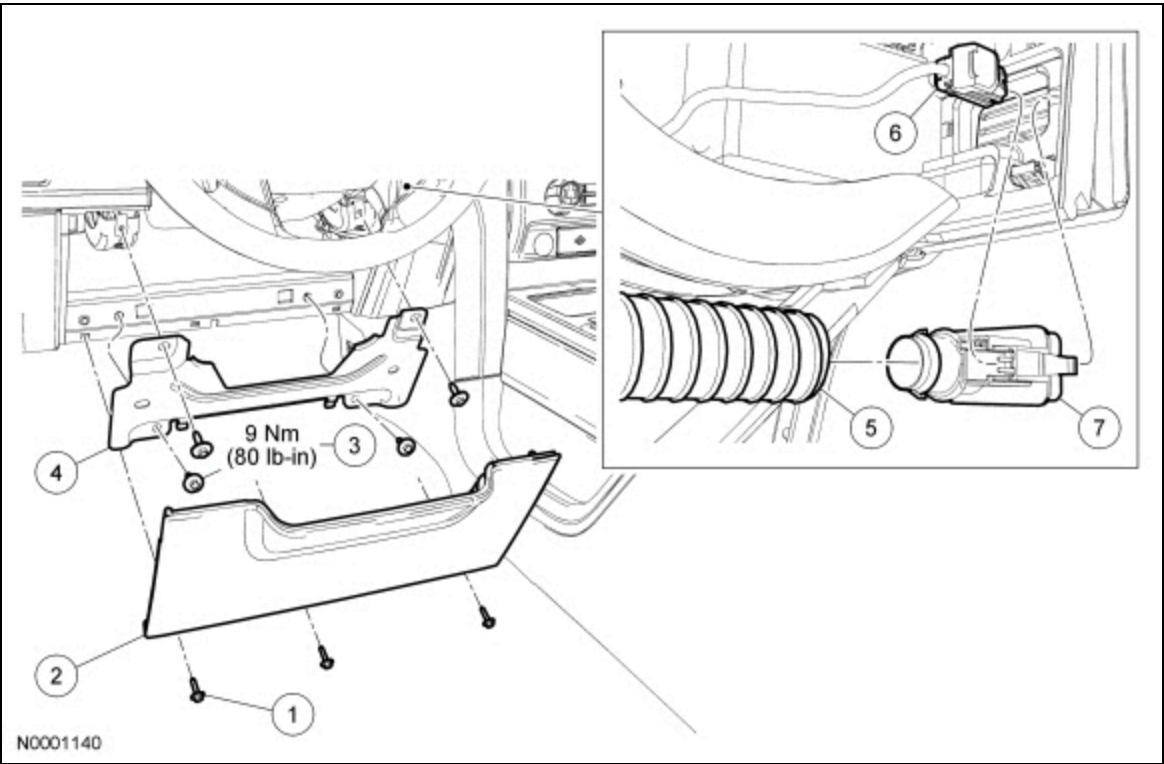

Item	Part Number	Description
1	W707628 W707628	Steering column cover screw (3 required)
2	1504459 1504459	Steering column cover
3	N706599 N706599	Steering column cover reinforcement bolt (4 required)
4	15017A26 15017A26	Steering column cover reinforcement
5	—	In-vehicle temperature and humidity sensor aspirator hose (part of 19C734)
6	14401 14401	In-vehicle temperature and humidity sensor electrical connector
7	19C734 19C734	In-vehicle temperature and humidity sensor

Removal and Installation

1. Remove the 3 steering column cover screws and the steering column cover.
2. Remove the 4 steering column cover reinforcement bolts.
3. Detach the in-vehicle temperature and humidity sensor aspirator hose.
4. Disconnect the in-vehicle temperature and humidity sensor electrical connector.
5. Remove the in-vehicle temperature and humidity sensor.

6. To install, reverse the removal procedure.