


Mode Door Actuator — Air Inlet Door

 [Ford Ecat Electronic Parts Catalog](#)

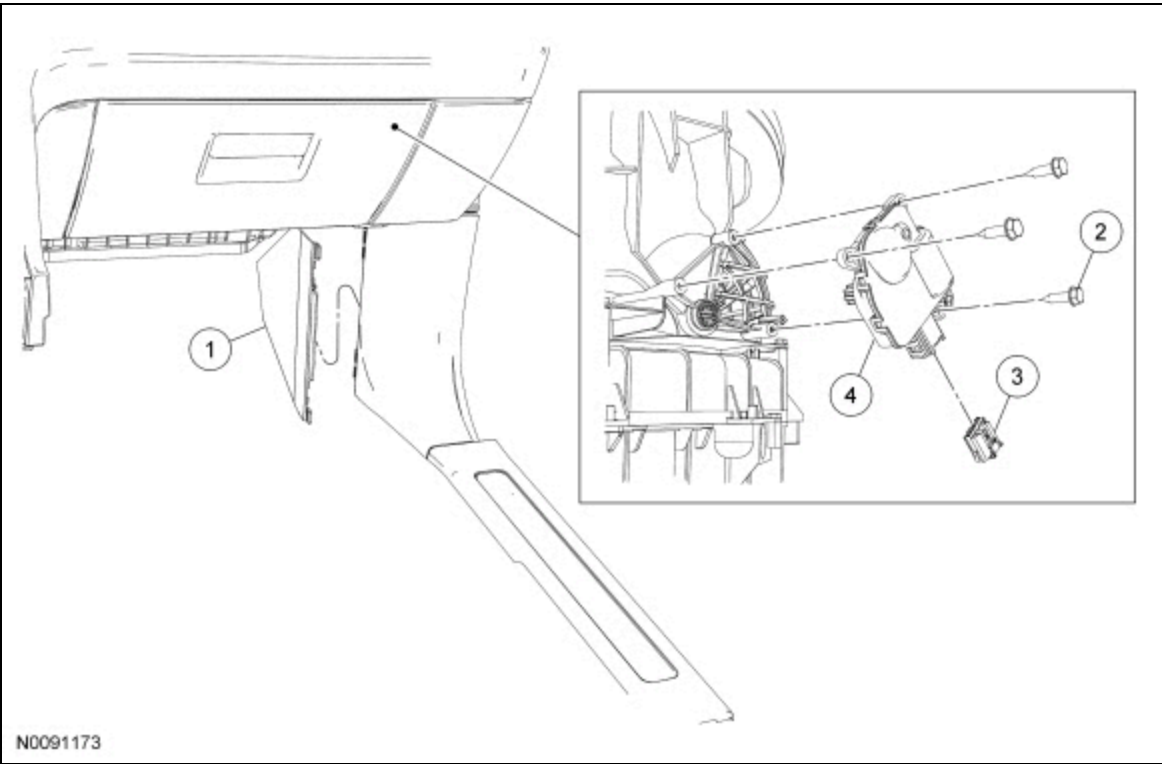

Item	Part Number	Description
1	023A98 023A98	Junction box cover
2	W701696 W701696	Air inlet mode door actuator screw (3 required)
3	—	Air inlet mode door actuator electrical connector (part of 18B574)
4	19E616 19E616	Air inlet mode door actuator

Removal and Installation

1. Remove the junction box cover.
2. Disconnect the air inlet mode door actuator electrical connector.
3. Remove the 3 air inlet mode door actuator screws.
4. Remove the air inlet door mode door actuator.
5. To install, reverse the removal procedure.