


Compass Zone Adjustment

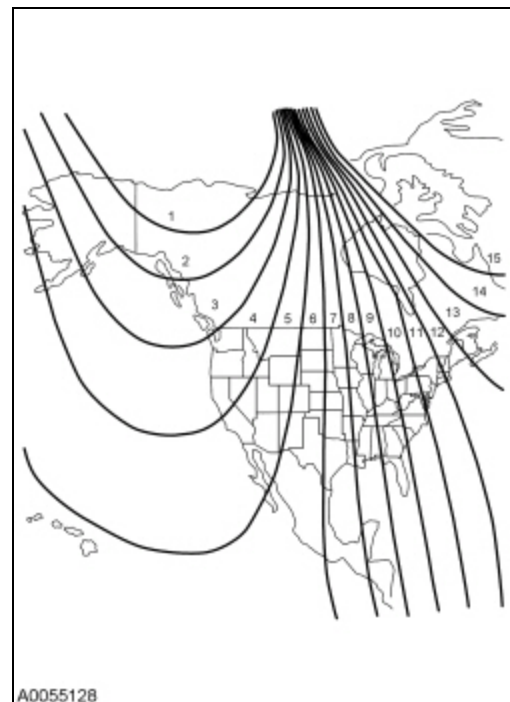

Compass Calibration Zone Map

NOTE: This procedure only applies to vehicles that have a compass zone or compass calibration adjustment menu available. If the compass zone/calibration menu is not available, the compass data is provided by the GPSM and no compass zone or compass calibration is required.



1. Refer to the compass calibration zone map to select the correct compass zone setting for the geographic location of the vehicle.
2. With the ignition in the ON position, press and hold the Front Controls Interface Module (FCIM) 7 and 9 buttons (for approximately 5 seconds) until the compass display shows the current zone setting (ZONE XX). Release the 7 and 9 buttons.
3. Before the zone setting mode turns off (within 5 seconds), momentarily press and release the 7 and 9 buttons to increase the zone increment by one. Set the zone display number to match the vehicle geographical location on the compass calibration zone map.
4. Release the 7 and 9 buttons for 5 seconds to exit the zone setting mode.