


Generator — 3.5L GTDI

 [Ford Ecat Electronic Parts Catalog](#)

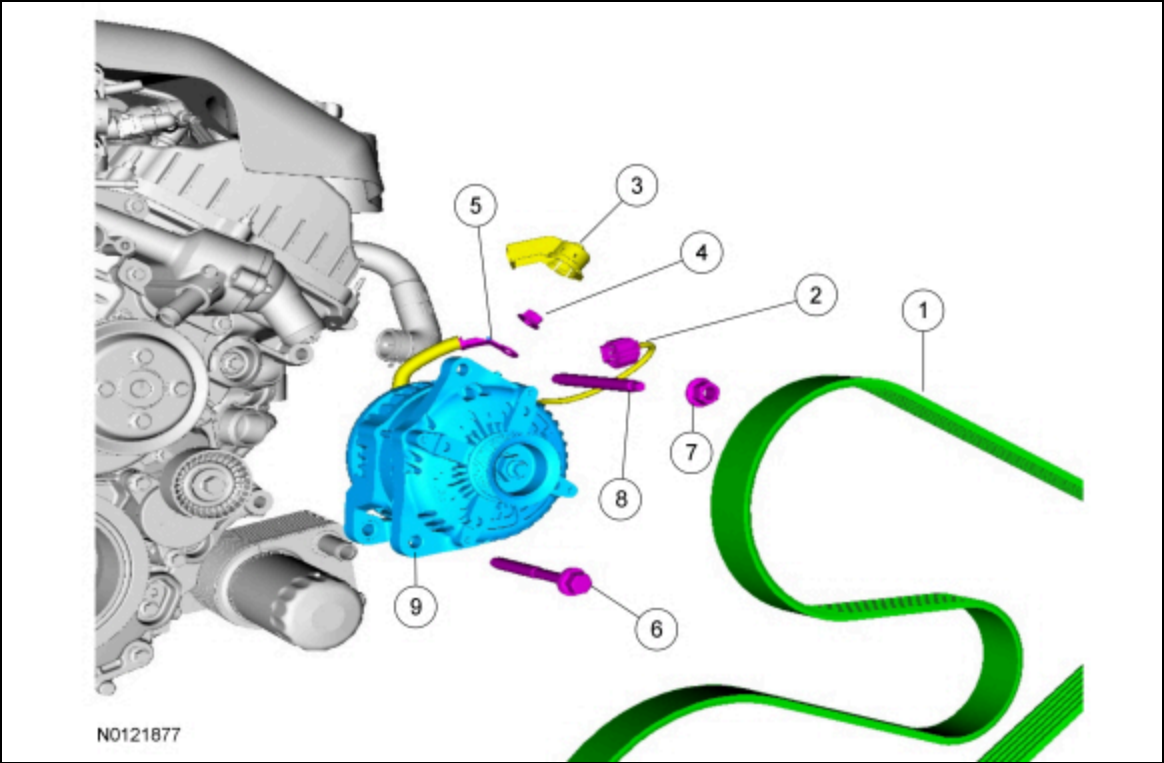

Item	Part Number	Description
1	8620 8620	Accessory drive belt
2	—	Generator electrical connector (part of 14300)
3	—	Generator B+ protective boot (part of 14300)
4	W711953 W711953	Generator B+ terminal nut - 17 Nm (150 lb-in)
5	—	Generator B+ terminal (part of 14300)
6	W715092 W715092	Generator bolt (lower) - 47 Nm (35 lb-ft)
7	W520414 W520414	Generator stud nut - 47 Nm (35 lb-ft)
8	W715087 W715087	Generator stud - 8 Nm (71 lb-in)
9	10346 10346	Generator

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Disconnect the battery. For additional information, refer to Section 414-01.
3. Remove the Air Cleaner (ACL) outlet pipe, LH ACL pipe-to-turbocharger pipe and the LH turbocharger-to-Charge Air Cooler (CAC) pipe. For additional information, refer to Intake Air System Components - Exploded View in Section 303-12.
4. Rotate the accessory drive belt tensioner and remove the accessory drive belt from the generator.

5. Remove the LH A/C and CAC pipe bracket. For additional information, refer to Intake Air System Components - Exploded View in Section 303-12.

6. Position the generator B+ protective boot aside, remove the B+ terminal nut and position the B+ terminal aside.

- To install, tighten to 17 Nm (150 lb-in).

7. Disconnect the generator electrical connector and position the harness aside.

8. Remove the lower generator bolt.

- To install, tighten to 47 Nm (35 lb-ft).

9. Remove the generator stud and the generator.

- To install, tighten to 8 Nm (71 lb-in).

10. To install, reverse the removal procedure.