


Generator — 3.7L

 [Ford Ecat Electronic Parts Catalog](#)

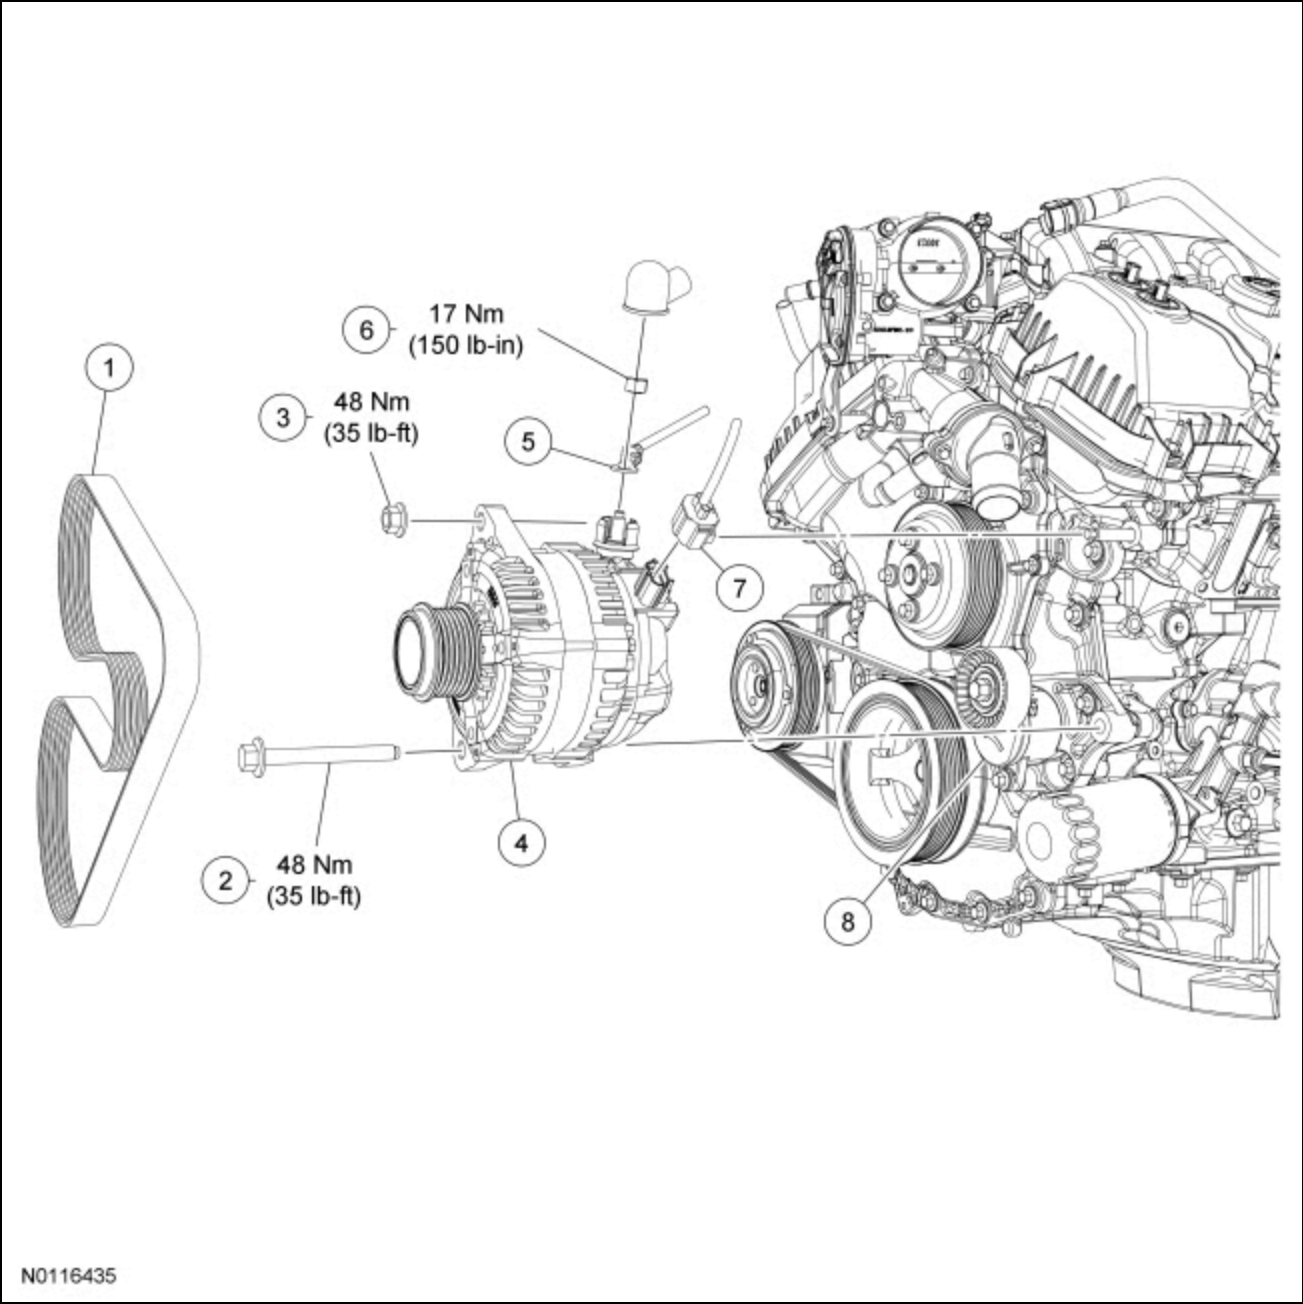

Item	Part Number	Description
1	8620 8620	Front End Accessory Drive (FEAD) belt
2	W715092 W715092	Generator bolt
3	W520414 W520414	Generator stud nut
4	10346 10346	Generator
5	—	Generator B+ terminal (part of 14B060)
6	W711953 W711953	Generator B+ terminal nut
7	—	Generator electrical connector (part of 14B060)

8	6B2096B209	FEAD belt tensioner
---	------------	---------------------

Removal and Installation

1. Disconnect the battery. For additional information, refer to Section 414-01.
2. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to Section 303-12.
3. Rotate the Front End Accessory Drive (FEAD) belt tensioner counterclockwise and position the FEAD belt aside.
4. Disconnect the generator electrical connector.
5. Position the generator B+ protective boot aside, remove the B+ nut and position the B+ terminal aside.
 - To install, tighten to 17 Nm (150 lb-in).
6. Remove the generator stud nut.
 - To install, tighten to 48 Nm (35 lb-ft).
7. Remove the generator bolt and the generator.
 - To install, tighten to 48 Nm (35 lb-ft).
8. To install, reverse the removal procedure.