


Generator — 5.0L


 [Ford Ecat Electronic Parts Catalog](#)

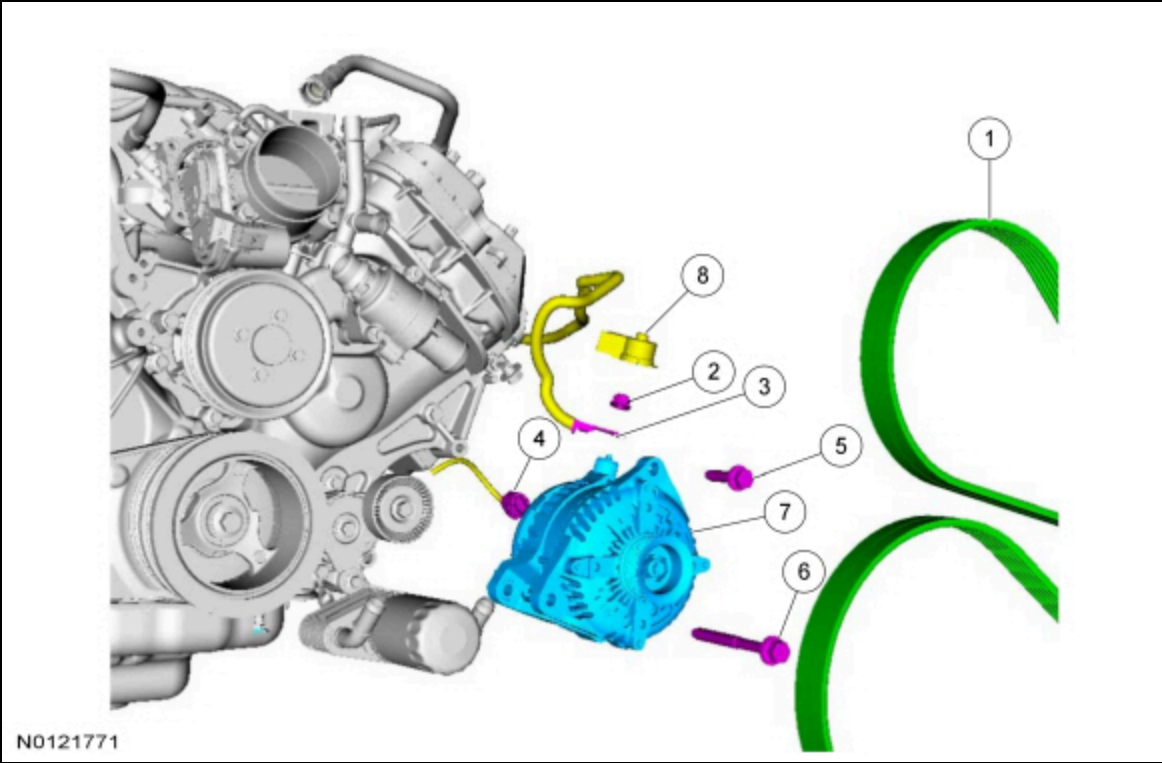

Item	Part Number	Description
1	8620 8620	Accessory drive belt
2	W711953 W711953	Generator B+ terminal nut - 17 Nm (150 lb-in)
3	—	Generator B+ terminal (part of 14B060)
4	—	Generator electrical connector (part of 14B060)
5	W715094 W715094	Upper generator bolt - 48 Nm (35 lb-ft)
6	W715092 W715092	Lower generator bolt - 48 Nm (35 lb-ft)
7	10346 10346	Generator
8	—	Generator B+ protective boot (part of 14B060)

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Disconnect the battery. For additional information, refer to Section 414-01.
3. Rotate the accessory drive belt tensioner counter counterclockwise and position the accessory drive belt aside.
4. Remove the bolt and the accessory drive belt tensioner.
 - To install, tighten to 48 Nm (35 lb-ft).

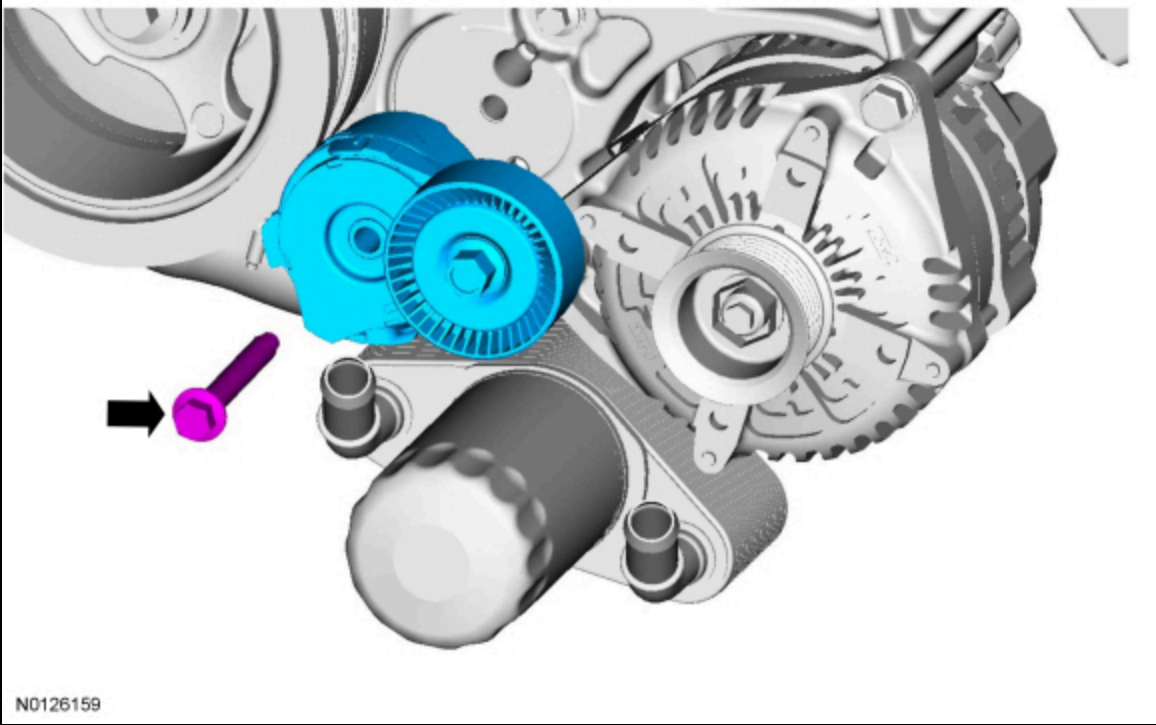

5. Position the generator B+ protective boot aside, remove the B+ terminal nut and position the B+ terminal aside.
 - To install, tighten to 17 Nm (150 lb-in).
6. Disconnect the generator electrical connector.
7. Remove the upper generator bolt.
 - To install, tighten to 48 Nm (35 lb-ft).
8. Remove the lower generator bolt and the generator.
 - To install, tighten to 48 Nm (35 lb-ft).
9. To install, reverse the removal procedure.