


Generator — 6.2L

 [Ford Ecat Electronic Parts Catalog](#)

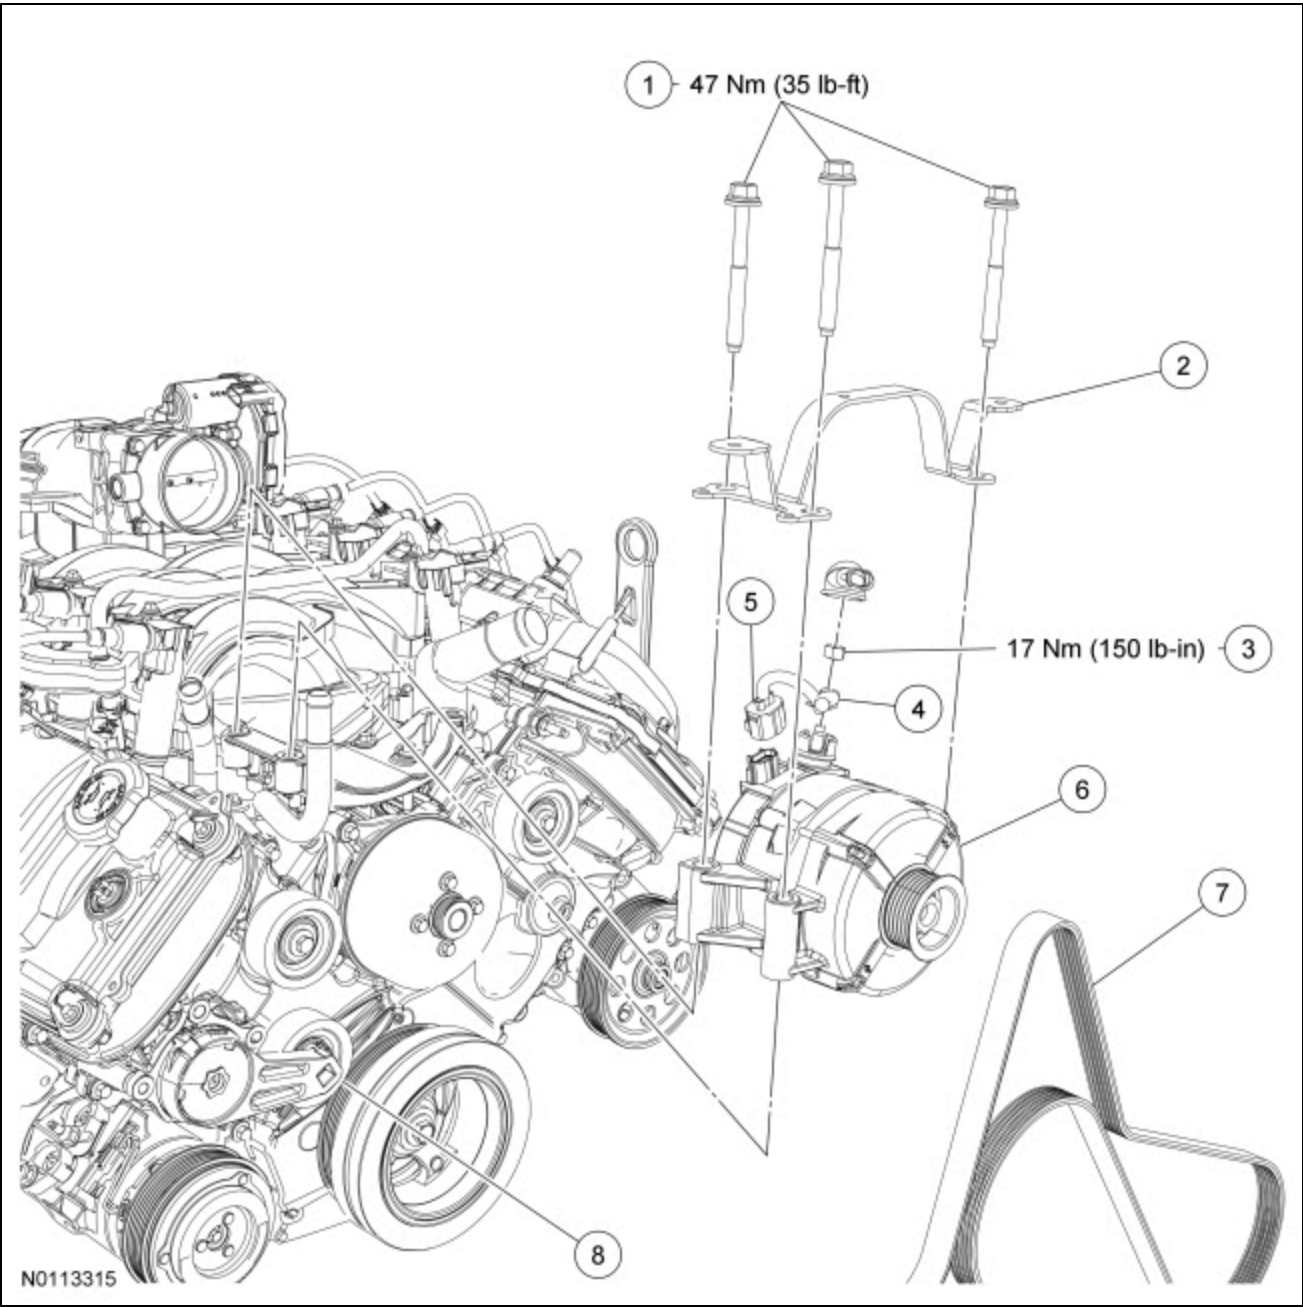

Item	Part Number	Description
1	W715092 W715092	Generator bolt (3 required)
2	10153 10153	Generator bracket
3	W711953 W711953	Generator B+ terminal nut
4	—	Generator B+ terminal (part of 14305)
5	—	Generator electrical connector (part of 14305)
6	10300 10300	Generator
7	8620 8620	Accessory drive belt

8	6B2096B209	Accessory drive belt tensioner
---	------------	--------------------------------

1. Disconnect the battery. For additional information, refer to Section 414-01.
2. Loosen the Air Cleaner (ACL) outlet pipe clamp at the ~~ACL~~ upper tray and remove the ~~ACL~~ outlet pipe and resonator assembly. For additional information, refer to Intake Air System Components - Exploded View in Section 303-12.
3. Rotate the accessory drive belt tensioner clockwise and position the accessory drive belt aside.
4. Disconnect the generator electrical connector.
5. Position the generator B+ protective boot aside, remove the generator B+ terminal nut and position the generator B+ terminal aside.
 - To install, tighten to 17 Nm (150 lb-in).
6. Remove the 3 bolts, generator bracket and the generator.
 - To install, tighten to 47 Nm (35 lb-ft).
7. To install, reverse the removal procedure.