


Battery Cables — 3.5L GTDI, 3.7L




Battery Connections

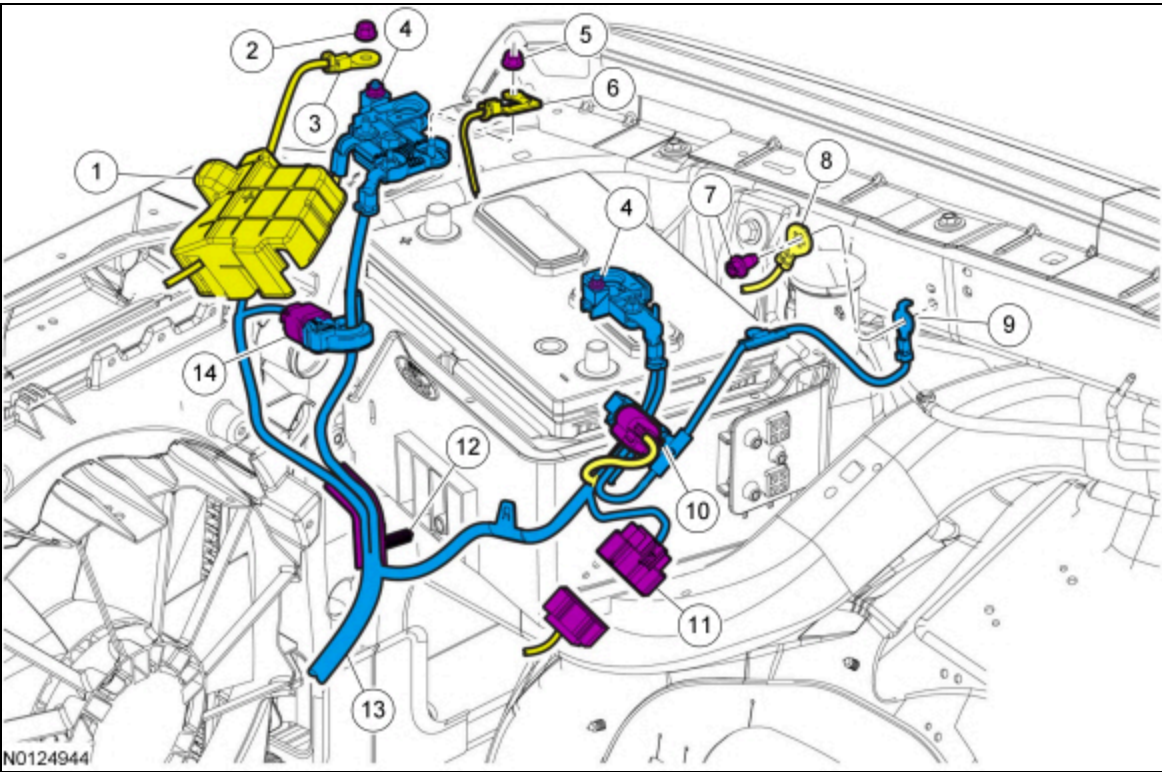

Item	Part Number	Description
1	1427714277	Battery terminal cover
2	W705790W705790	Battery Junction Box (BJB) harness positive terminal nut - 9 Nm (80 lb-in)
3	—	BJB harness positive terminal (part of 12A581)
4	—	Battery cable terminal nut (part of 14300) - 5 Nm (44 lb-in)
5	W705790W705790	Power Steering Control Module (PSCM) harness positive terminal nut - 9 Nm (80 lb-in)
6	—	PSCM harness positive terminal (part of 3F720)
7	W705661W705661	Battery cable body ground terminal bolt - 13 Nm (115 lb-in)
8	—	PSCM harness ground terminal (part of 3F720)
9	—	Battery cable body ground terminal (part of 14300)
10	—	Battery current sensor electrical connector (part of 12A581)
11	—	Battery cable in-line electrical connector (part of 14300)
12	—	Battery cable wire harness retainer (part of 14300)
13	1430014300	Battery cable


14	—	Generator current sensor electrical connector (part of 14300)
----	---	---

Battery Cable Chassis Ground

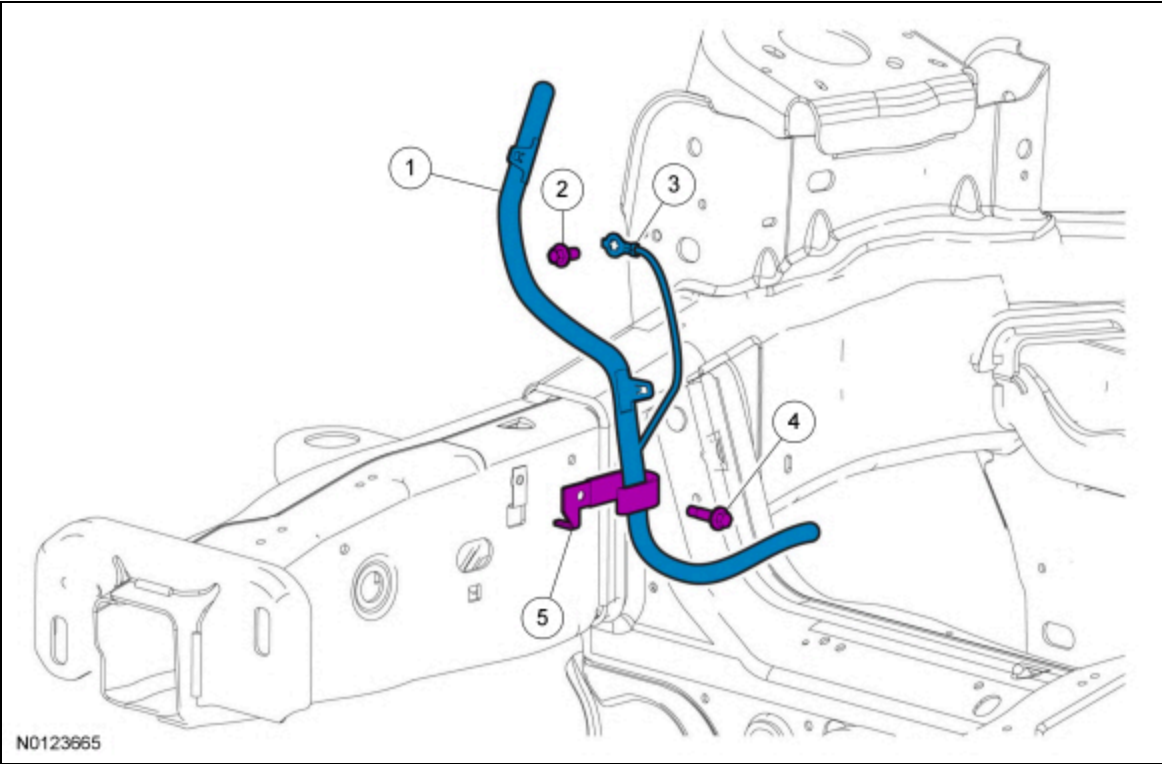

Item	Part Number	Description
1	14300 14300	Battery cable
2	W505261 W505261	Battery cable chassis ground terminal bolt - 20 Nm (177 lb-in)
3	—	Battery cable chassis ground terminal (part of 14300)
4	W506424 W506424	Battery cable harness bracket bolt - 20 Nm (177 lb-in)
5	—	Battery cable harness bracket (part of 14300)


Battery Cable to Generator Connections

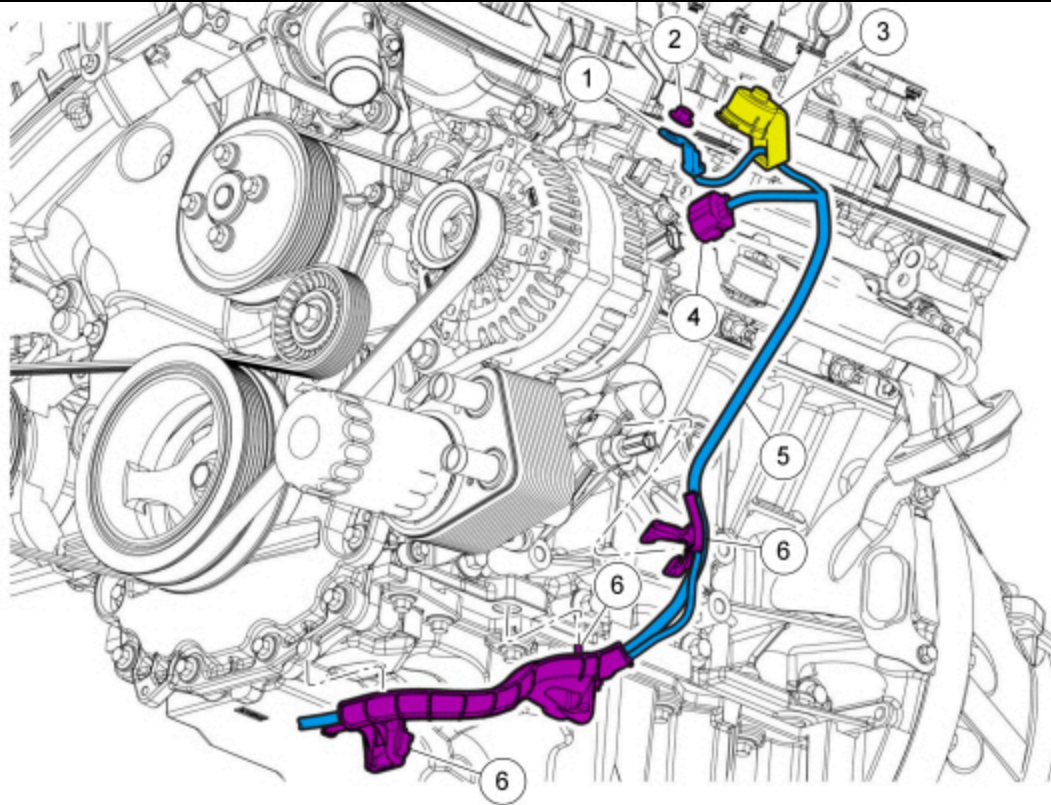

N0123666

Item	Part Number	Description
1	—	Generator B+ cable end (part of 14300)
2	W711953 W711953	Generator B+ cable end nut - 17 Nm (150 lb-in)
3	—	Generator B+ cable end cover (part of 14300)
4	—	Generator electrical connector (part of 14300)
5	14300 14300	Battery cable
6	—	Battery cable wire harness retaining clip (part of 14300) (3 required)

Battery Cable to Starter Motor Connections

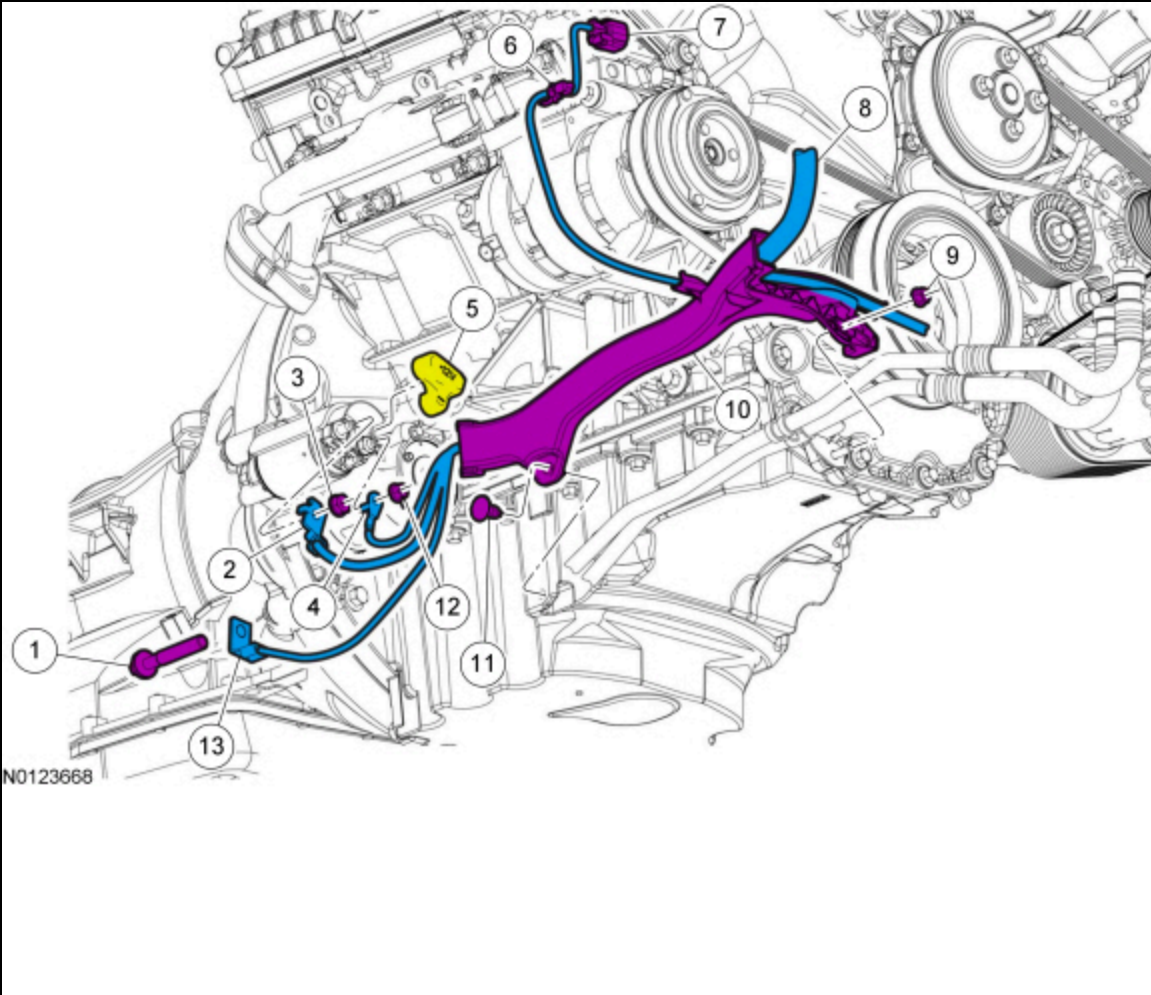

Item	Part Number	Description
1	W714290 W714290	Battery cable engine ground terminal stud bolt - 47 Nm (35 lb-ft)
2	—	Starter solenoid positive cable terminal (part of 14300)
3	W706414 W706414	Starter solenoid positive cable terminal nut - 12 Nm (106 lb-in)
4	—	Starter solenoid wire terminal (part of 14300)
5	11N087 11N087	Starter solenoid terminal cover
6	—	Battery cable wire harness retaining clip (part of 14300)
7	—	A/C compressor electrical connector (part of 14300)
8	14300 14300	Battery cable
9	W520111 W520111	Battery cable shield nut - 12 Nm (106 lb-in)
10	14A099 14A099	Battery cable shield
11	—	Battery cable shield pin-type retainer
12	W705790 W705790	Starter solenoid wire terminal nut - 5 Nm (44 lb-in)
13	—	Battery cable engine ground terminal (part of 14300)

Removal and Installation

All vehicles

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Disconnect the battery. For additional information, refer to Battery Disconnect in this section.


3. Remove the battery cable body ground terminal bolt and position the cable aside.
 - To install, tighten to 13 Nm (115 lb-in).
4. Disconnect the 2 battery cable harness retainers from the battery tray.
5. Disconnect the battery current sensor electrical connector.
6. Remove the Power Steering Control Module (PSCM) harness positive terminal nut and position the cable aside.
 - To install, tighten to 9 Nm (80 lb-in).
7. Remove the Battery Junction Box (BJB) harness positive terminal nut and position the cable aside.
 - To install, tighten to 9 Nm (80 lb-in).
8. Loosen the positive battery cable terminal nut and position the cable aside.
 - To install, tighten to 5 Nm (44 lb-in).
9. Disconnect the battery cable in-line electrical connector.
10. Remove the battery tray. For additional information, refer to Battery Tray in this section.

Vehicles with 3.5L GTDI


11. Remove the LH A/C pipe-to-turbocharger pipe and the LH turbocharger-to-Charge Air Cooler (CAC) pipe. For additional information, refer to Intake Air System Components - Exploded View in Section 303-12.

All vehicles

12. Remove the generator B+ cable end cover.
13. Remove the generator B+ cable end nut and position the cable aside.
 - To install, tighten to 17 Nm (150 lb-in).
14. Disconnect the generator electrical connector.
15. If equipped, turn the 4 quarter-turn retainers and remove the rear splash shield.

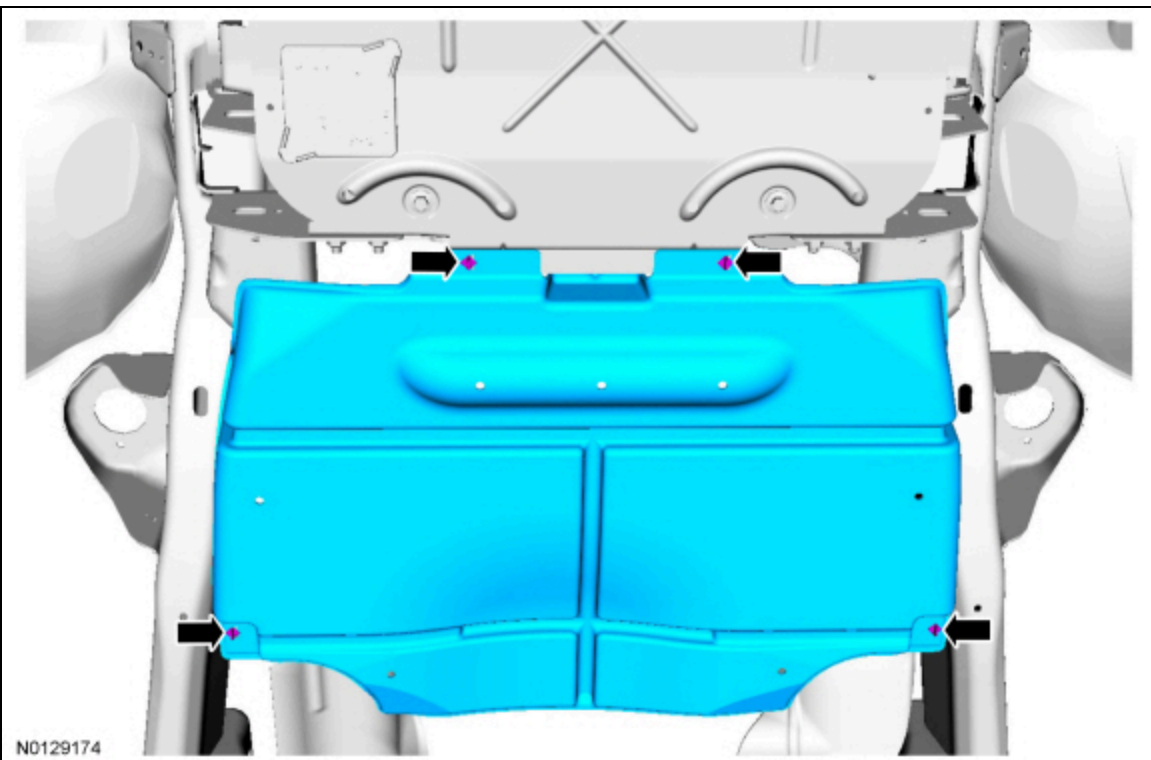


16. Turn the 4 quarter-turn retainers, detach the 8 pushpins and remove the lower air deflector.

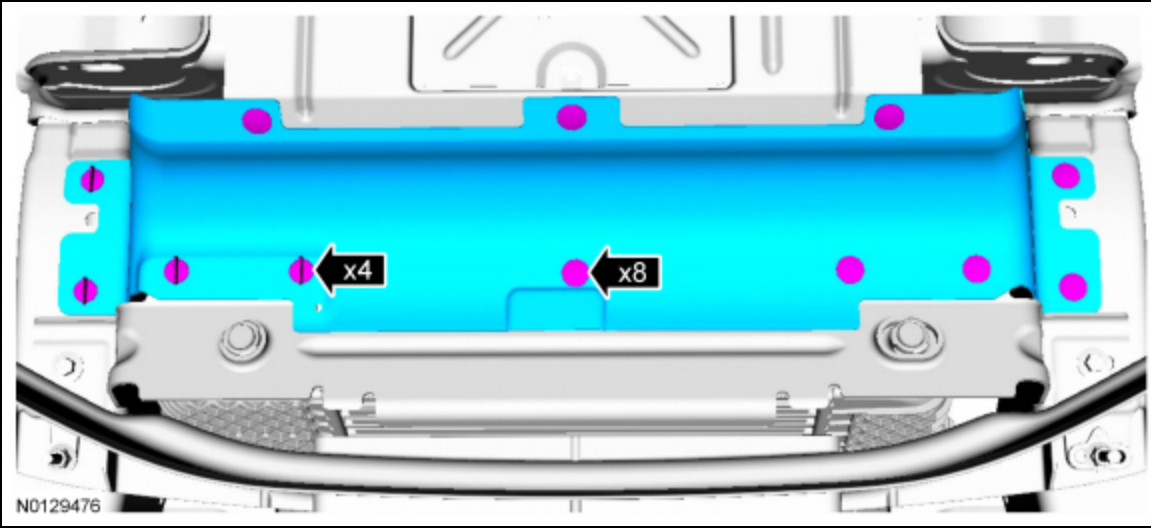


17. If equipped, remove the 4 bolts and the skid plate.

- To install, tighten to 48 Nm (35 lb-ft).

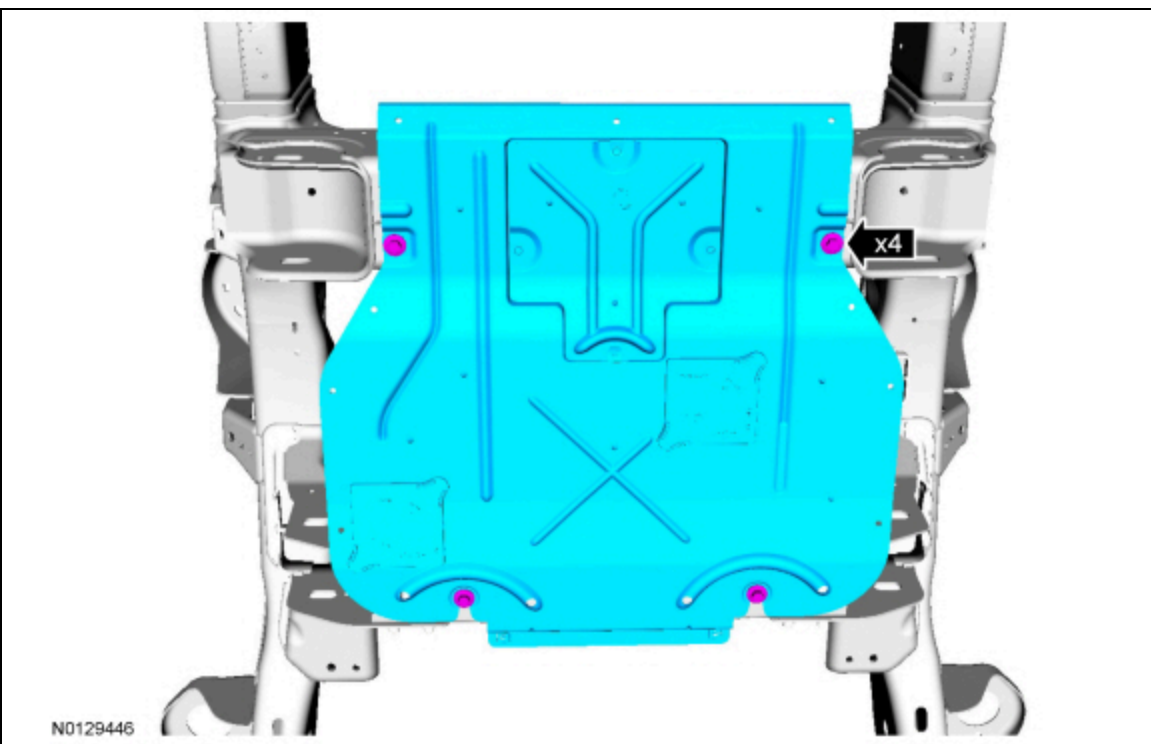

18. If equipped, remove the 4 bolts and the Power Steering Control Module (PSCM) skid plate.

- To install, tighten to 40 Nm (30 lb-ft).

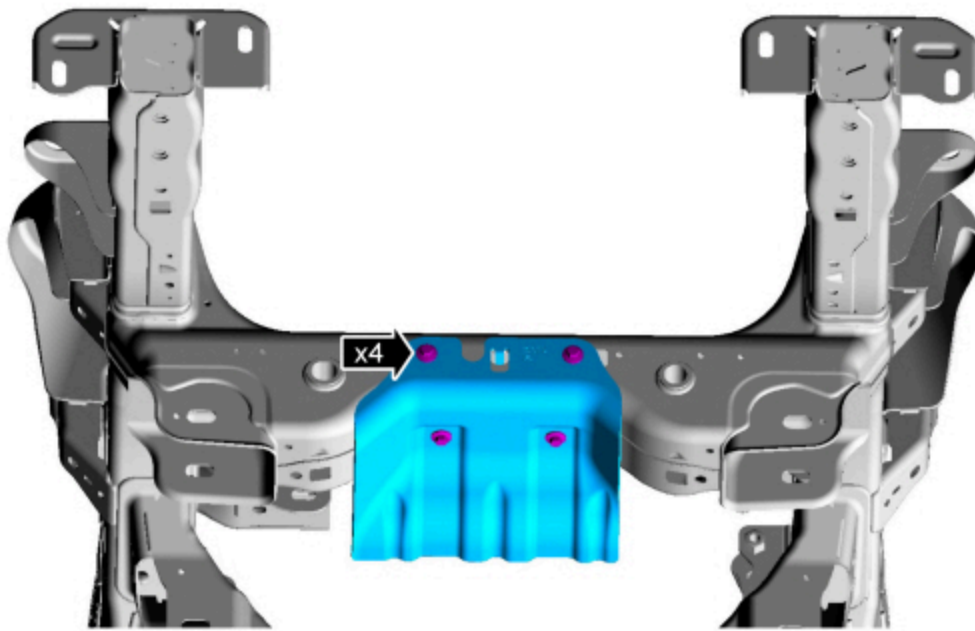


N0126167

19. **NOTE:** 3.5L GTDI oil filter drip shield shown, 3.7L similar.

Remove the 3 bolts and the oil filter drip shield.

- To install, tighten to 7 Nm (62 lb-in).

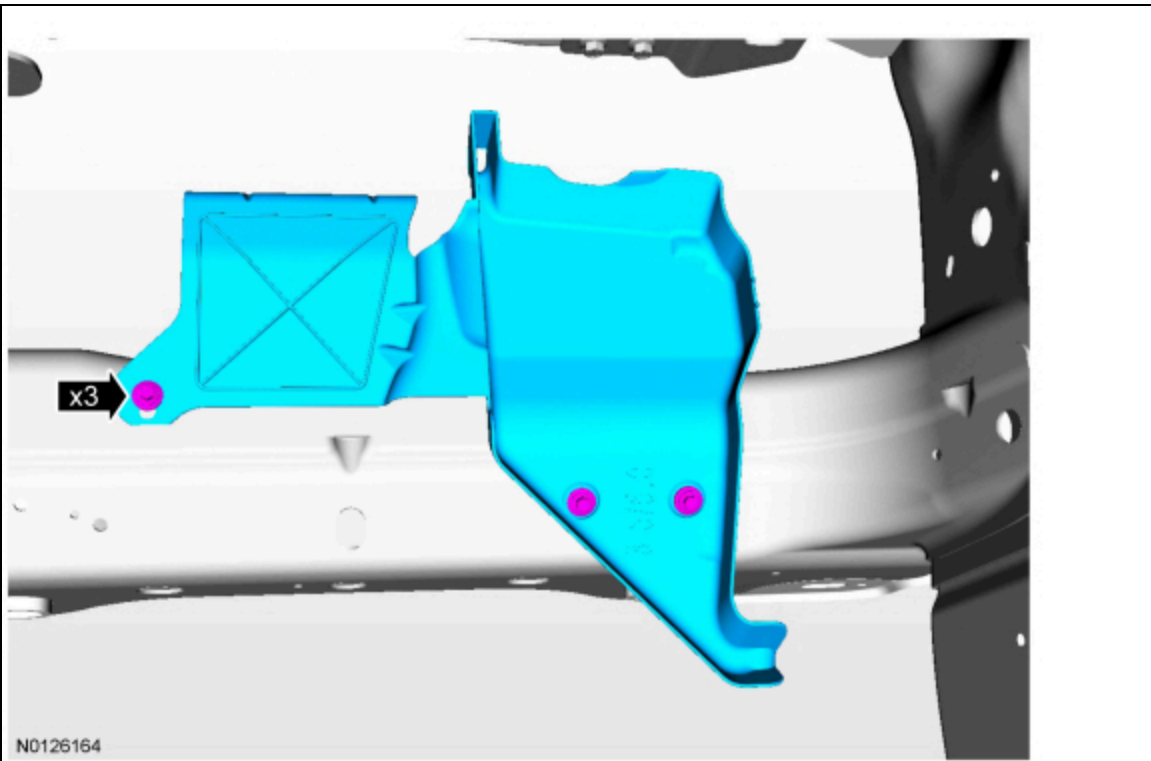

N0126164

20. Remove the battery cable harness bracket bolt from the RF frame.

- To install, tighten to 20 Nm (177 lb-in).


21. Remove the battery cable chassis ground terminal bolt.

- To install, tighten to 20 Nm (177 lb-in).

22. Disconnect the A/C compressor electrical connector.

23. Disconnect the wire harness retainer from the A/C compressor.


24. Remove the battery cable shield nut.
 - To install, tighten to 12 Nm (106 lb-in).
25. Position the transmission fluid cooler tube bracket and wire harness aside.
26. Remove the wire harness retainer from the battery cable shield.
27. Remove the starter solenoid terminal cover.
28. Remove the starter solenoid wire terminal nut and position the cable aside.
 - To install, tighten to 5 Nm (44 lb-in).
29. Remove the starter solenoid positive cable terminal nut and position the cable aside.
 - To install, tighten to 12 Nm (106 lb-in).
30. Remove the nut and position the transmission fluid cooler tube bracket aside.
 - To install, tighten to 12 Nm (106 lb-in).

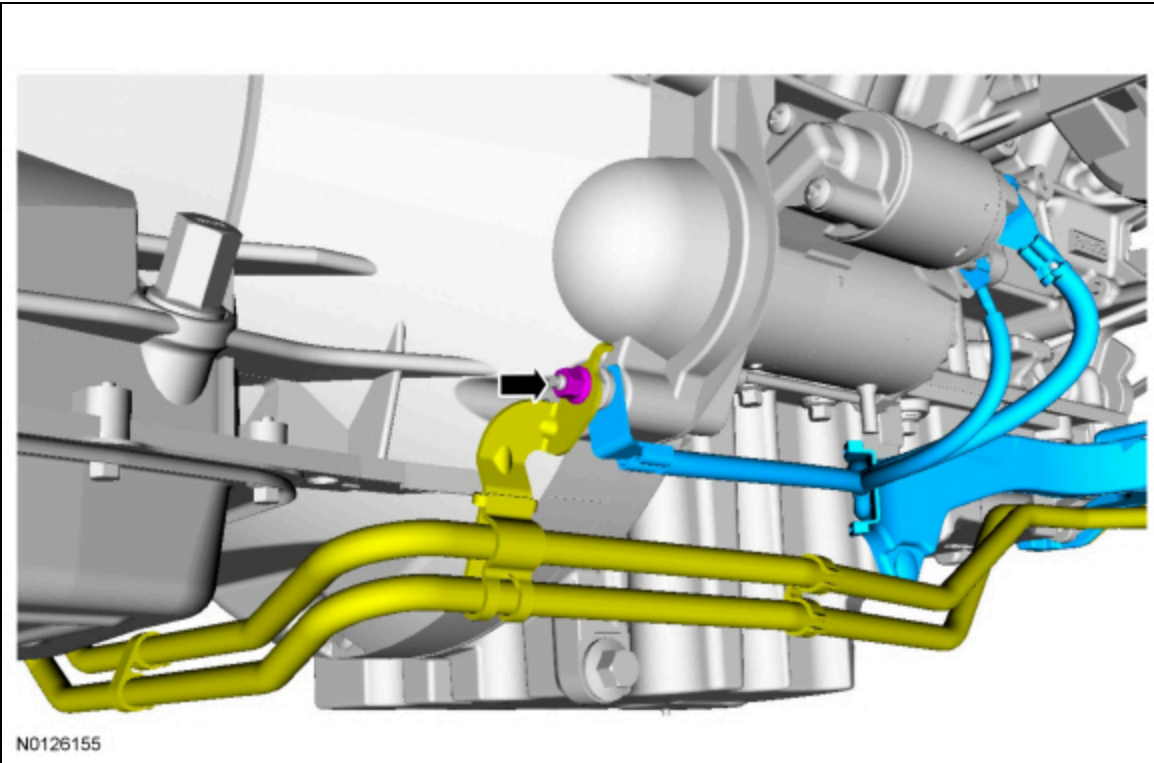

31. Remove the battery cable engine ground terminal stud bolt.
 - To install, tighten to 47 Nm (35 lb-ft).

Vehicles with Four Wheel Drive (4WD)

32. Position a suitable hydraulic jack under the front axle. Securely strap the axle to the jack.
33. Remove the 3 front axle mounting bolts.
 - To install, tighten to 115 Nm (85 lb-ft).

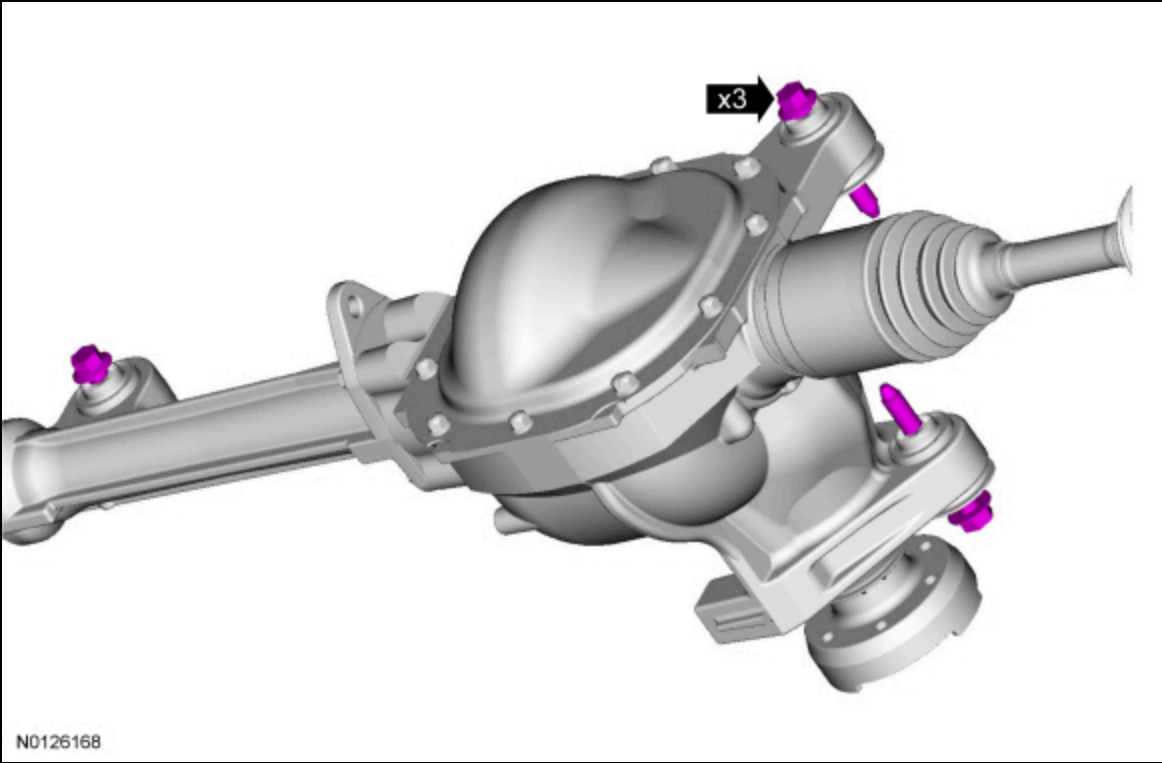

34. Lower the front axle to allow clearance to the 2 wire harness retainers at the engine front cover and the engine block.

All vehicles

35. Disconnect the wire harness retainers from the engine front cover, engine block and the oil filter adaptor.

36. Remove the battery cable.

37. To install, reverse the removal procedure.