


Battery Cables — 6.2L

 [Ford Ecat Electronic Parts Catalog](#)

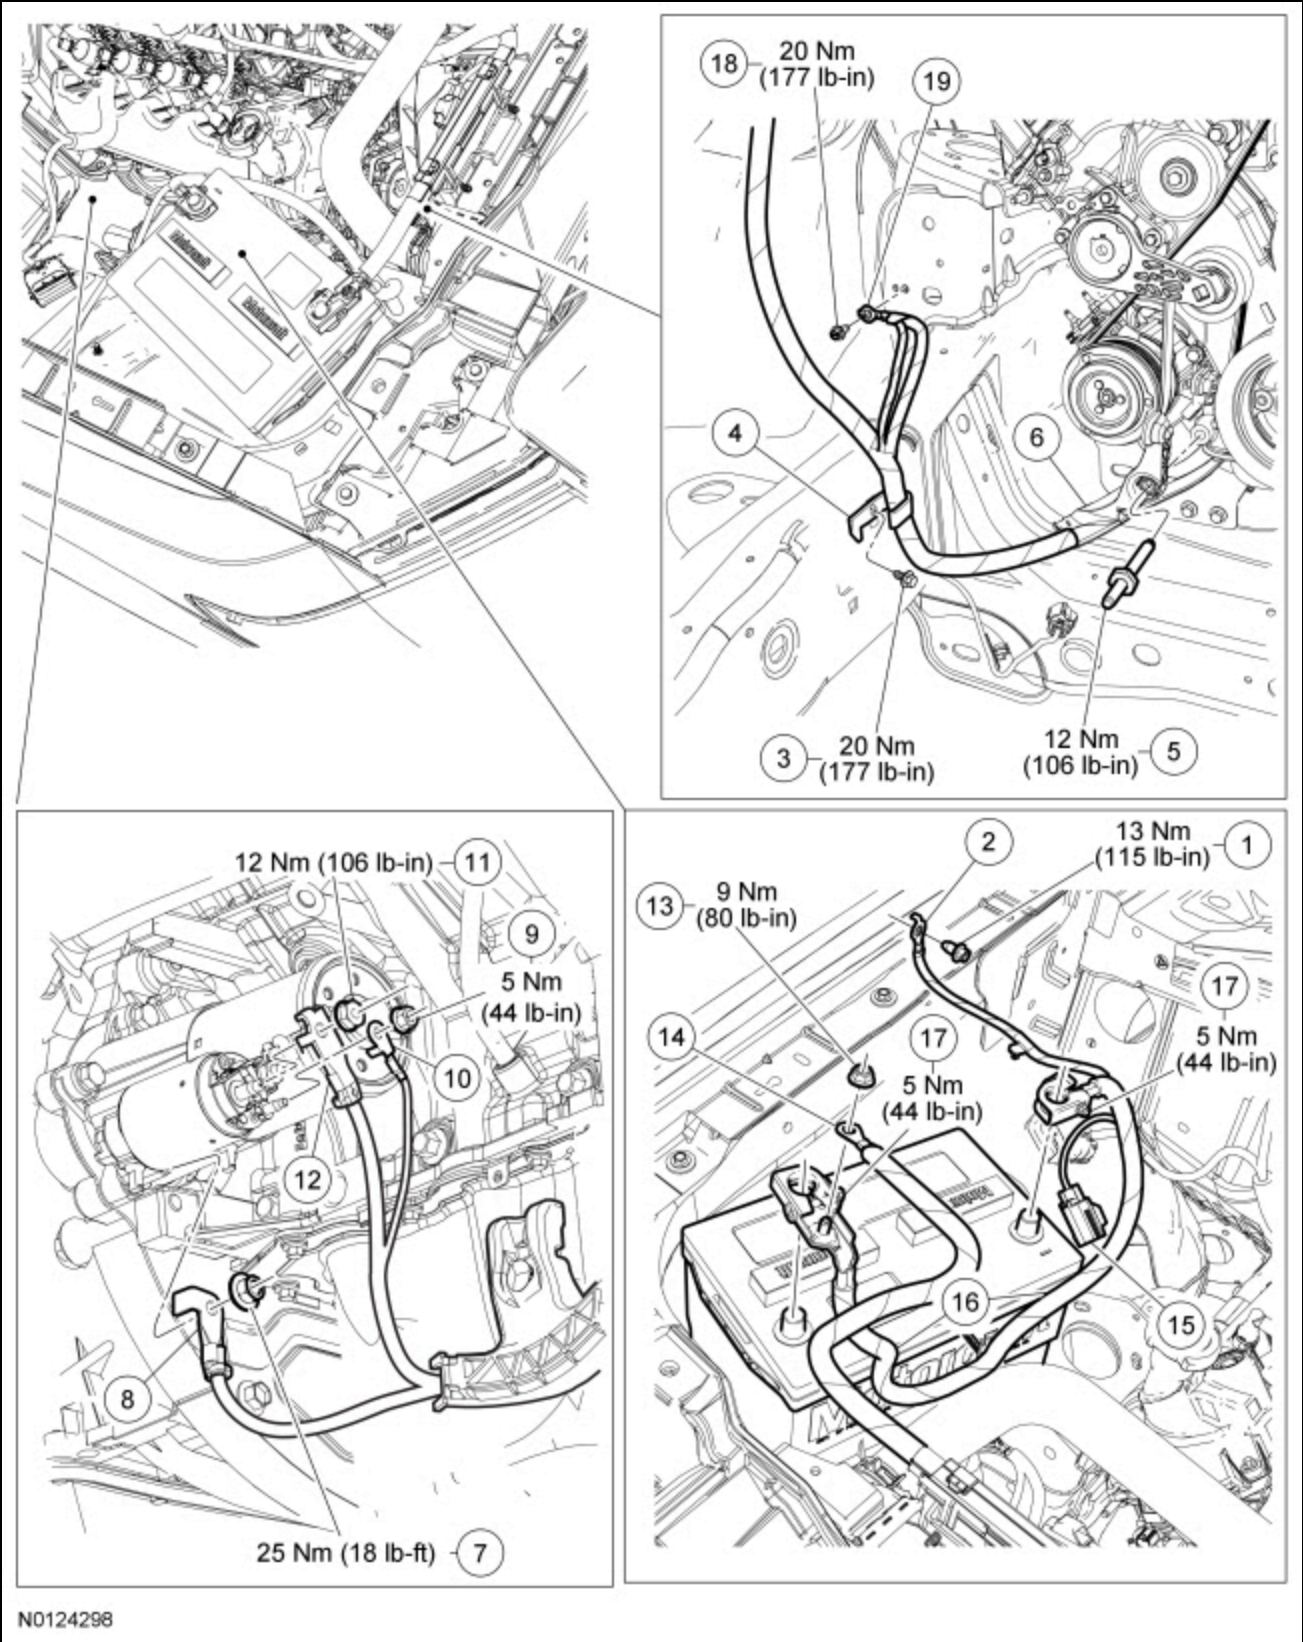

Item	Part Number	Description
1	W705661 W705661	Battery cable body ground terminal bolt

2	—	Battery cable body ground terminal (part of 14300)
3	W506424 W506424	Battery cable harness bracket bolt
4	—	Battery cable harness bracket
5	N808586 N808586	Battery cable shield stud bolt
6	—	Battery cable shield (part of 14300)
7	N805024 N805024	Battery cable engine ground nut
8	—	Battery cable engine ground terminal (part of 14300)
9	W705790 W705790	Starter solenoid wire terminal nut
10	—	Starter solenoid wire terminal (part of 14300)
11	W706414 W706414	Starter solenoid positive cable terminal nut
12	—	Starter solenoid positive cable terminal (part of 14300)
13	W705790 W705790	Generator B+ cable terminal nut/Power Distribution Box (PDB) cable terminal nut
14	14305 14305	Generator B+ cable terminal
15	—	Battery cable in-line electrical connector (part of 14300)
16	14300 14300	Battery cables
17	—	Battery cable terminal nut (part of 14300) (2 required)
18	W505261 W505261	Battery cable chassis ground terminal bolt
19	—	Battery cable chassis ground terminal (part of 14300)

Removal and Installation

1. Disconnect the battery. For additional information, refer to Battery Disconnect in this section.
2. Remove the battery cable chassis ground terminal bolt and position the cable aside.
 - To install, tighten to 20 Nm (177 lb-in).
3. Remove the battery cable body ground terminal bolt and position the cable aside.
 - To install, tighten to 13 Nm (115 lb-in).
4. Remove the bolt and position the battery cable harness bracket aside.
 - To install, tighten to 20 Nm (177 lb-in).
5. Remove the wire harness retainer from the battery cable shield.
6. Remove the stud bolt and position the battery cable shield aside.
 - To install, tighten to 12 Nm (106 lb-in).
7. Remove the battery cable engine ground terminal nut and position the cable aside.
 - To install, tighten to 25 Nm (18 lb-ft).
8. Remove the starter solenoid terminal cover.
9. Remove the nut and position the starter solenoid wire terminal aside.
 - To install, tighten to 5 Nm (44 lb-in).
10. Remove the nut and position the starter solenoid positive cable terminal aside.
 - To install, tighten to 12 Nm (106 lb-in).

11. Remove the nut and position the generator B+ cable terminal and the Power Distribution Box (PDB) cable terminal aside.
 - To install, tighten to 9 Nm (80 lb-in).
12. Disconnect the 2 battery cable harness retainers from the battery tray.
13. Disconnect the battery cable in-line electrical connector.
14. Remove the battery cable assembly.
15. To install, reverse the removal procedure.