


Battery Current Sensor

 [Ford Ecat Electronic Parts Catalog](#)

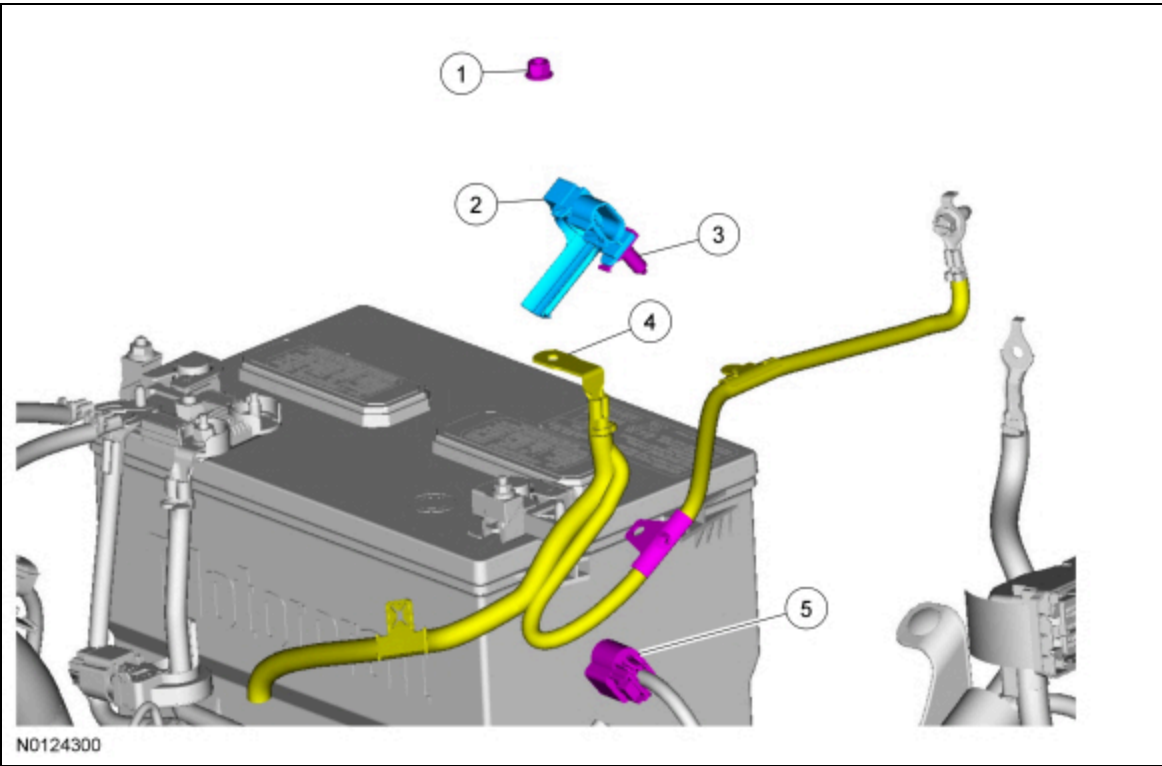

Item	Part Number	Description
1	—	Battery terminal nut (part of 14300) - 9 Nm (80 lb-in)
2	14B35714B357	Battery current sensor
3	—	Battery current sensor retainer (part of 14B357)
4	—	Negative battery cable terminal (part of 14300)
5	—	Battery current sensor electrical connector (part of 12A581)

Removal

1. Remove the nut and position the negative battery cable terminal aside.
2. Disconnect the battery current sensor electrical connector.
3. Disconnect the battery current sensor retainer from the battery cable.
4. **NOTE:** Note the orientation and position of the battery current sensor tape tab.

Index-mark the battery cable at the battery current sensor. Remove and discard the tape securing the battery current sensor to the battery cable and remove the battery current sensor.

Installation

1. **NOTE:** The battery current sensor must be installed in the proper position and orientation to function correctly.

With the battery current sensor tape tab pointing downward, position the battery current sensor to the index-mark on the battery cable and secure with electrical tape.

2. Connect the battery current sensor retainer to the battery cable.
3. Connect the battery current sensor electrical connector.
4. Connect the negative battery cable terminal to the battery terminal and install the battery terminal nut.
 - Tighten to 9 Nm (80 lb-in).