


Direct Current/Alternating Current (DC/AC) Inverter


 [Ford Ecat Electronic Parts Catalog](#)

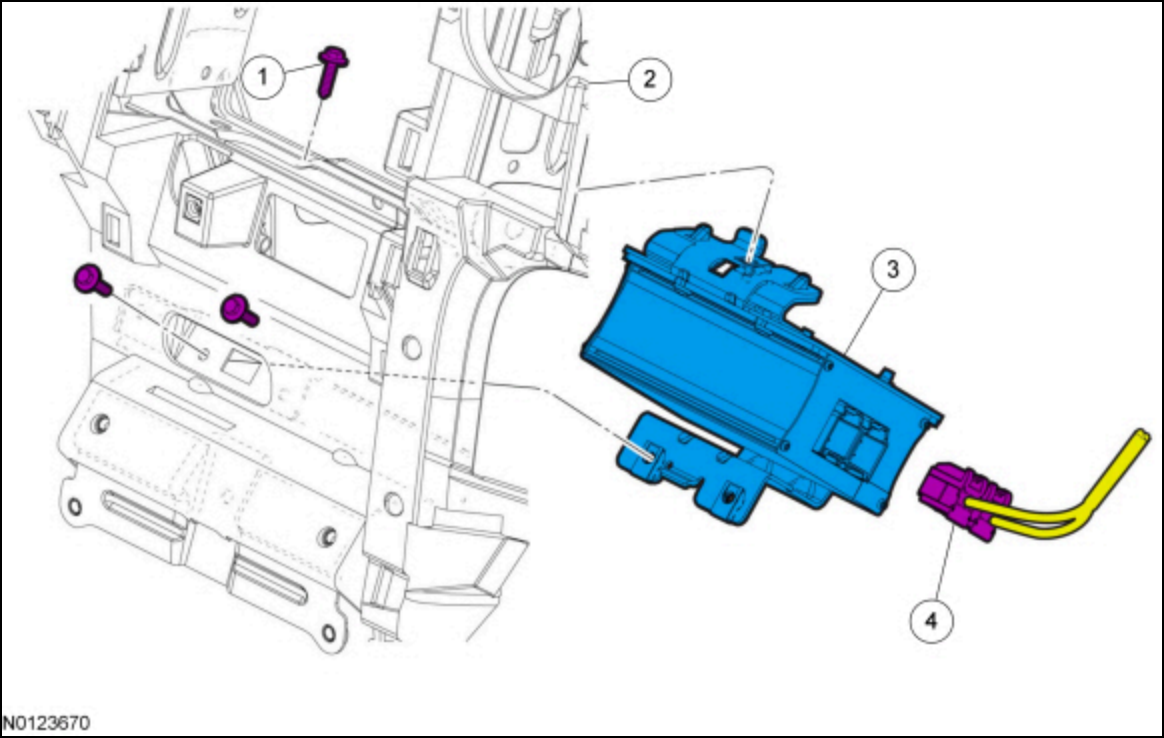

Item	Part Number	Description
1	W707628 W707628	DC/AC inverter screw (3 required)
2	04304 04304	Instrument panel
3	19G317 19G317	DC/AC inverter
4	—	DC/AC inverter electrical connector (part of 14401)

WARNING: Disconnect the 12 volt battery before servicing the direct current to alternating current (DC-AC) inverter or alternating current (AC) powerpoint to prevent the risk of high voltage shock. Failure to follow this instruction may result in serious personal injury.

1. Remove the center instrument panel lower finish panel. For additional information, refer to Section 501-12.
2. Remove the 4 bolts and the LH center instrument panel support bracket.
 - To install, tighten to 9 Nm (80 lb-in).

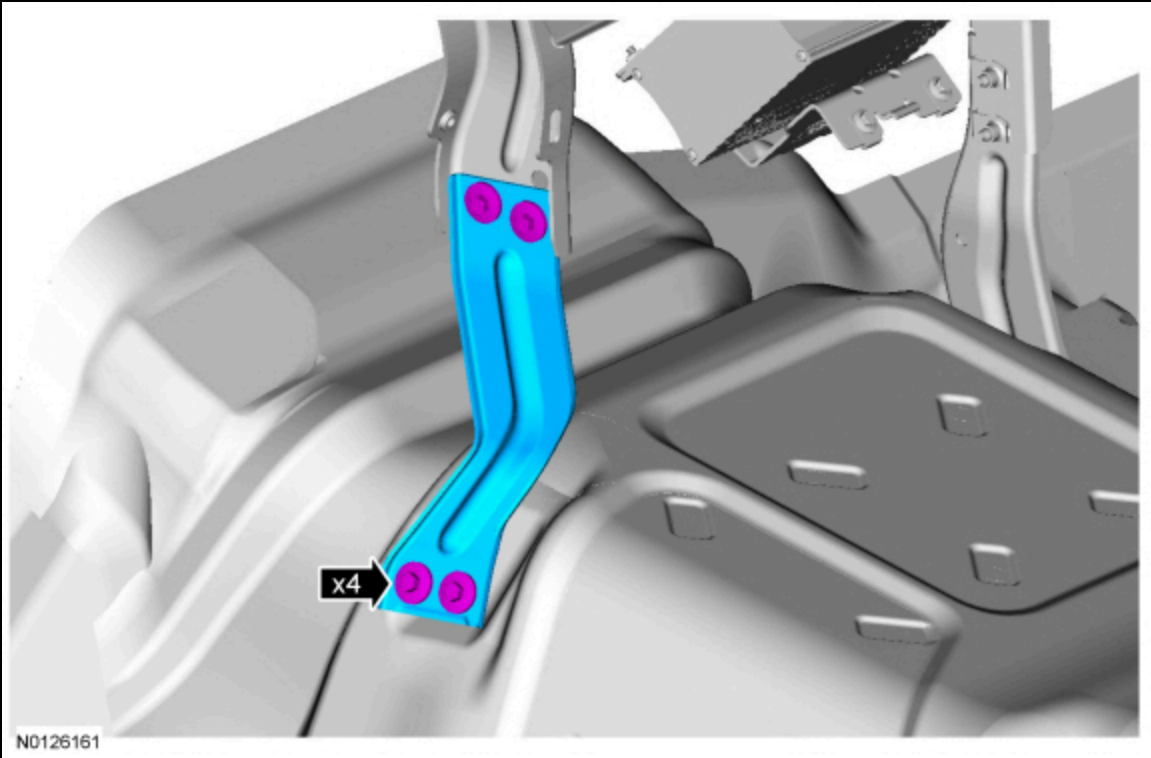

3. Disconnect the DC/AC inverter electrical connectors.
4. Remove the 3 screws and the DC/AC inverter.
5. To install, reverse the removal procedure.