


Information and Entertainment System

 [Ford Ecat Electronic Parts Catalog](#)

Component Location

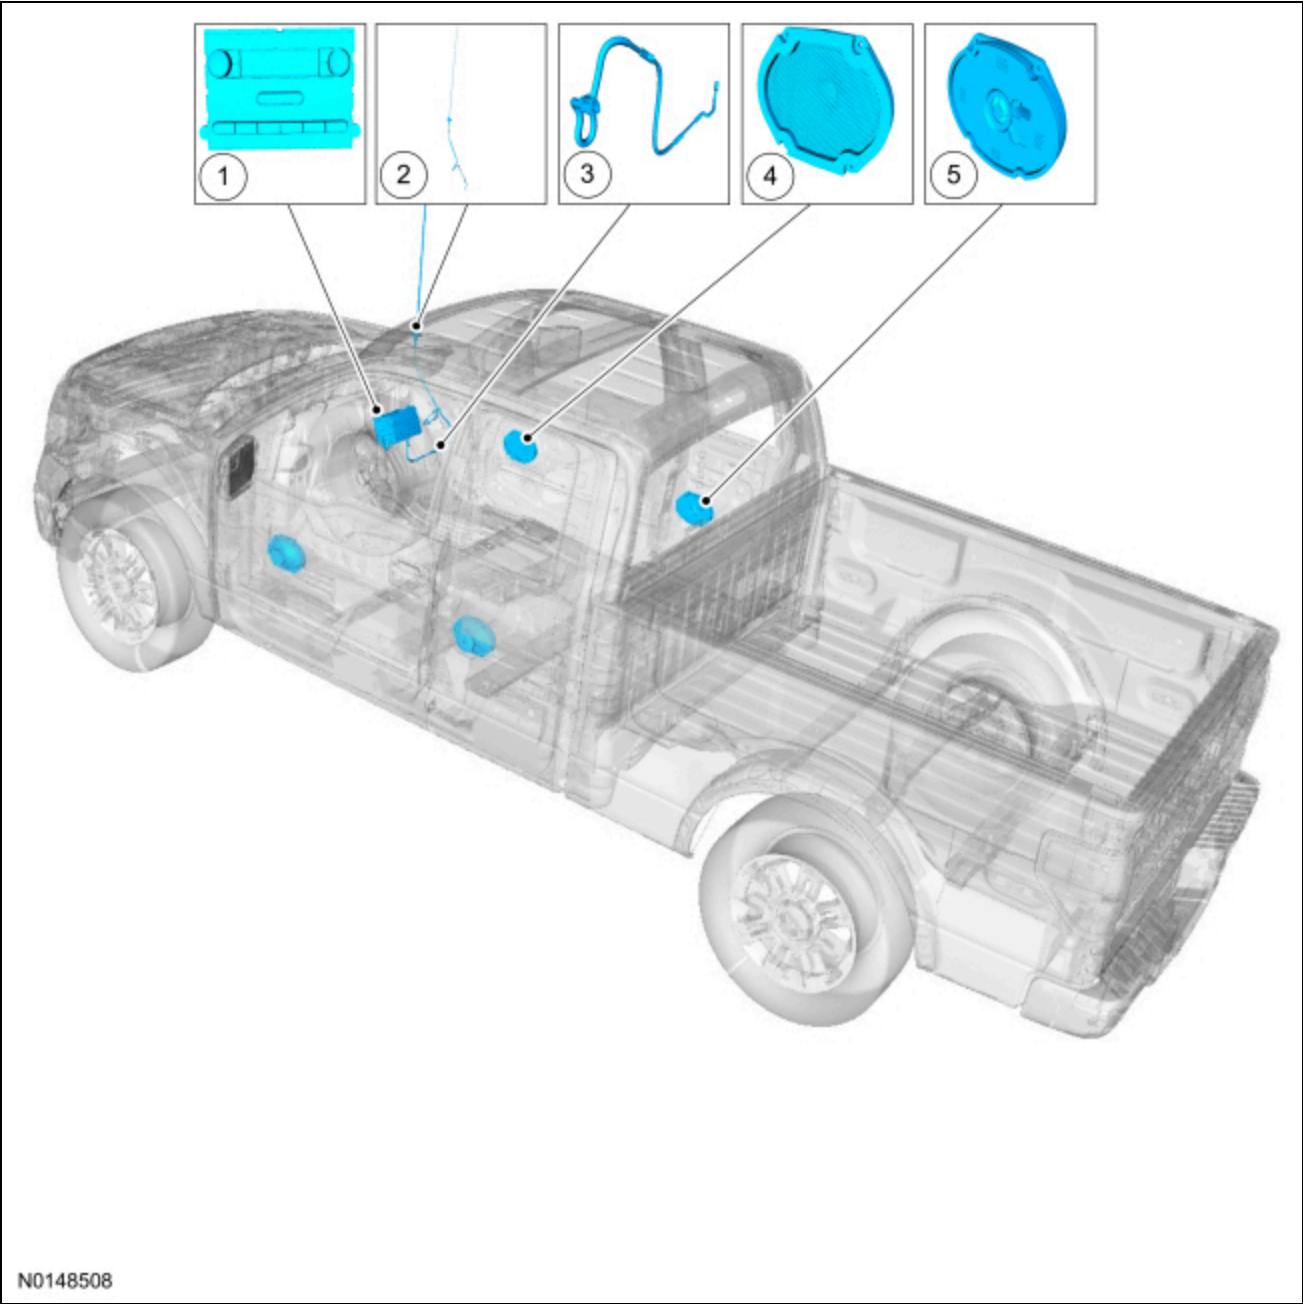

Item	Description	Comments
1	ACM	-
2	AM/FM antenna	-
3	AM/FM antenna coaxial cable	-
4	Front door speaker	-
5	Rear door speaker	If equipped

Overview


The audio system consists of the following:

Main Components

- 2 or 4 speakers
- AM/FM ACM

System Operation

System Diagram

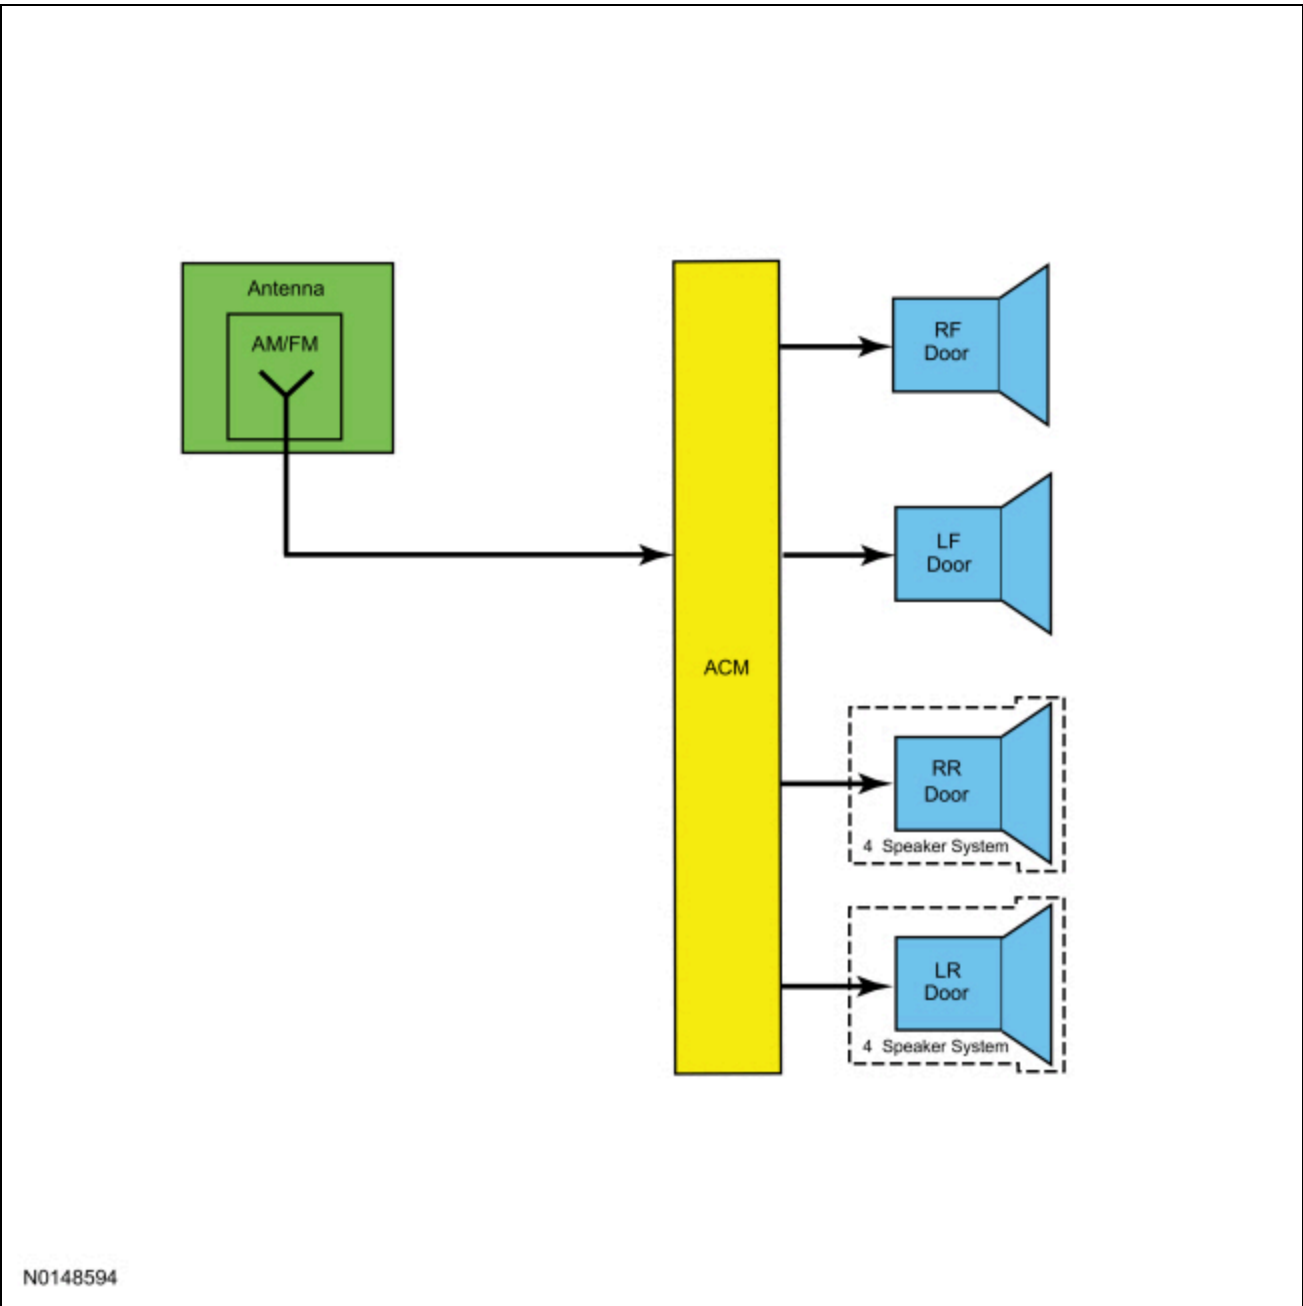

Accessory Delay Feature

The accessory delay feature allows the audio system to be operated for a preset period of time after the ignition is turned off and a front door has not been opened.

AM/FM Radio

The AM/FM fender-mounted antenna receives radio waves and sends them through the AM/FM antenna coaxial cable to the ACM . The radio waves are converted into fluctuating AC voltage and sent as left and right analog audio signals to the speakers.

Battery Load Shed

The BCM uses the battery current sensor to monitor the battery state of charge. The battery current sensor is attached to the battery ground cable. With the vehicle OFF and the ignition in ACC or ON, a load shed message is sent over the CAN when the BCM determines that the battery state of charge is below 40%, 45 minutes have elapsed, or 10% of the charge has been drained. This message turns off the audio system to save the remaining battery charge. Under this condition, SYS OFF TO SAVE BATT is displayed on the centerstack infotainment display to notify the driver that battery protection actions are active. To clear the load shed state, start the vehicle.

Component Description

ACM

The ACM can be operated with the ignition in RUN, ACC, or OFF.

The ACM receives radio waves containing audio from the antenna coaxial cable and converts them into fluctuating AC voltage. The ACM processes these inputs and sends left and right analog audio signals to the speakers as fluctuating AC voltage.

Antenna

The AM/FM fender-mounted antenna receives radio waves containing audio and sends them through the AM/FM antenna coaxial cable to the ACM . The antenna mast is used to amplify the AM/FM radio waves to improve reception.