


Front Display Interface Module (FDIM)



Vehicles Without Navigation

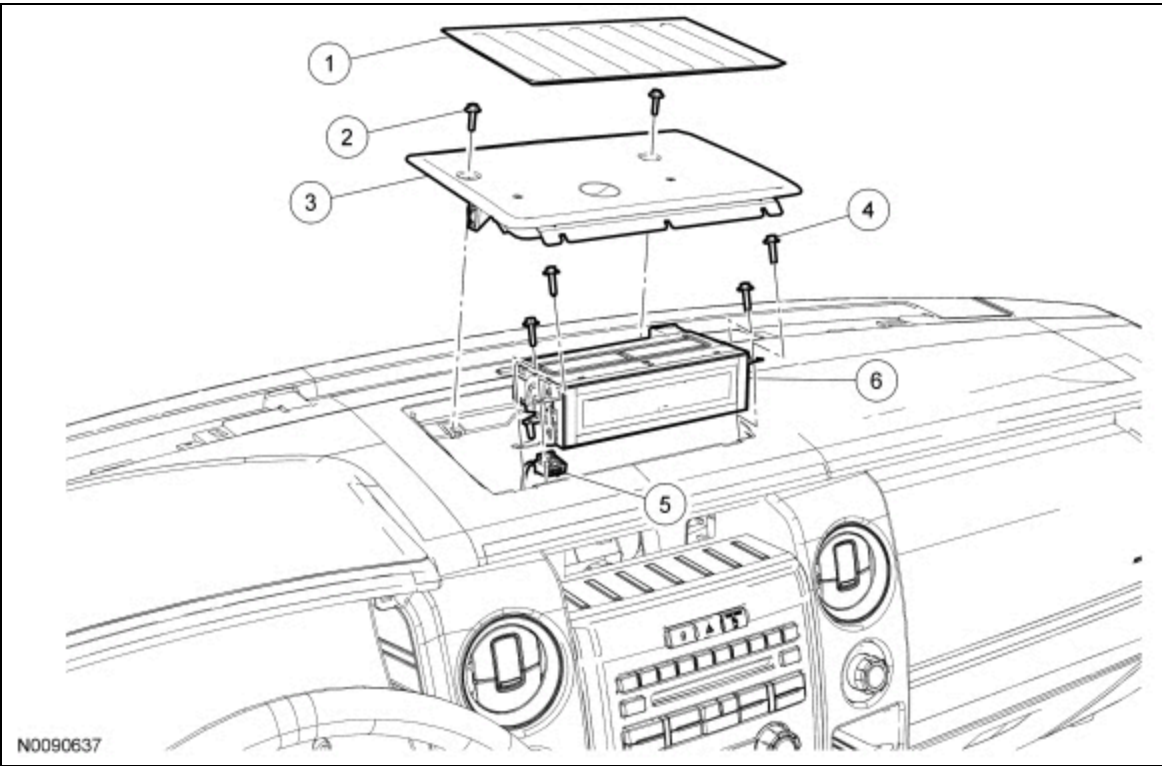

Item	Part Number	Description
1	15044G24 15044G24	Instrument panel upper bin mat
2	W707628 W707628	Instrument panel upper bin screws (2 required)
3	—	Instrument panel upper bin
4	W707628 W707628 -S	Front Display Interface Module (FDIM) screws (4 required)
5	—	FDIM electrical connector (part of 14401)
6	10D885 10D885	FDIM

Removal and Installation

1. **NOTE:** Module configuration is required when a new Front Display Interface Module (FDIM) is being installed.

Upload the **FDIM** configuration information to the scan tool . Refer to Programmable Module Installation (PMI) in Section 418-01.
2. Remove the mat, the 2 screws, and the instrument panel upper bin.
3. Remove the 4 screws and the **FDIM** .
 - Disconnect the electrical connector(s).
 - To install, tighten to 2 Nm (18 lb-in).

4. To install, reverse the removal procedure.

- Download the configuration information to the ~~EDIM~~ . Refer to ~~PMI~~ in Section 418-01.