


Speaker — Door


 [Ford Ecat Electronic Parts Catalog](#)

Front Door Tweeter Speaker

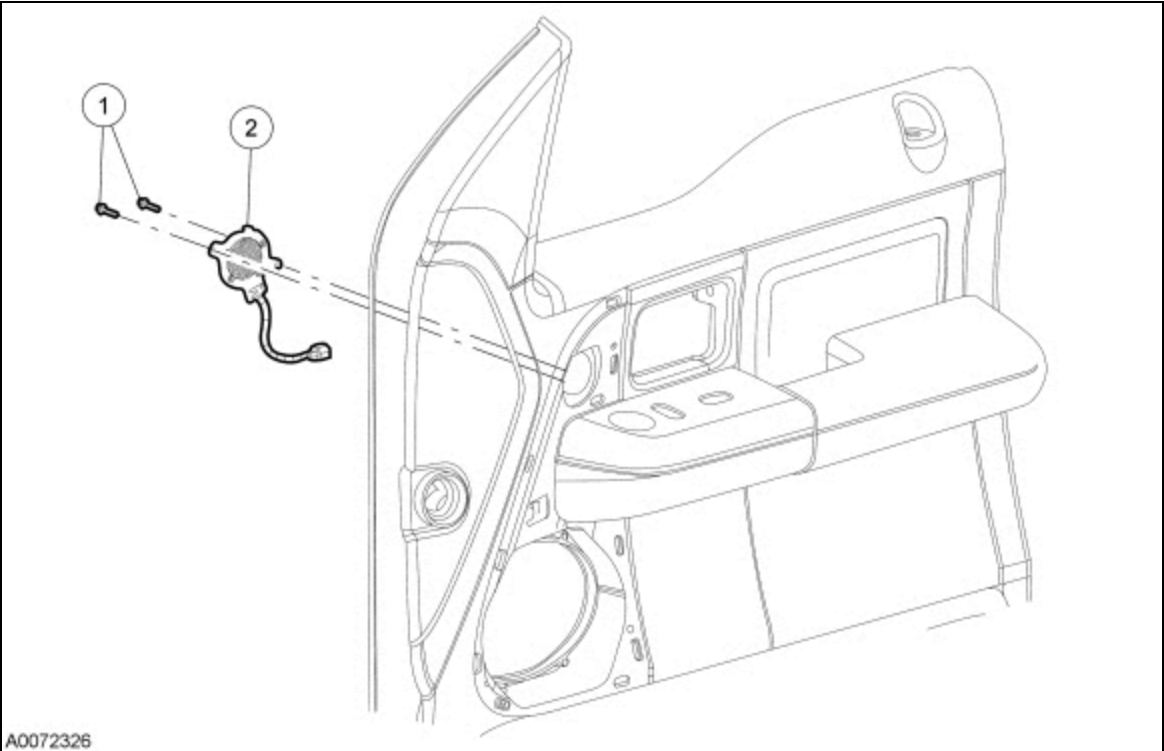

A0072326		
Item	Part Number	Description
1	W701678 W701678	Tweeter speaker screws (2 required)
2	19B170 19B170 /19B171/19B171	Tweeter speaker (RH/LH)


Front Door Speaker

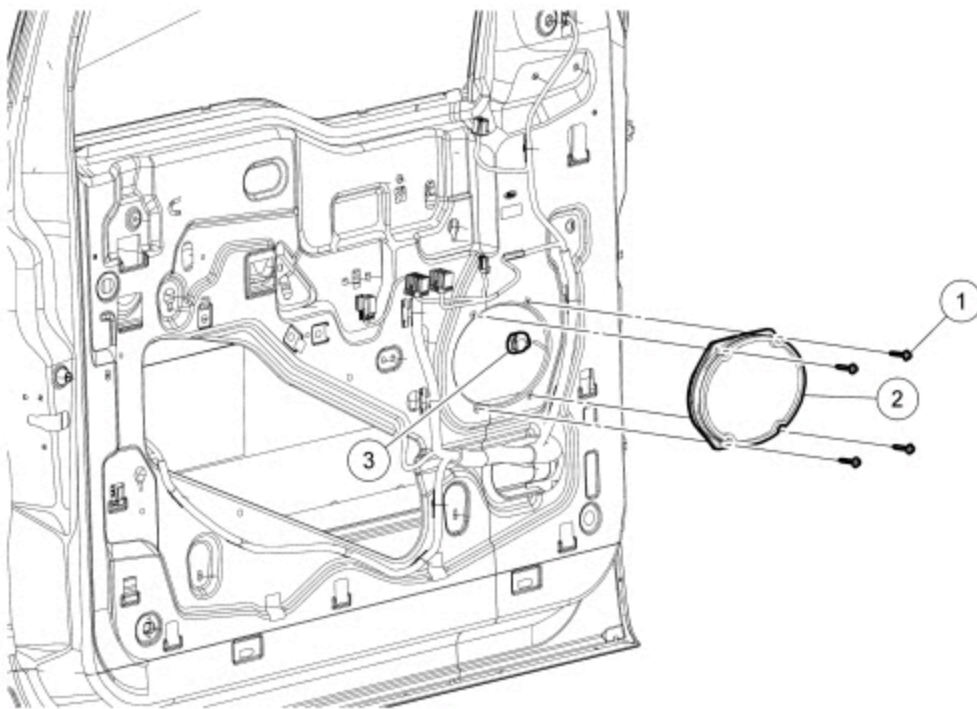

N0104515

Item	Part Number	Description
1	W707628 W707628	Front door speaker screws (4 required)
2	18808 18808	Front door speaker
3	—	Front door speaker electrical connector (part of door harness)

Rear Door Speaker

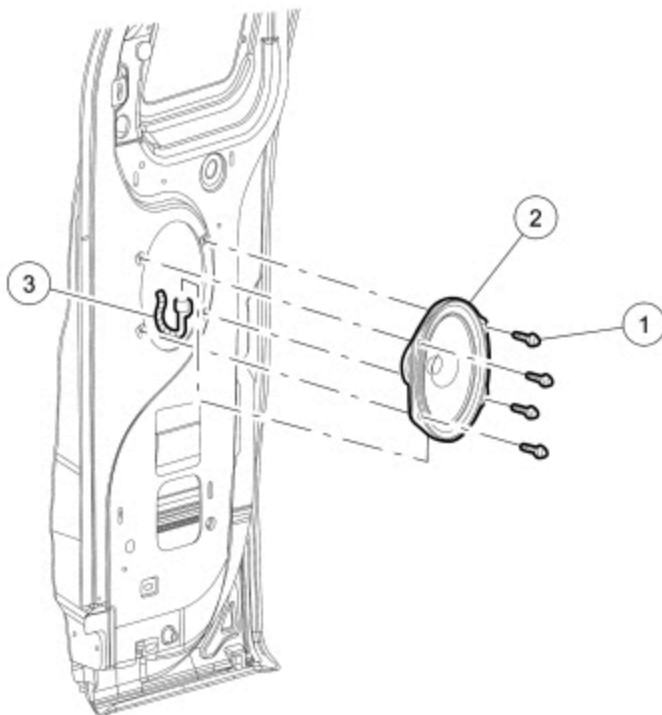

A0072328

Item	Part Number	Description
1	W706766 W706766	Rear speaker screws (4 required)

2	18808 18808	Rear speaker
3	180103 180103	Rear speaker electrical connector

Removal and Installation

Front door

1. Remove the front door trim panel. For additional information, refer to Section 501-05.
2. Remove the screws (2 for the tweeter, 4 for the door speaker) and the speaker.
 - Disconnect the electrical connector.

Rear door

3. Remove the rear door trim panel. For additional information, refer to Section 501-05.
4. Remove the 4 screws and the rear door speaker.
 - Disconnect the electrical connector.

All speakers

5. To install, reverse the removal procedure.