


Antenna Cable — Satellite Radio

 [Ford Ecat Electronic Parts Catalog](#)

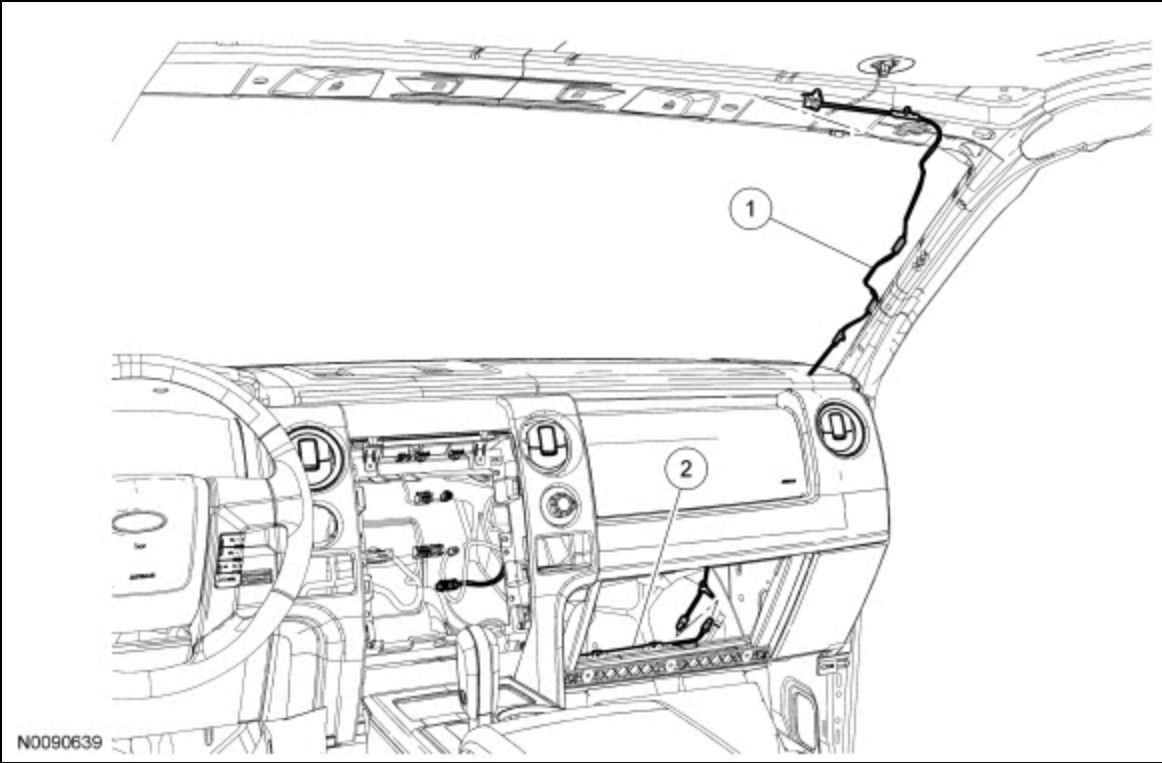

Item	Part Number	Description
1	19A397 19A397	Upper satellite radio antenna cable
2	19A397 19A397 /10E928/10E928	Lower satellite radio antenna cable (without/with navigation)

Removal and Installation

Both cables

1. Lower the glove compartment completely.
2. Disconnect the upper-to-lower satellite radio antenna cable connection.

Upper cable

3. Remove the RH A-pillar trim panel. For additional information, refer to Section 501-05.
4. Remove the 3 screws, the RH sun visor retaining clip, and the RH sun visor.
 - If equipped, disconnect the electrical connector.
5. Lower the front of the headliner enough to gain access to the satellite radio antenna electrical connector.
6. Remove the upper satellite radio antenna cable.
 - Disconnect the electrical connector.
 - Separate the pushpins from the A-pillar and instrument panel.

Lower cable

7. Remove the Audio Front Control Module (ACM) . For additional information, refer to Audio Control Module (ACM) in this section.
8. Remove the lower satellite radio antenna cable.
 - Disconnect the electrical connector.
 - Separate the pushpins from the instrument panel.

Both cables

9. To install, reverse the removal procedure.