


Accessory Protocol Interface Module (APIM)



Removal and Installation

1. Remove the Front Display Interface Module (FDIM) . Refer to Front Display Interface Module (FDIM).
2. Remove the 4 APIM screws and remove the APIM .
 - To install, tighten to 0.6 Nm (5 lb-in).

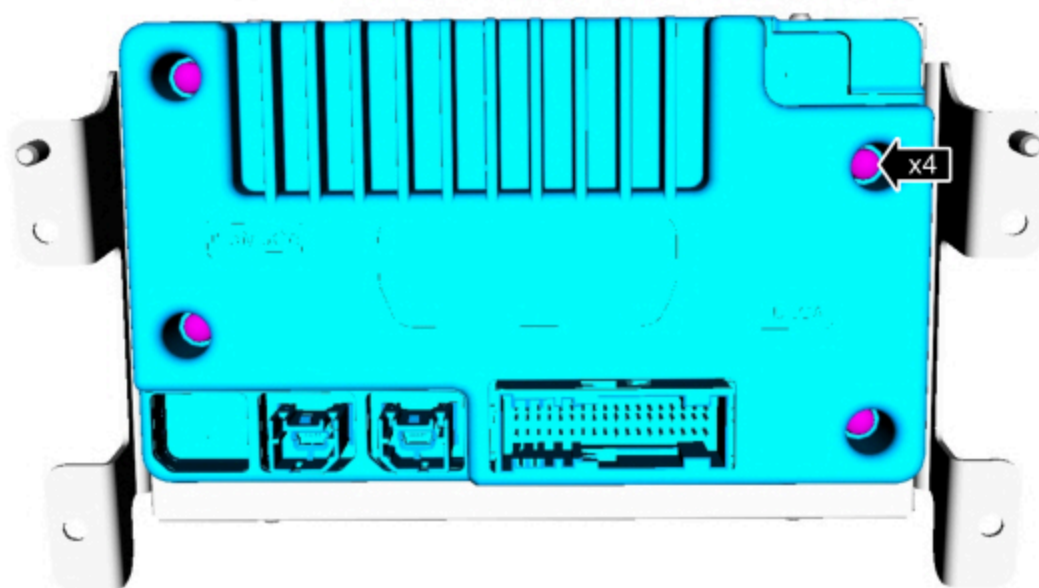

N0148338

3. To install, reverse the removal procedure.
4. Program the APIM . Refer to Accessory Protocol Interface Module (APIM) Module Replacement Programming.