


Antenna — Satellite Radio

 [Ford Ecat Electronic Parts Catalog](#)

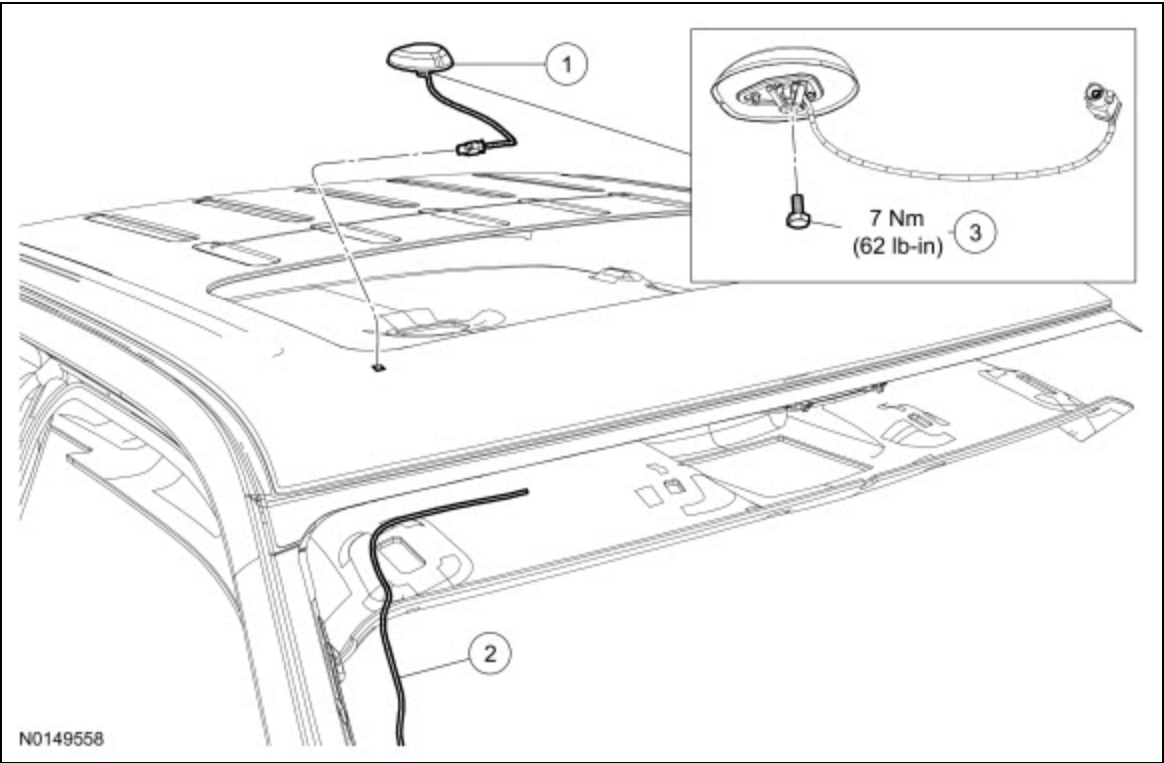

Item	Part Number	Description
1	10E89310E893	Satellite radio antenna
2	—	Satellite radio antenna electrical connector (part of 19A397)
2	—	Satellite radio antenna retaining bolt (part of 10E893)

Removal and Installation

1. Remove the RH A-pillar trim panel. For additional information, refer to Section 501-05.
2. Remove the 3 screws, the RH sun visor retaining clip, and the RH sun visor.
 - If equipped, disconnect the electrical connector.
3. Lower the front of the headliner enough to gain access to the satellite radio antenna electrical connector.
4. **NOTE:** Remove the satellite antenna and pigtail through the mounting opening in the roof panel.

- Remove the satellite antenna.
- Disconnect the electrical connector.
 - Remove the satellite antenna retaining bolt and retainer then remove the satellite antenna from the roof panel.
 - To install, tighten to 7 Nm (62 lb-in).

5. To install, reverse the removal procedure.