


Front Controls Interface Module (FCIM)

 [Ford Ecat Electronic Parts Catalog](#)

Removal and Installation

1. Remove the LH center instrument panel finish panel. Refer to Section 501-12.
2. Remove the RH center instrument panel finish panel. Refer to Section 501-12.
3. Remove the 4 screws and the FCIM .
 - Disconnect the electrical connectors.
 - To install, tighten to 3 Nm (27 lb-in).

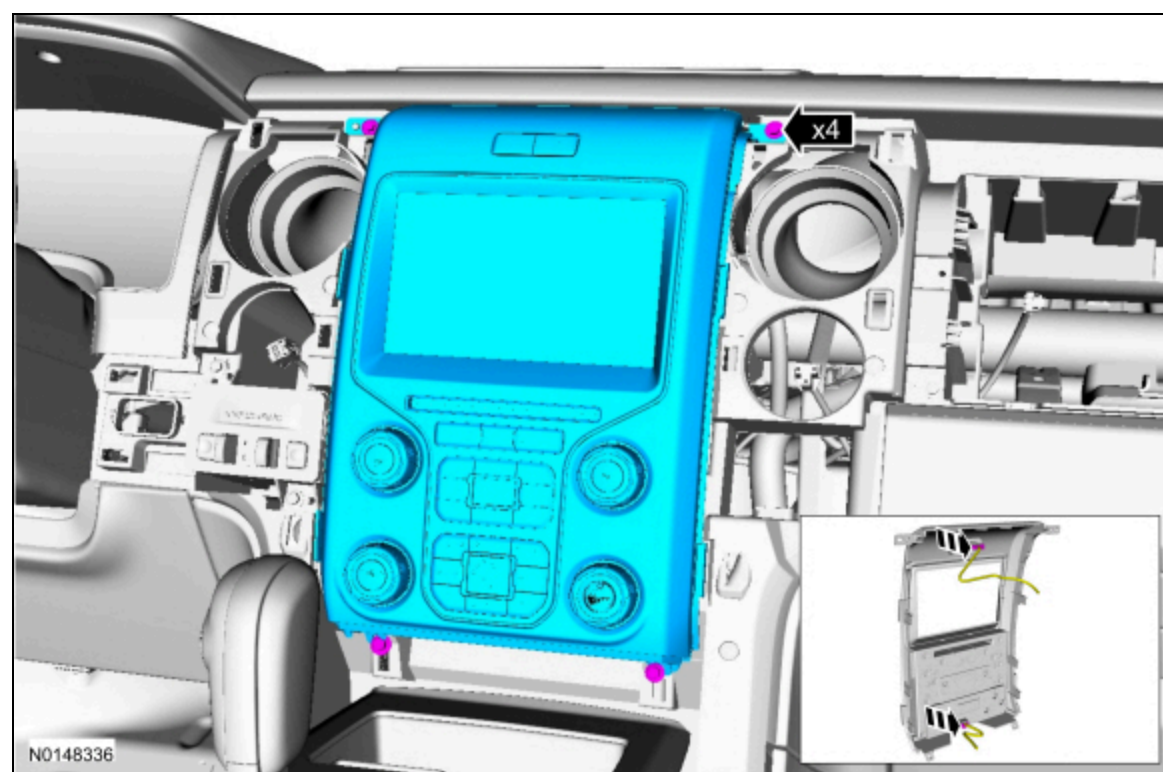

4. To install, reverse the removal procedure.