


Front Display Interface Module (FDIM)


 [Ford Ecat Electronic Parts Catalog](#)

Removal and Installation

1. Remove the Front Controls Interface Module (FCIM) . Front Controls Interface Module (FCIM).
2. Remove the 4 bolts and the Front Display Interface Module (FDIM) .
 - Disconnect the electrical connectors.
 - To install, tighten to 2.5 Nm (23 lb-in).

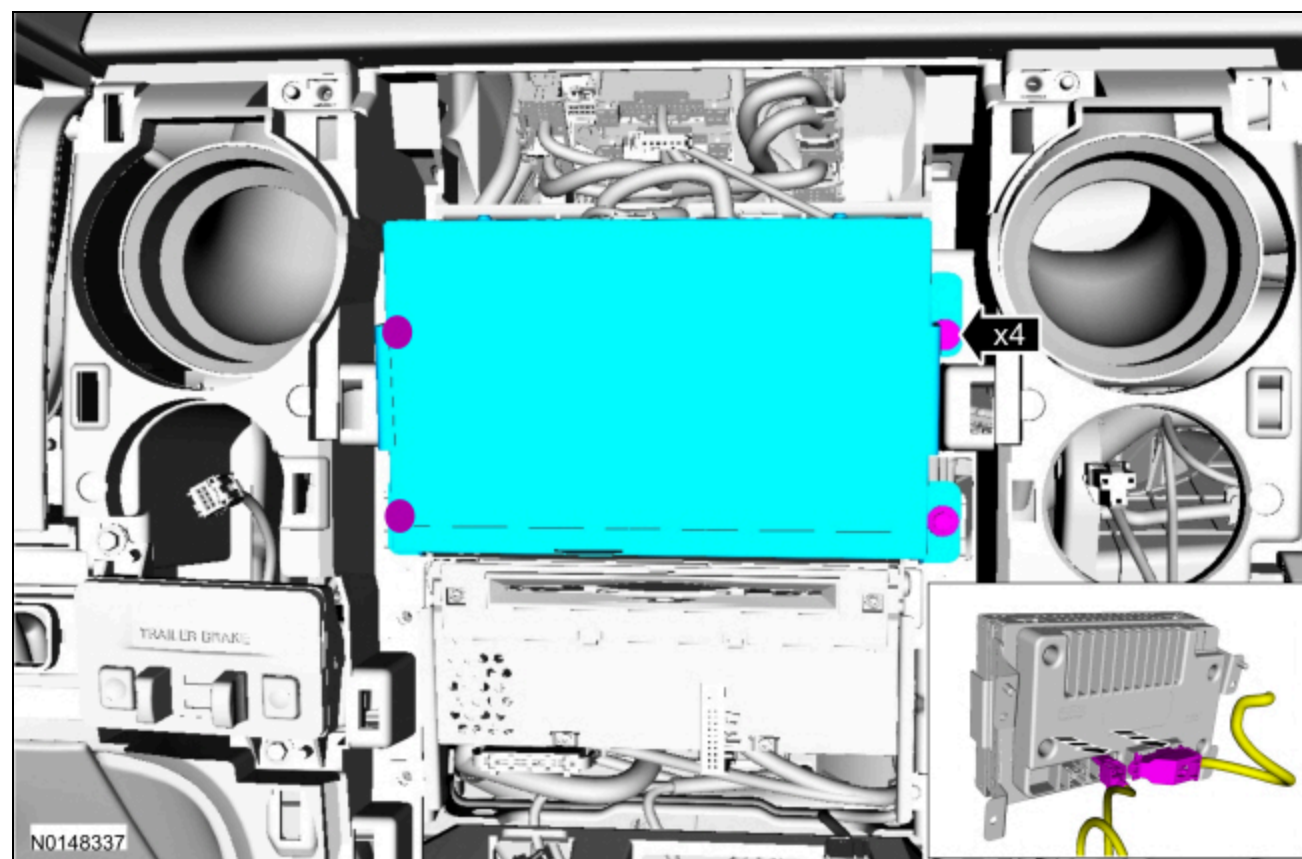

3. Remove the 4 screws and remove the Accessory Protocol Interface Module (APIM) from the FDIM .
 - To install, tighten to 0.6 Nm (5 lb-in).

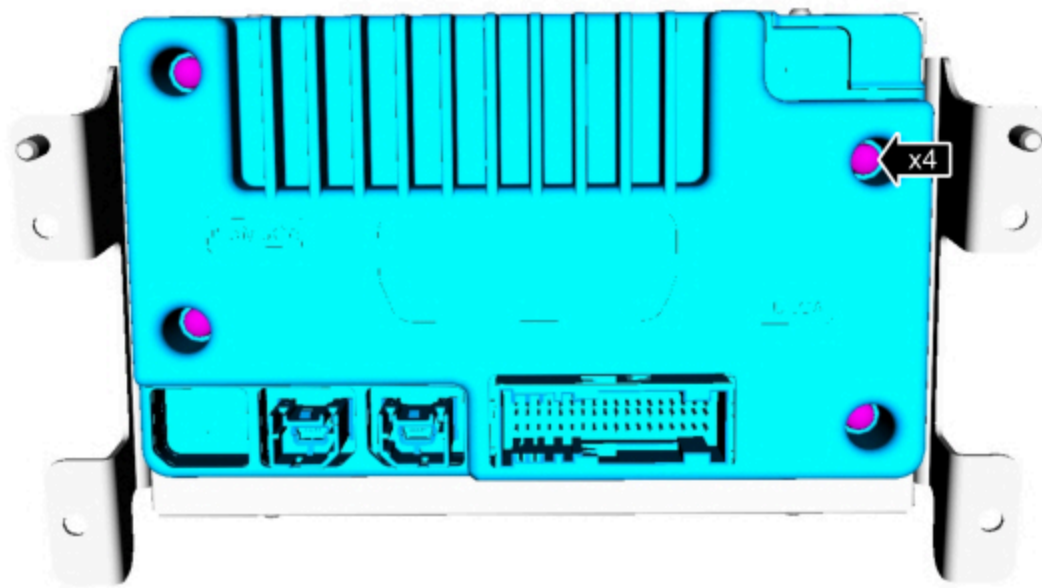

N0148338

4. To install, reverse the removal procedure.
5. Calibrate the **FDIM** touchscreen. Refer to Touchscreen Calibration.