


Fog Lamp

 [Ford Ecat Electronic Parts Catalog](#)

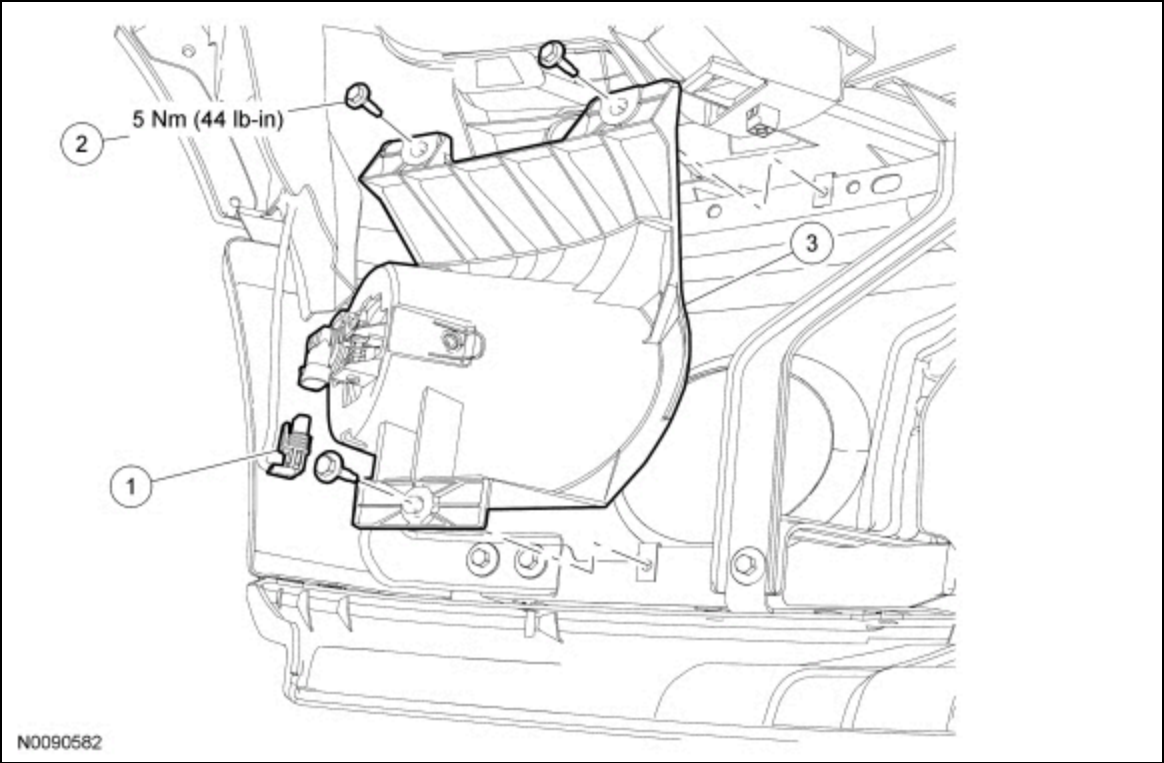

Item	Part Number	Description
1	—	Fog lamp electrical connector (part of 12A581)
2	W505424 W505424	Fog lamp bolts (3 required)
3	15200 15200 /15201/15201	Fog lamp assembly (RH/LH)

Removal and Installation

NOTE: Make sure the fog lamp switch and ignition switch are in the OFF position.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Disconnect the fog lamp electrical connector.
3. Remove the 3 bolts and the fog lamp bracket.
4. To install, reverse the removal procedure.