


Light Sensor

 [Ford Ecat Electronic Parts Catalog](#)

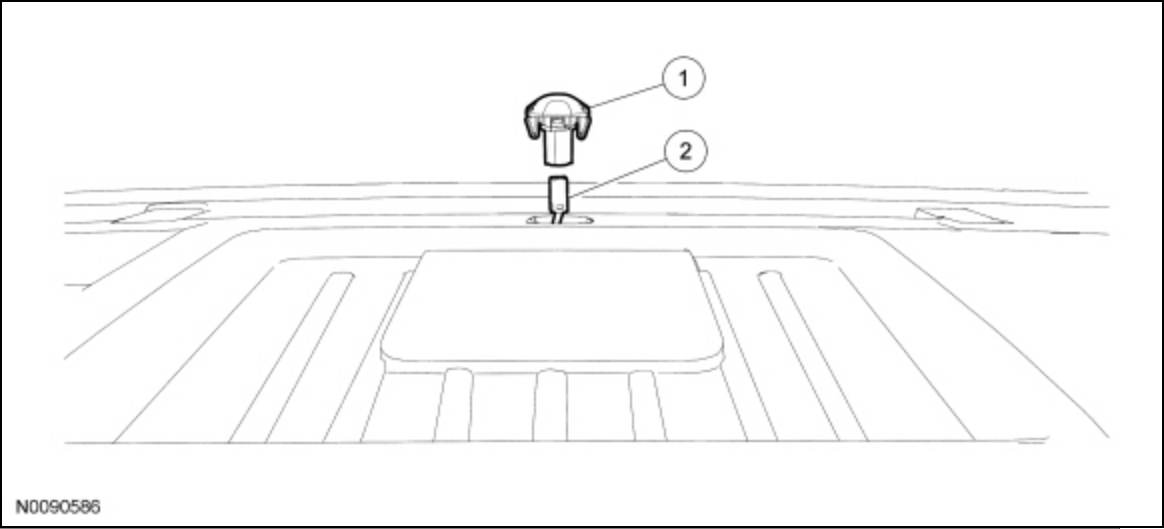

Item	Part Number	Description
1	13A018 13A018	Light sensor
2	—	Light sensor electrical connector (part of 14401)

Removal and Installation

1. Using a thin-bladed flat tool, remove the light sensor.
 - Disconnect the electrical connector.
2. To install, reverse the removal procedure.