


Interior Lamp


 [Ford Ecat Electronic Parts Catalog](#)

Front Lamp (Vehicles With Overhead Console)

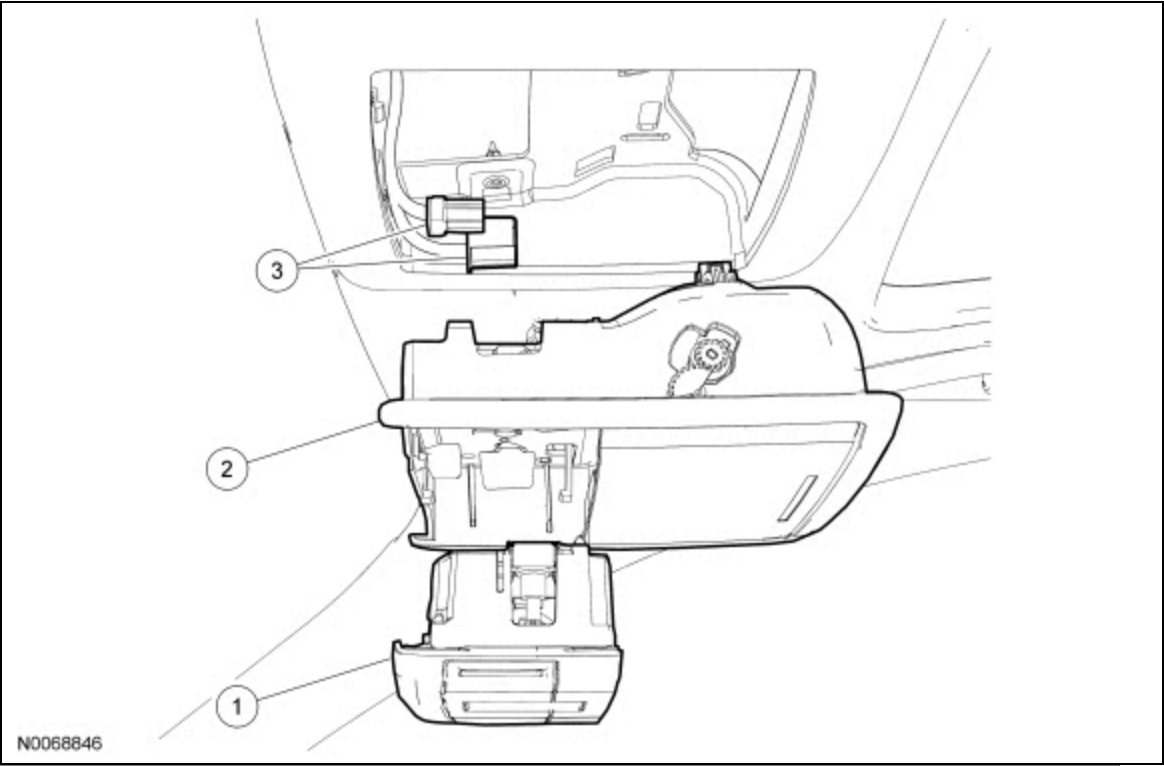

Item	Part Number	Description
1	13776 13776	Lamp assembly
2	54519A70 54519A70	Overhead console
3	—	Overhead console electrical connectors (part of 14358)

Front Lamp (Vehicles Without Overhead Console) and Rear Lamp

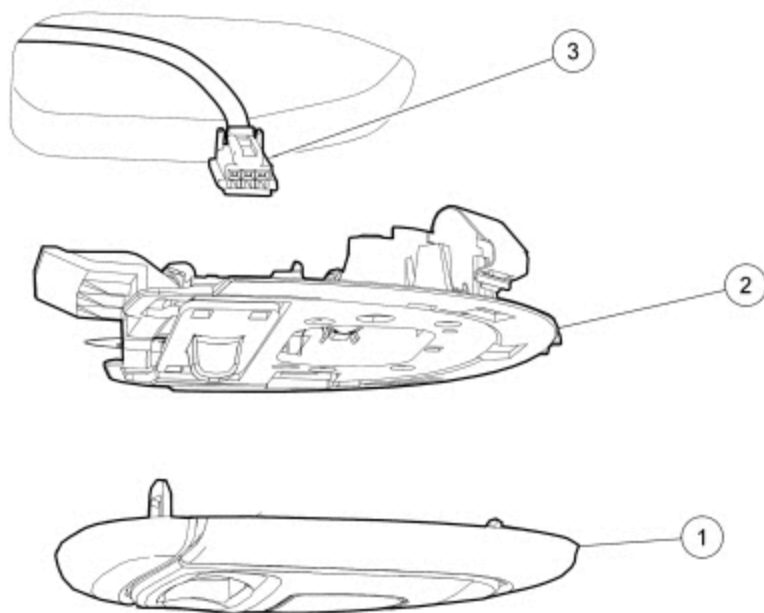

N0094094

Item	Part Number	Description
1	13783 13783	Interior lamp lens
2	13776 13776	Interior lamp
3	—	Interior lamp electrical connector (part of 14358)

Removal


Front lamp (vehicles with overhead console)

1. **NOTE:** Do not pull-down on the front of the overhead console.

Pull-down on the rear of the overhead console to release the overhead console from the retaining clips.

- Disconnect the electrical connectors.


2. Release the 4 retaining clips, and remove the lamp assembly from the overhead console.

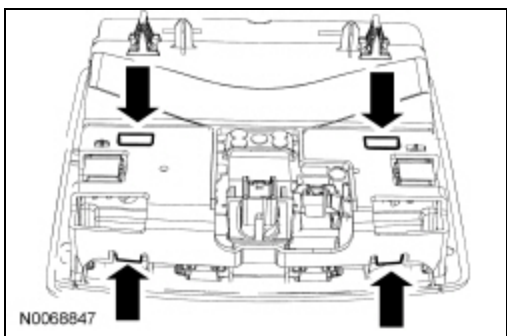

3. Release the 6 retaining clips, and remove the lens from the lamp assembly.

- **NOTE:** The bulbs are removed by pushing from the backside of the lamp assembly.


Replace the bulb(s) as necessary.

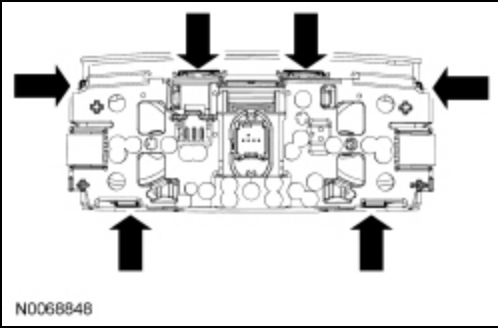


Front lamp (vehicles without overhead console) or rear lamp

4. **NOTE:** *The tabs (located just above the headliner) can be accessed with a small angled pick tool. They are released by pulling them away from the lamp assembly. Use care not to use too much pressure or the tabs may break.*

Release the 3 locking tabs and remove the interior lamp lens.

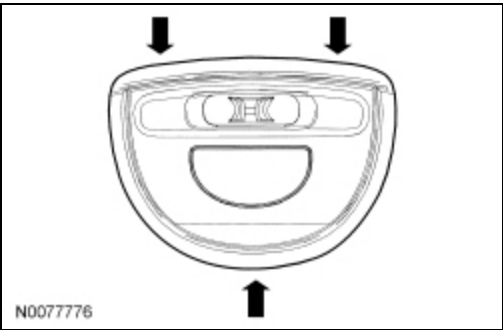

5. Release the 2 retaining clips (through the access holes) and remove the interior lamp.
- Disconnect the electrical connector.

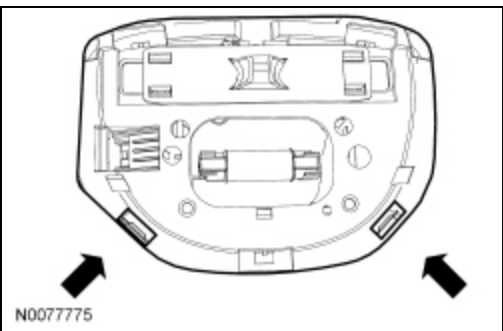

Installation

Front lamp (vehicles with overhead console)

1. Install the lens onto the lamp assembly.
2. Install the lamp assembly into the overhead console.
3. Connect the electrical connectors and install the overhead console.

Front lamp (vehicles without overhead console) or rear lamp

4. Install the interior lamp lens.
5. Connect the electrical connector and install the interior lamp.