

Universal Transmitter Programming



Lear Car2U® Transmitter Programming (Rolling Code)

WARNING: To avoid the risk of serious injury from the door closing, make sure that people and objects are clear of the garage door opener or security device that is being programmed. When programming a garage door, it is advised to park outside of the garage.

NOTE: Read the instructions completely before attempting to program the Lear Car2U® System. Because of the steps involved, it may be helpful to have an assistant when programming the universal transmitter. Programming the rolling code garage door opener involves time-sensitive actions. Read the entire procedure before beginning so the procedure can be carried out in a timely fashion. If the time-sensitive actions are not carried out in a timely fashion, the device times out and the procedure needs to be repeated.

NOTE: Make sure to keep the original remote control transmitter for use in other vehicles as well as for future Lear Car2U® System programming. It is only needed for fixed code device programming.

NOTE: In order to determine if you have a fixed code or a rolling code device, open the garage door opener transmitter and if there is a panel of coded dip switches present, the device is a fixed code device. Refer to Lear Car2U® Transmitter Programming (Fixed Code) procedure in this section. If there are no coded dip switches present, the device is a rolling code device and this procedure should be followed. If necessary, contact the Lear Car2U® Customer Service Center at 866-572-2728, or the customer support website at www.learcar2u.com.

1. Turn the ignition to the ON position.
2. Firmly press the 2 outside Lear Car2U® System buttons (at the same time) for 1-2 seconds, then release the buttons.
3. **NOTE:** Step 4 must be initiated within 30 seconds of pressing and releasing the "learn" or "smart" button.

At the garage door opener receiver (the motor-head unit) in the garage, locate the "learn" or "smart" button. This can usually be found near where the hanging antenna wire is attached to the motor-head unit; or it may be under the light bulb cover of the motor-head unit. Press and release the "learn" or "smart" button.

- For technical assistance, refer to the Owner's Literature. If necessary, contact the Lear Car2U® Customer Service Center at 866-572-2728, or the customer support website at www.learcar2u.com.

4. Return to the vehicle and firmly press and hold for 5-20 seconds the universal transmitter button that is desired to be programmed. During this time, the selected button red indicator light blinks slowly. Once the garage door begins to move, within one second, release the button. With the button released, the red indicator light begins to blink rapidly until programming is complete. Repeat the press/hold/release sequence a second time and depending on the brand of the garage door opener (or other rolling code equipped device), repeat this sequence a third time to complete the programming process.
5. After successful programming, the Lear Car2U® System operates the garage door opener using the button that was programmed. The red indicator light behind the programmed button illuminates to confirm the Lear Car2U® System is responding (and is programmed) to the button command.

Erasing the Lear Car2U® System Buttons (Rolling Code)

1. To erase the rolling code programming from the Lear Car2U® System, turn the ignition key to the ON position, firmly press and hold the 2 outside Lear Car2U® System buttons at the same time for approximately 20 seconds until the 3 red indicator lights begin to blink rapidly.

2. When the 3 red indicator lights begin to blink, release the buttons. The codes for all of the 3 buttons are erased.

Lear Car2U® Transmitter Programming (Fixed Code)

WARNING: To avoid the risk of serious injury from the door closing, make sure that people and objects are clear of the garage door opener or security device that is being programmed. When programming a garage door, it is advised to park outside of the garage.

NOTE: Do not use the Lear Car2U® System with any garage door opener that does not have a "stop and reverse" feature. This includes any garage door opener model manufactured before April 1, 1982.


NOTE: Read the instructions completely before attempting to program the Lear Car2U® System. Because of the steps involved, it may be helpful to have an assistant when programming the universal transmitter.

NOTE: Make sure to keep the original remote control transmitter for use in other vehicles as well as for future Lear Car2U® System programming. It is only needed for fixed code device programming.

NOTE: In order to determine if you have a fixed code or a rolling code device, open the garage door opener transmitter and if there is a panel of coded dip switches present, the device is a fixed code device. If there are no coded dip switches present, the device is a rolling code device. Refer to Lear Car2U® Transmitter Programming (Rolling Code) procedure in this section.

NOTE: In order to program a fixed code device, paper and a pen (or pencil) is necessary. Use the Switch Settings chart in Specifications as a note pad.

- 1. Open the battery cover of the universal transmitter to reveal the coded dip switches and their associated settings.

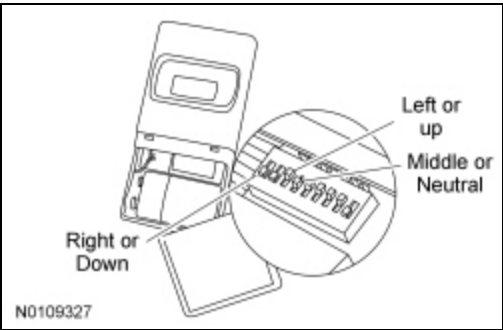

- 2. **NOTE:** When a coded dip switch is in the up, +, or on position, circle "Left" on the chart under the correct switch position number. When a switch is in the middle, 0 or neutral position, circle "Middle" on the chart. When a switch is in the down, -, or off position, circle "Right" on the chart.

Record the dip switch settings on the copy of the switch settings chart by circling the setting under the correct switch position number. Do this from left to right for all 8 to 12 switches (the number of switches varies between transmitter manufacturers). For additional information, refer to the chart below or to the Switch Settings chart in Specifications in this section.


Switch position	1	2	3	4	5	6	7	8	9	10	11	12
Up or on	Left	Left	Left	Left	Left	Left	Left	Left	Left	Left	Left	Left
Middle or neutral	Middle	Middle	Middle	Middle	Middle	Middle	Middle	Middle	Middle	Middle	Middle	Middle
Down or off	Right	Right	Right	Right	Right	Right	Right	Right	Right	Right	Right	Right

N0109328

- 3. Turn the ignition to the ON position.
- 4. To input the dip switch settings into the Lear Car2U® System, press (at the same time) all 3 Lear Car2U® System buttons for a few seconds and then release to put the device into the programming mode. The 3 red indicator lights

blink slowly. Within 2.5 minutes, enter the corresponding dip switch settings from left to right (starting with number 1) into the Lear Car2U® System by pressing and releasing the buttons corresponding to the settings you circled.

- For example, if the dip switch settings were switch 1 (Right), switch 2 (Right), switch 3 (Left), switch 4 (Middle) etc., press and release the right Lear Car2U® System button, then the right button, then the left button, then the middle button, etc.

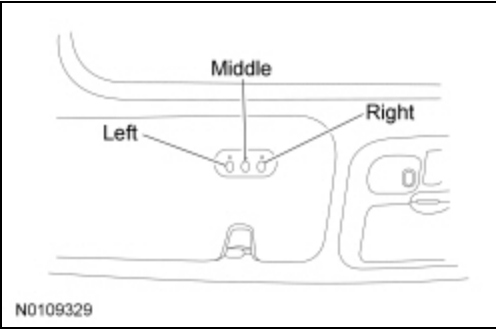

5. After inputting the dip switch settings, press and release (at the same time) all 3 Lear Car2U® System buttons. The 3 red indicator lights are turned on continuously.
6. Press and hold the Lear Car2U® System button chosen to control the garage door.
7. Once the garage door starts to move, within one second, release the button. During this time, the selected button indicator light blinks slowly. Do not release the button until the garage door moves, which may take anywhere from 5-55 seconds, depending on the make/model of the garage door opener.
8. The 3 red indicator lights begin to blink rapidly until programming is complete. If the garage door opener does not operate, repeat Steps 1-7.
 - For technical assistance, refer to the Owner's Literature. If necessary, contact the Lear Car2U® Customer Service Center at 866-572-2728, or the customer support website at www.learcar2u.com.
9. After successful programming, the Lear Car2U® System operates the garage door opener using the button that was programmed. The red indicator light behind the programmed button turns on to confirm the Lear Car2U® System is responding (and is programmed) to the button command.

Erasing the Lear Car2U® System Buttons (Fixed Code)

1. To erase the fixed code programming from the Lear Car2U® System, turn the ignition key to the ON position, firmly press and hold the 2 outside Lear Car2U® System buttons at the same time for approximately 20 seconds until the 3 red indicator lights begin to blink rapidly.
2. When the 3 red indicator lights begin to blink, release the buttons. The codes for all of the 3 buttons are erased.