


Radiator Grille Support


 [Ford Ecat Electronic Parts Catalog](#)

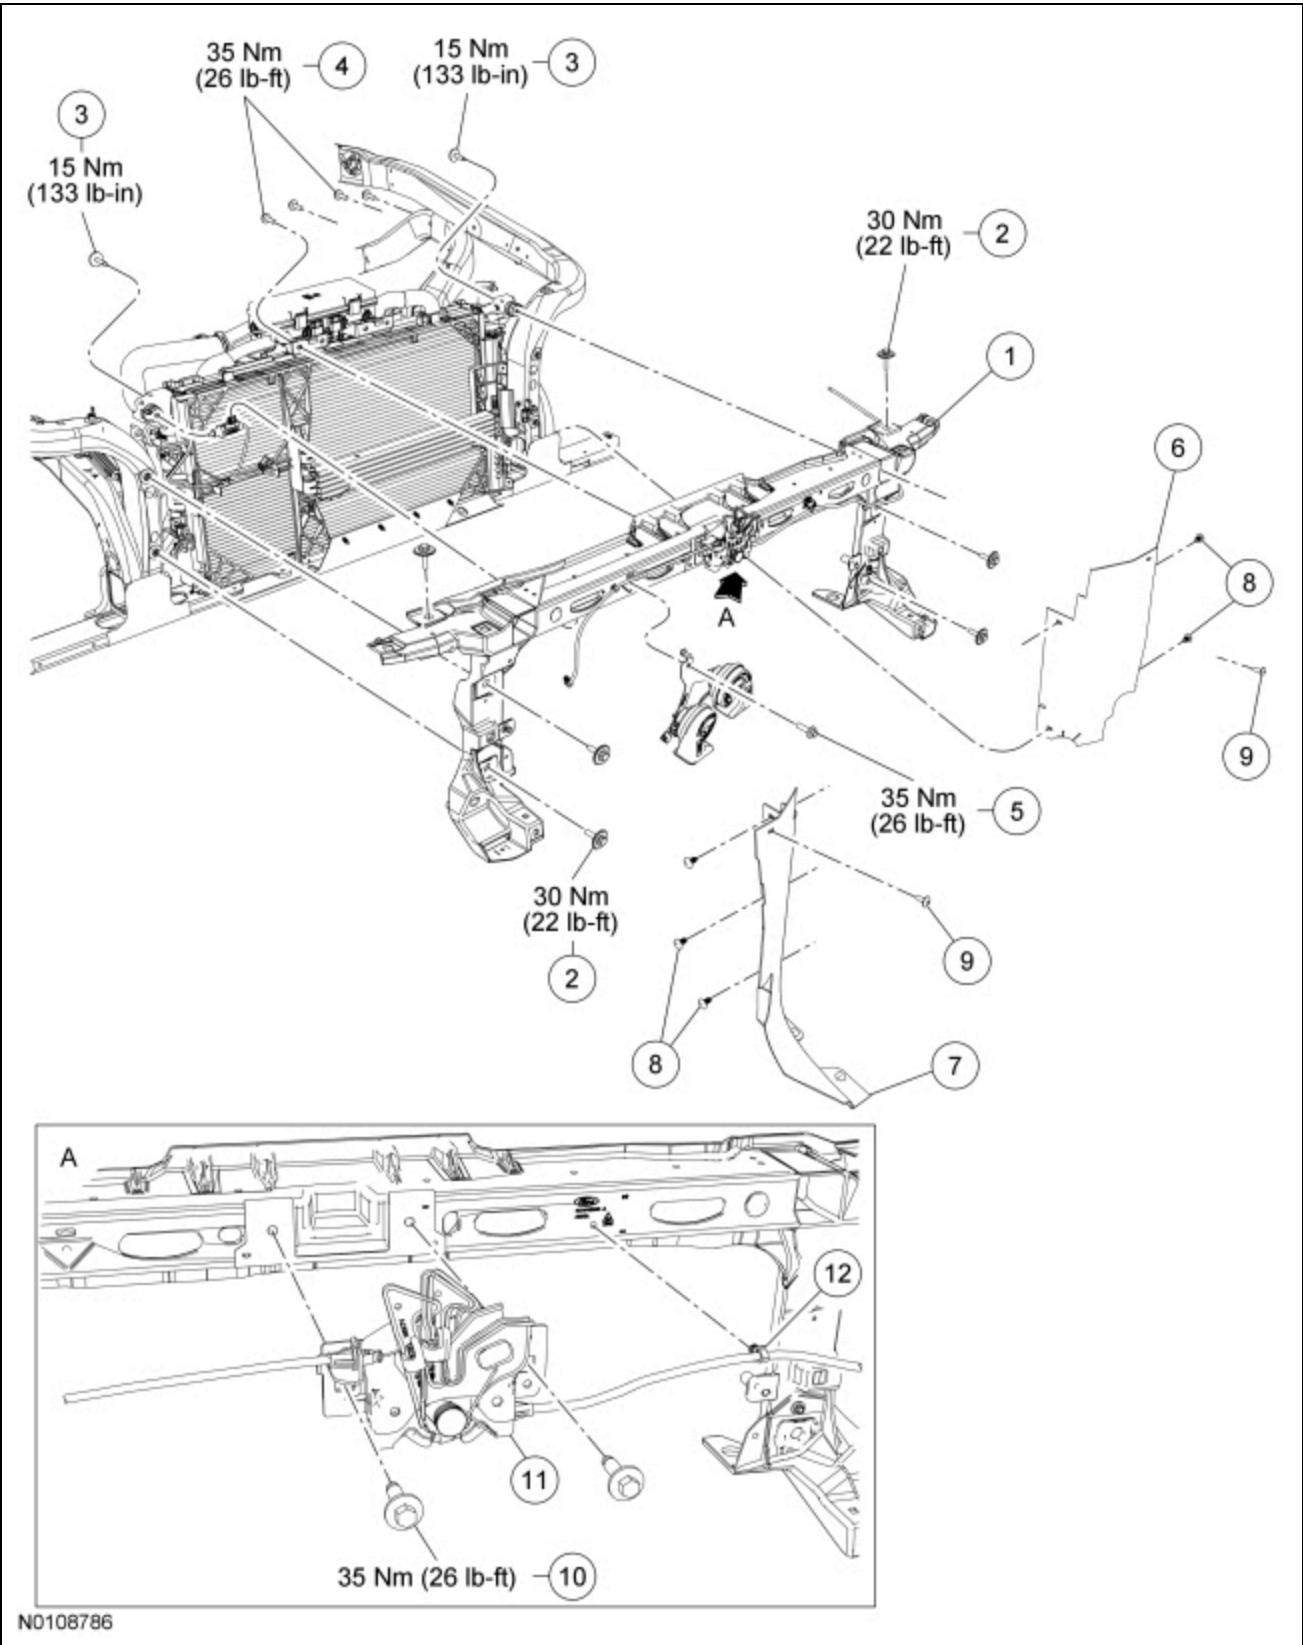


Item	Part Number	Description
1	16E16616E166	Radiator grille support

2	W712360 W712360	Radiator grille support bolts (6 required)
3	W710309 W710309	Coolant module bolts (2 required)
4	W711851 W711851	Smart Junction Box (SJB) bolts (4 required)
5	W711848 W711848	Horn bracket bolt
6	8A261 8A261	LH air deflector
7	8A211 8A211	RH air deflector
8	W388577 W388577	Air deflector pushpins (5 required)
9	W706350 W706350	Air deflector scrivenets (2 required)
10	W711848 W711848	Hood release bolt (2 required)
11	16700 16700	Hood release
12	W712867 W712867	Hood release cable retainer (5 required)

1. Remove the front bumper. For additional information, refer to Section 501-19.
2. Remove the front bumper cover. For additional information, refer to Section 501-19.
3. Depower the Supplemental Restraint System (SRS) . For additional information, refer to Supplement Restraint System Depower and Repower in Section 501-20B.
4. Remove the front LH and RH ~~SRS~~ impact sensor bolt and position the sensor and harness aside.
5. Remove the 2 hood release bolts.
 - To install, tighten to 35 Nm (26 lb-ft).
6. Release the hood cable retainers from the radiator grille support and position the hood release and cable aside.
7. Disconnect the horn wiring connector.
8. Remove the ambient air sensor retainer from the radiator grille support and position the sensor and harness aside.
9. Remove the horn bracket bolt.
 - To install, tighten to 35 Nm (26 lb-ft).
10. Remove the 4 Smart Junction Box (SJB) bolts and position the ~~SJB~~ inward.
 - To install, tighten to 35 Nm (26 lb-ft).

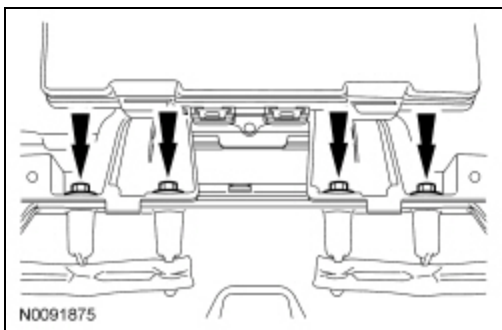

11. Remove the 2 coolant module bolts-to-radiator from the rear of the grille support.
 - To install, tighten to 15 Nm (133 lb-in).

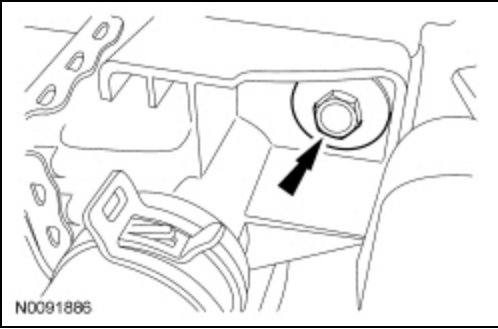

12. Remove the 6 radiator grille support bolts (3 each side).

- To install, tighten to 30 Nm (22 lb-ft).

13. **NOTE:** *It will be necessary to lift the cooling module upward and slide the radiator support forward to separate the radiator grille support from the cooling module.*

Remove the radiator grille support.

14. **NOTE:** *Inspect all of the radiator grille support insulators. Replace as necessary.*

To install, reverse the removal procedure.

- Transfer all necessary components.
- Repower the Supplemental Restraint System (SRS) . For additional information, refer to Supplement Restraint System Depower and Repower in Section 501-20B.