


# Door Alignment — Rear, SuperCab




## All adjustments


1. Remove the upper rear door striker cover.

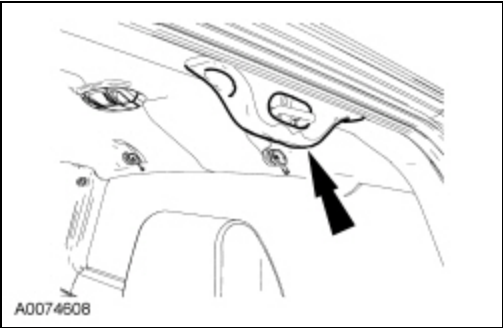

2. Remove the upper rear door striker.

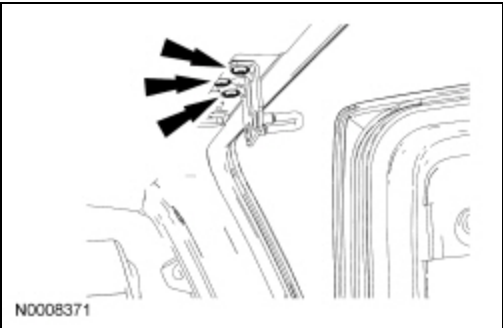


3. Remove the lower rear door striker.

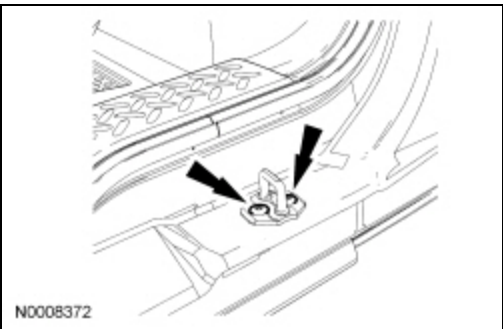

## Horizontal and vertical adjustments


4. Loosen the rear door hinge-to-rear door bolts.

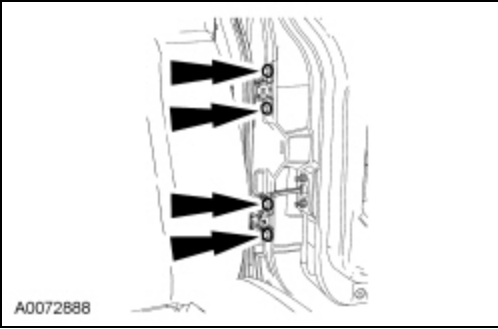

5. Adjust the rear door. For additional information, refer to the dimensions in Section 501-35.
6. Tighten the rear door hinge-to-rear door bolts to 30 Nm (22 lb-ft).

### Fore and aft adjustment


7. Remove the corner trim panel. For additional information, refer to Section 501-05.
8. Loosen the rear door hinge-to-body nuts.

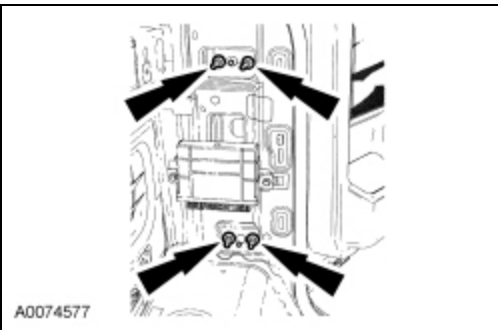


9. Adjust the door. For additional information, refer to the dimensions in Section 501-35.
10. Tighten the rear door hinge-to-body nuts to 30 Nm (22 lb-ft).
11. Install the corner trim panel. For additional information, refer to Section 501-05.

### All adjustments

12. Install the lower rear door striker.
  - Tighten to 25 Nm (18 lb-ft).

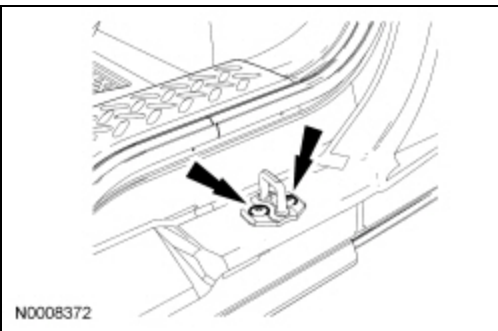

13. Install the upper rear door striker.
  - Tighten to 25 Nm (18 lb-ft).

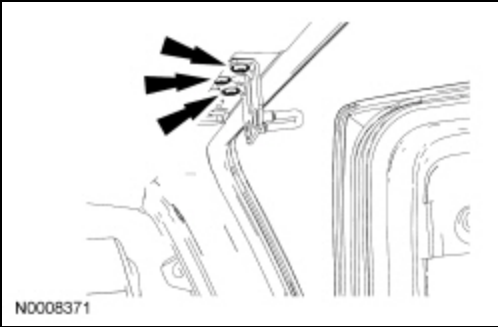

14. Install the upper rear door striker cover.

