


Door Alignment — Rear, SuperCrew




All adjustments

- 1. Remove the rear door striker.

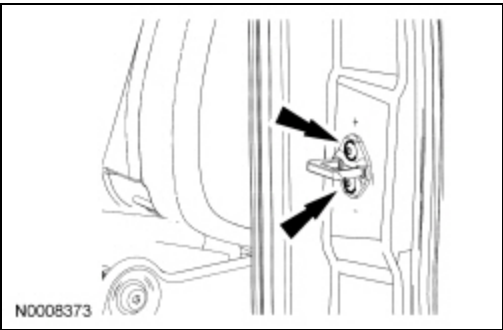

Horizontal and vertical adjustments


- 2. Loosen the rear door hinge-to-rear door bolts.

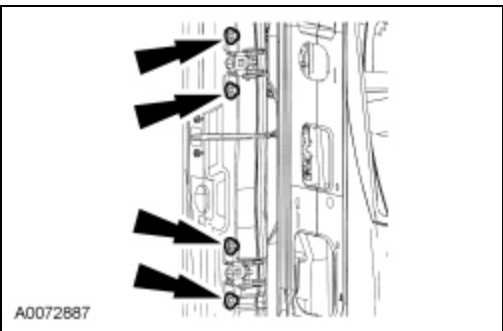

- 3. Adjust the rear door. For additional information, refer to the dimensions in Section 501-35.
- 4. Tighten the rear door hinge-to-rear door bolts to 30 Nm (22 lb-ft).

Fore and aft adjustment

- 5. Remove the B-pillar trim panel. For additional information, refer to Section 501-05.
- 6. Loosen the rear door hinge-to-body nuts.

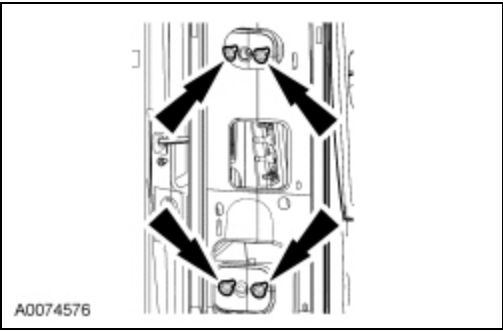

- 7. Adjust the door. For additional information, refer to the dimensions in Section 501-35.

8. Tighten the rear door hinge-to-body nuts to 30 Nm (22 lb-ft).

9. Install the B-pillar trim panel. For additional information, refer to Section 501-05.

All adjustments

10. Install the rear door striker.

- Tighten to 25 Nm (18 lb-ft).

