


Door — Front



NOTE: Right side shown, left side similar.

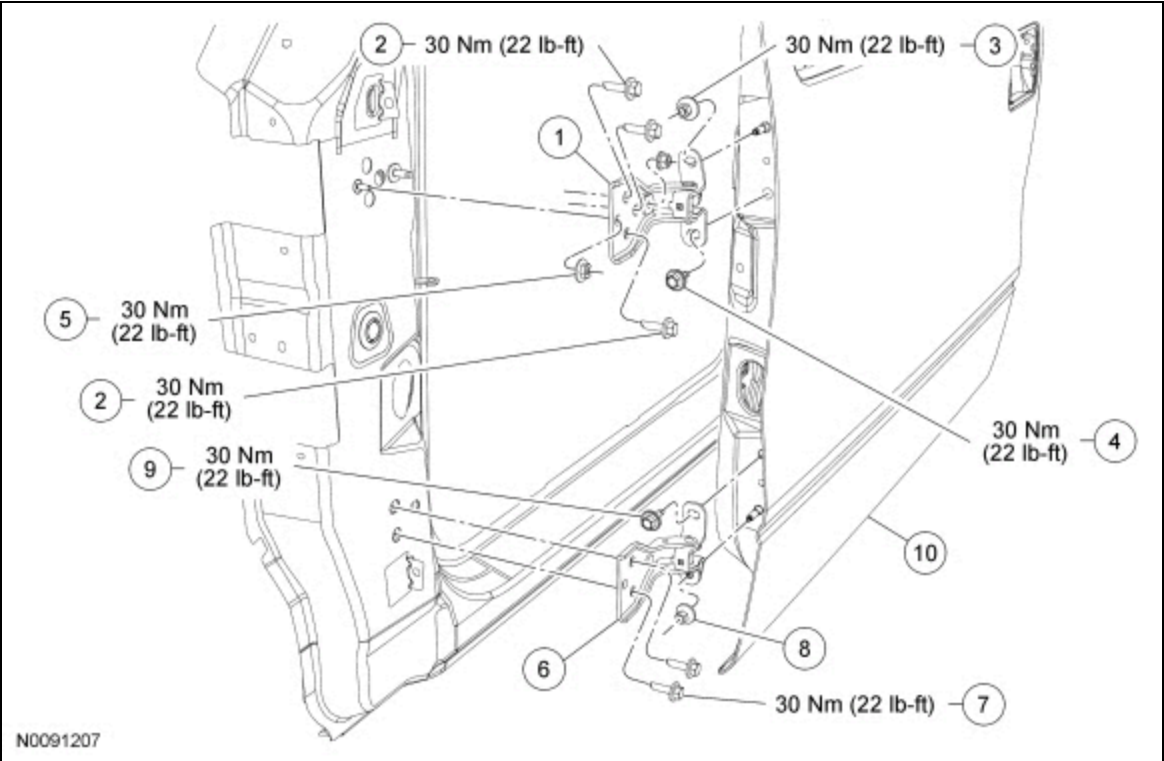

Item	Part Number	Description
1	2280022800 RH/ 22801 LH RH/ 22801 LH	Front door upper hinge
2	W708880W708880	Front door upper hinge-to-body bolts
3	2281022810	Front door upper hinge-to-door nut
4	W708877W708877	Front door upper hinge-to-door bolt
5	N621941N621941	Front door upper hinge-to-body nut
6	2281022810 RH/ 22811 LH RH/ 22811 LH	Front door lower hinge
7	W708877W708877	Front door lower hinge-to-body bolt
8	N806564N806564	Front door lower hinge-to-door nut
9	W708877W708877	Front door lower hinge-to-door bolt
10	2012420124 RH/ 20125 LH RH/ 20125 LH	Front door

Removal and Installation

All vehicles


1. Depower the Supplemental Restraint System (SRS) . For additional information, refer to Section 501-20B.

2. Open the front door and support as needed.


Vehicles not equipped with an A-pillar electrical connector

3. Remove the door speaker. For additional information, Refer to the appropriate section in Group 415 for the procedure.

4. Remove the armrest backing screw and remove the armrest backing.

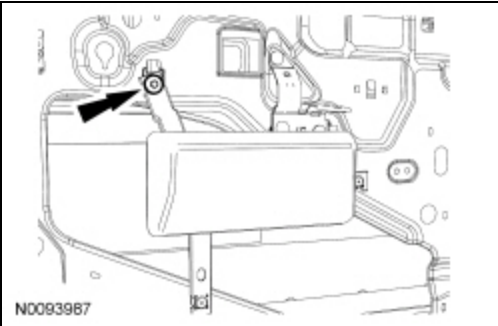

5. Remove the armrest bracket bolts and remove the bracket.

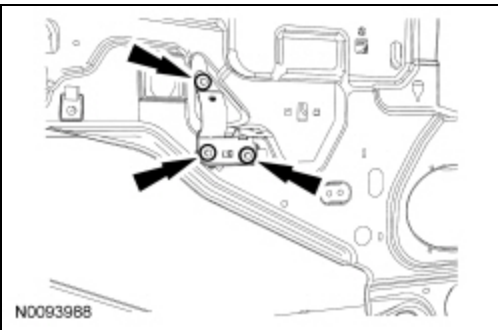

6. Pull outward to release the water shield adhesive and remove the water shield.

7. Pull outward to release the sail panel water shield adhesive and remove the sail panel water shield.

8. Pull outward to release the wiring harness retainers.



9. Disconnect the keyless entry and door lock electrical connectors.

10. Disconnect the mirror electrical connectors.

11. Disconnect the side impact sensor electrical connector.

12. Route the wiring harness through the door.

Vehicles equipped with an A-pillar electrical connector

13. Disconnect the front door A-pillar electrical connector.

NOTICE: The following steps require the aid of an assistant. Failure to follow this direction may result in damage to the vehicle.

14. Remove the lower front door hinge-to-door nut and bolt.
 - To install, tighten the bolt to 30 Nm (22 lb-ft).
 - To install, tighten the nut to 30 Nm (22 lb-ft).
15. Remove the upper front door hinge-to-door nut and bolt and remove the front door.
 - To install, tighten the bolt to 30 Nm (22 lb-ft).
 - To install, tighten the nut to 30 Nm (22 lb-ft).
16. **NOTICE: To minimize the possibility of cross threading, hand-start all fasteners during the installation.**

To install, reverse the removal procedure.

 - If installing a new front door, transfer parts as necessary.
17. Adjust the front door. For additional information, refer to Door Alignment — Front in this section.