


Door — Rear, SuperCrew



NOTE: Right side shown, left side similar.

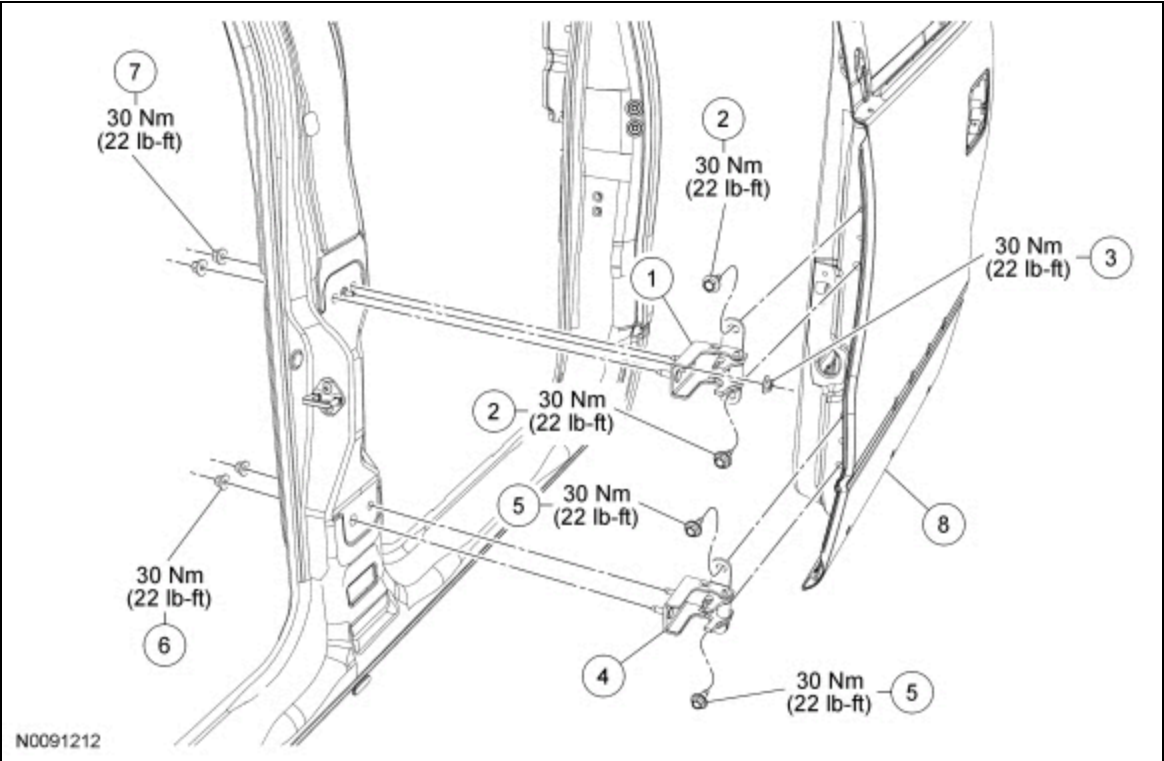

Item	Part Number	Description
1	2680026800	Rear door upper hinge
2	W709544W709544	Upper rear door hinge-to-rear door bolts
3	W709361W709361	Upper rear door hinge-to-body nut
4	W709189W709189	Lower rear door hinge
5	2681026810	Lower rear door hinge-to-rear door bolts
6	W709361W709361	Lower rear door hinge-to-body nut
7	W709361W709361	Upper rear door hinge-to-body nut
8	2463024630 RH/ 24631 LH RH/ 24631 LH	Rear door


Removal and Installation

All vehicles

- 1. Open the rear door and support as needed.

Vehicles not equipped with a B-pillar electrical connector

2. Depower the Supplemental Restraint System (SRS) . For additional information, refer to Section 501-20B.
3. Remove the door speaker. For additional information, Refer to the appropriate section in Group 415 for the procedure.
4. Reposition the water shield.
5. Pull outward to release the wiring harness retainers from the door.

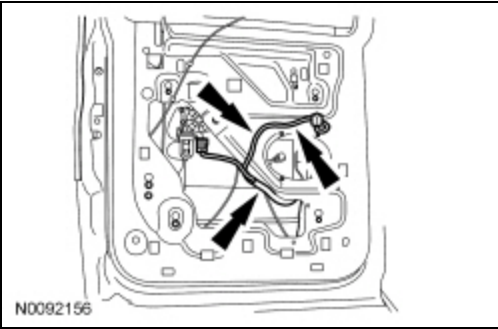

6. Disconnect the window motor electrical connector.
7. Disconnect the door lock electrical connector.
8. Route the wiring harness out of the door.

Vehicles equipped with a B-pillar electrical connector

9. Disconnect the rear door electrical connector.

All vehicles

10. Remove the lower rear door hinge-to-rear door bolts.
 - To install, tighten bolt to 30 Nm (22 lb-ft).
11. **NOTICE: To avoid damaging the door, this step requires an assistant.**

Remove the upper rear door hinge-to-rear door bolts and remove the rear door.

- To install, tighten bolt to 30 Nm (22 lb-ft).

12. **NOTICE: To minimize the possibility of cross threading, hand-start all fasteners during the installation.**

To install, reverse the removal procedure.

- If installing a new rear door, transfer parts as necessary.

13. Adjust the rear door. For additional information, refer to Door Alignment — Rear, SuperCrew in this section.