


Tailgate Lift Assist Torsion Rod

 [Ford Ecat Electronic Parts Catalog](#)

Material


Item	Specification
Motorcraft® Silicone Gasket and Sealant TA-30	WSE-M4G323-A4

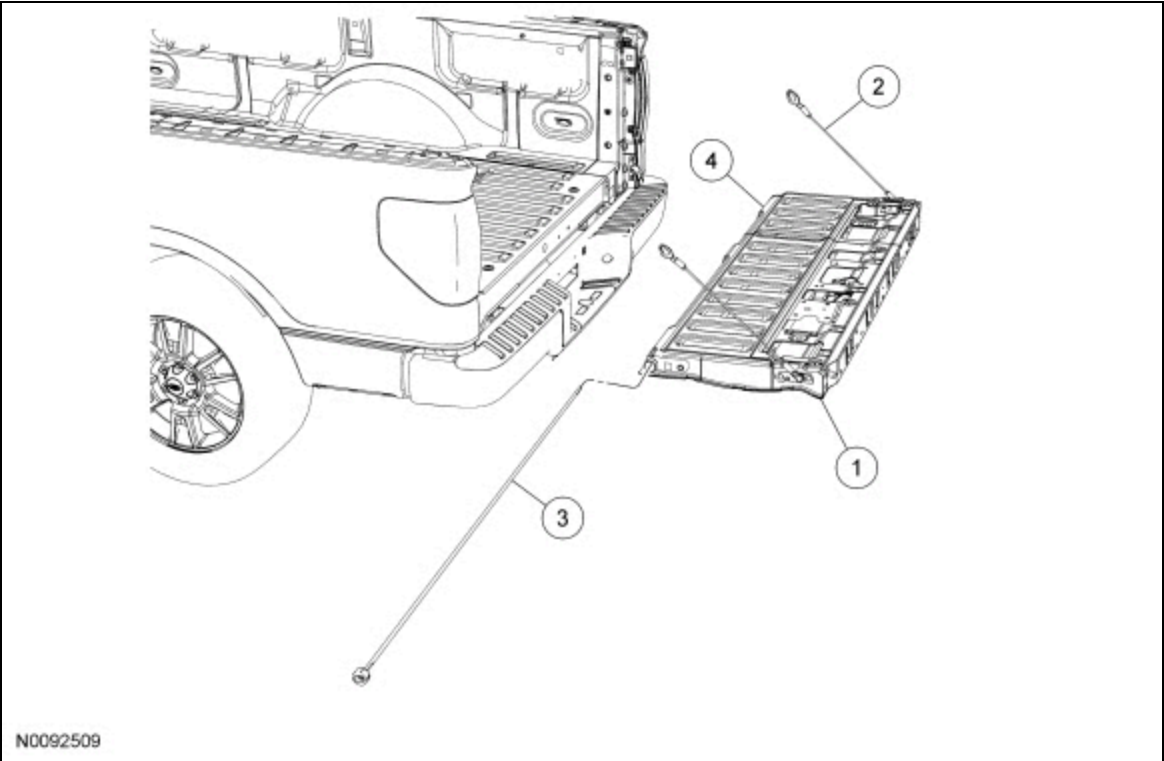

Item	Part Number	Description
1	9940700 9940700	Tailgate assembly
2	9944410 9944410 RH/ 9944411 LH RH/ 9944411 LH	Tailgate support cable
3	99402A68 99402A68 -A (without step)/ 99402A68-B (with step)-A (without step)/ 99402A68-B (with step)	Torsion rod
4	W505258 W505258	Clamp block machine screw


Removal

1. If equipped, disconnect the reverse camera wiring harness connector from the main harness and release the retaining clip. Slide the harness through the box crossmember.

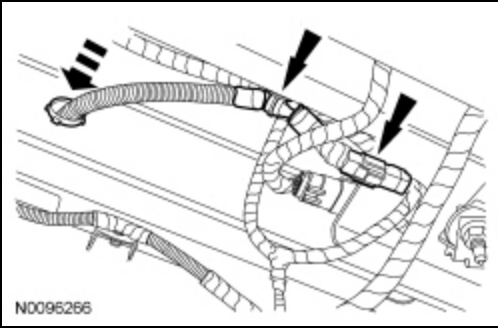


2. Remove the tailgate from the vehicle.

- Detach both tailgate support cables from the sides of the pickup bed, then lower the tailgate to approximately 41 degrees from vertical.
- Pull the **RH** side of the gate out and away from the hinge.

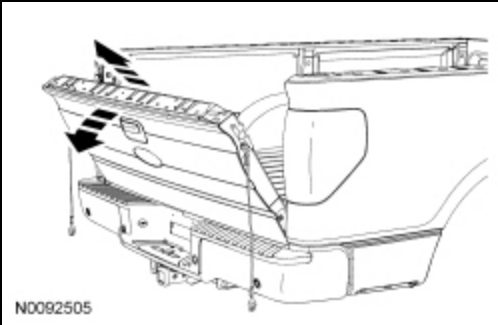


3. Raise the gate back up to approximately 10 degrees from vertical while keeping the **RH** tailgate pivot close to the hinge. Slide the tailgate to the right to release the **LH** hinge.

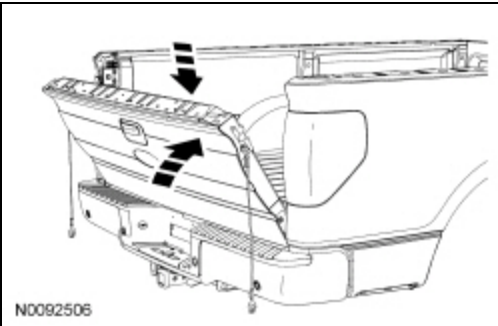


4. Set the tailgate on a no-scratch surface.

5. Loosen the clamp block machine screw 2-3 turns.

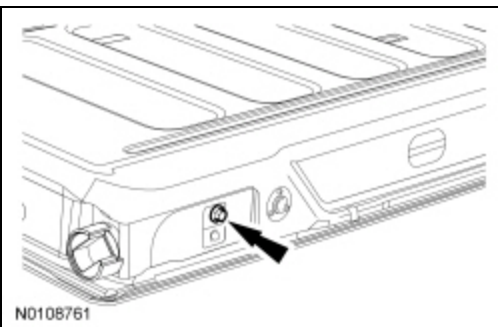


6. Remove the torsion rod from the tailgate. If the broken end of the torsion rod is stuck in the clamp block, carry out Steps 7 through 11.

7. Remove the urethane bushing from the **RH** pivot.

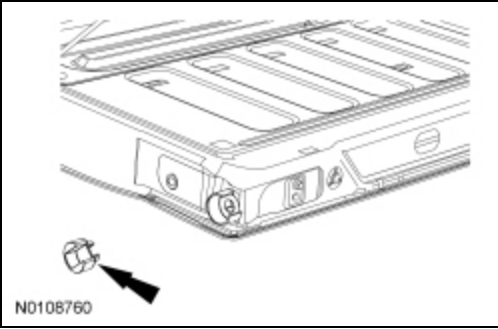


8. From the hole in the base of the **RH** pivot, drill an 8 mm (0.31 in) access hole through the tailgate inner panel.

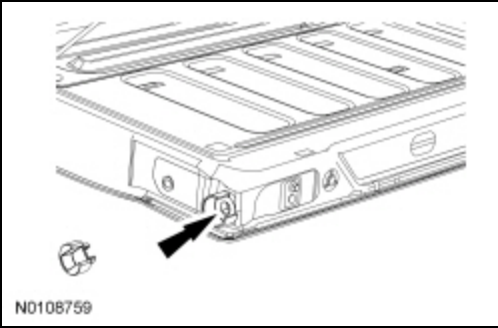


9. **NOTE:** *Portions of the tailgate are removed for clarity.*

Use a drift to press the broken end of the rod from the clamp block, then remove broken end through drain hole in the bottom edge of the tailgate.

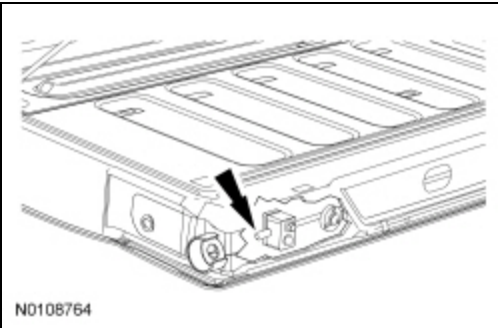

10. Seal the 8 mm (0.31 in) access hole in the tailgate inner panel with silicone gasket and sealant.


11. Install the urethane bushing in the **RH** pivot.

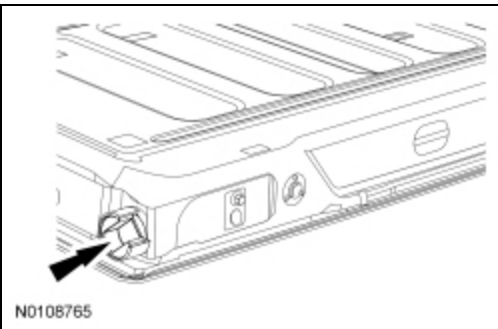

Installation


1. **NOTE:** *Portions of the tailgate are removed for clarity.*

Install a new torsion rod through the **LH** pivot. Guide the rod into the clamp block.

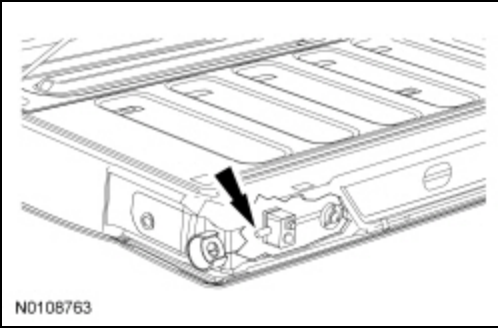


2. **NOTE:** *The torsion rod must be installed with the same orientation as shown.*

Position the torsion rod so that the end bottoms out and is flush with the **LH** pivot.

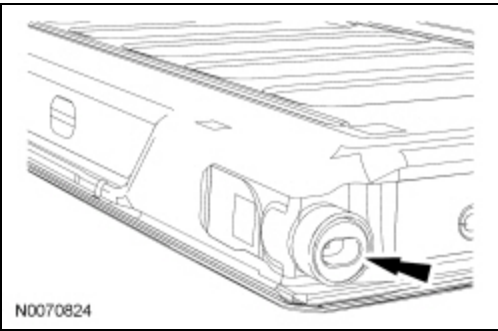


3. Tighten the clamp block machine screw(s).


- To install, tighten to 14 Nm (124 lb-in).

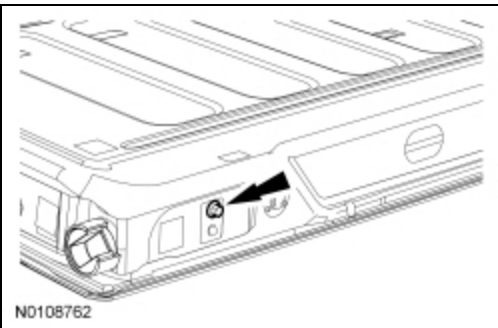


4. Position the reverse camera wiring harness through the box crossmember.

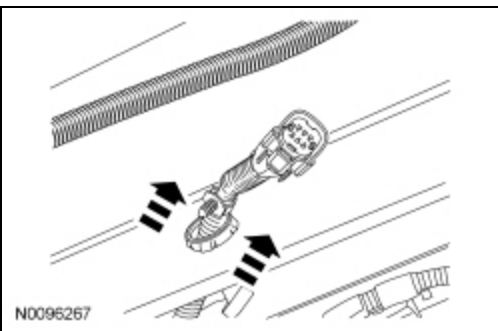

5. Position the tailgate so the **LH** tailgate pivot is close to the **LH** hinge and the tailgate is approximately 10 degrees from vertical. Keep the **RH** tailgate pivot close to the **RH** hinge, then slide the tailgate left to engage the **LH** pivot on the **LH** hinge.

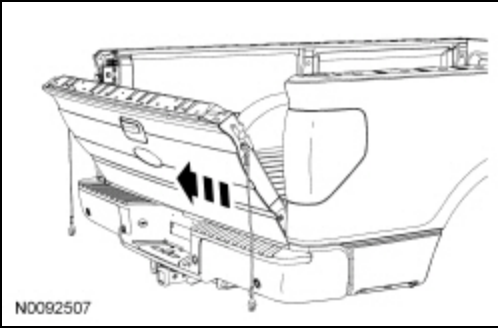

6. Position the tailgate so that it is approximately 41 degrees from vertical. Push the **RH** pivot onto the hinge. Attach both tailgate support cables to the sides of the pickup bed.

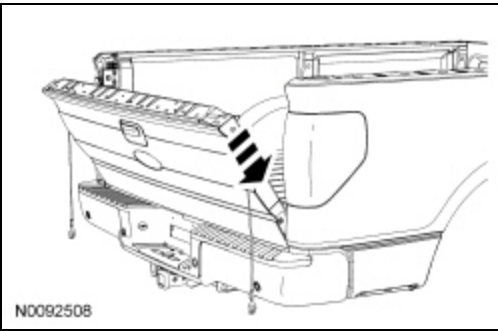

7. Connect the reverse camera wiring harness connector to the main harness connector and position the reverse camera wiring harness into the retainer. Close the retainer.

