


B-Pillar Trim Panel — Regular Cab



Removal and Installation


1. Position seats fully down and forward.
2. Depower the Supplemental Restraint System (SRS) . For additional information, refer to Section 501-20B.
3. Pull upward to release the scuff plate clips and remove the front door scuff plate.
 - Detach the scuff plate from the weatherstrip.

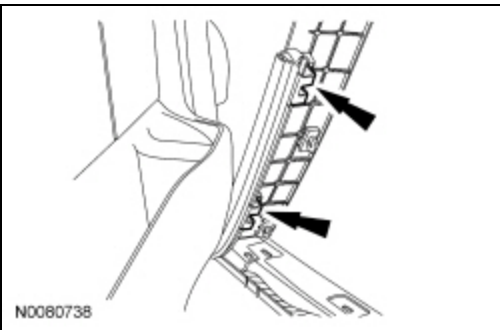

4. Position the weatherstrips aside.
 - If equipped, position the rear weatherstrips aside.
5. Remove the safety belt D-ring trim cover.
6. Remove the safety belt D-ring bolt.
 - To install, tighten to 40 Nm (30 lb-ft).
7. Remove the B-pillar trim panel pin-type retainer.
8. **NOTE:** *Starting at the top of the cover, use a non-marring tool.*

Remove the B-pillar trim panel bolt cover.

9. Remove the B-pillar trim panel bolt.
 - To install, tighten to 9 Nm (80 lb-in).
10. Remove the safety belt anchor bolt trim cover.
11. Remove the safety belt anchor bolt.
 - Disconnect electrical connector.
 - To install, tighten to 40 Nm (30 lb-ft).
12. Remove the safety belt trim ring.

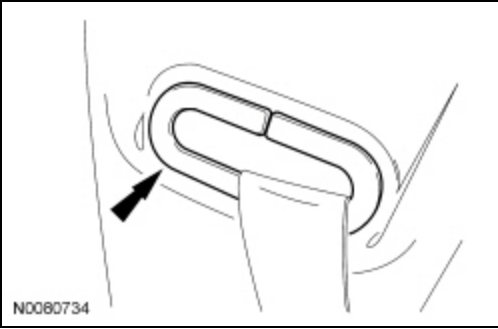

13. Remove the B-pillar trim panel.

- Position the safety belt through the B-pillar trim panel.

14. **NOTE:** *The B-pillar trim panel has a 2-way locator and a 4-way locator that must be positioned correctly on installation.*

To install, reverse the removal procedure.