


B-Pillar Trim Panel — SuperCab



Removal and Installation

1. Remove the rear seat backrest. For additional information, refer to Section 501-10.
2. Pull upward to release the scuff plate clips and remove the scuff plate trim panel.
 - Detach the scuff plate from the weatherstrip.

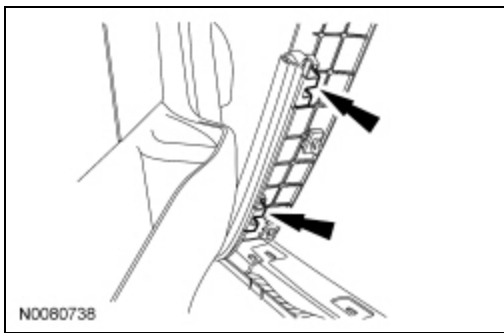

3. Reposition the rear door weatherstrip.
4. Remove the B-pillar trim panel pin-type retainer.
5. Remove the B-pillar trim panel bolt cover.
6. **NOTE:** *Starting at the top of the cover, use a non-marring tool.*

Remove the B-pillar trim panel bolt.

- To install, tighten to 9 Nm (80 lb-in).

7. Pull inward to release the B-pillar trim panel clips.
8. Reposition the B-pillar trim panel.
9. Remove the safety belt anchor bolt.
 - To install, tighten to 40 Nm (30 lb-ft).
10. Reposition the safety belt through the B-pillar trim panel and remove the B-pillar trim panel.
11. To install, reverse the removal procedure.