


B-Pillar Trim Panel — SuperCrew



Removal and Installation


1. Position seats fully down and forward.
2. Depower the Supplemental Restraint System (SRS) . For additional information, refer to Section 501-20B.
3. Pull upward to release the scuff plate clips and remove the front door scuff plate.
 - Detach the scuff plate from the weatherstrip.

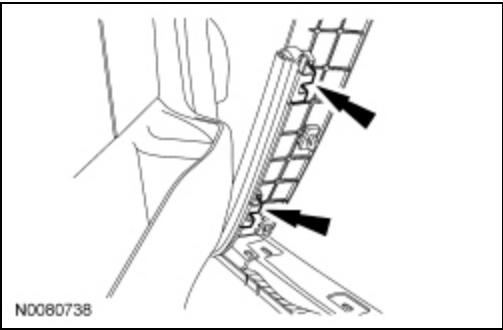


4. Position the front and rear weatherstrips aside.
5. Remove the safety belt D-ring trim cover.
6. Remove the safety belt D-ring bolt.
 - To install, tighten to 40 Nm (30 lb-ft).
7. **NOTE:** Starting at the top of the cover, use a non-marring tool.

Remove the B-pillar bolt cover.

8. Remove the B-pillar bolt.

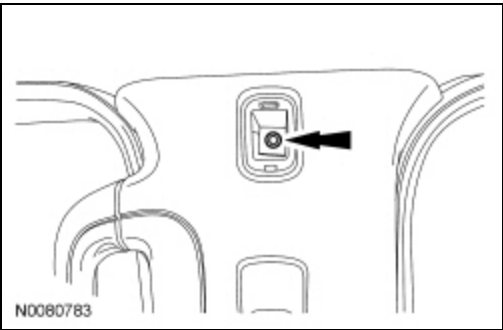

9. Remove the safety belt anchor bolt trim cover.

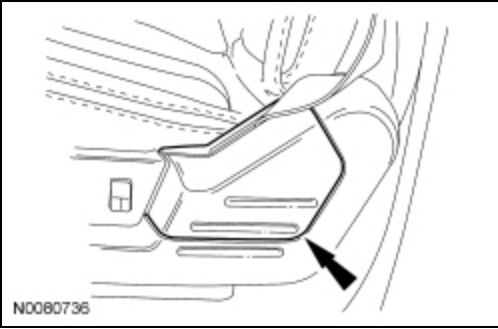


10. Remove the safety belt anchor bolt.


- Disconnect electrical connector.
- To install, tighten to 40 Nm (30 lb-ft).

11. Pull upward to release the scuff plate clips and remove the rear door scuff plate.

- Detach the scuff plate from the weatherstrip clip.

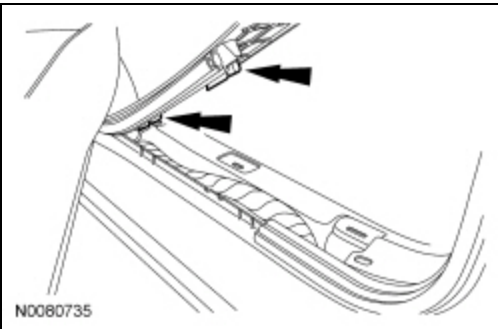

12. Remove the safety belt trim ring and pull the safety belt through the B-pillar.

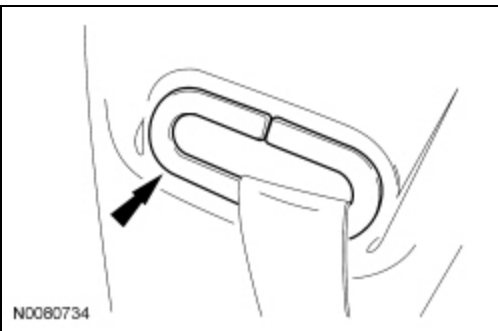

13. Remove the B-pillar trim panel.

14. **NOTE:** The B-pillar trim panel has a 2-way locator and a 4-way locator that must be positioned correctly on installation.

To install, reverse the removal procedure.