


Cowl Side Trim Panel



Removal and Installation

Both sides

1. Pull upward to release the scuff plate clips and remove the front door scuff plate.
 - Detach the scuff plate from the weatherstrip.

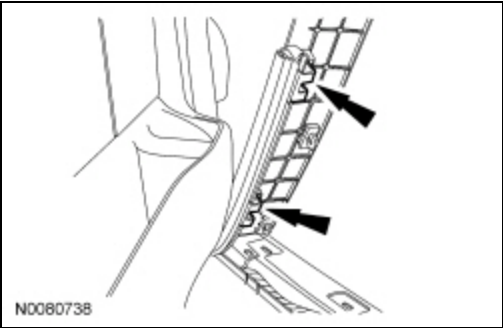


LH side


2. Remove the cowl trim panel.

RH side

3. Remove the fuse panel access door.

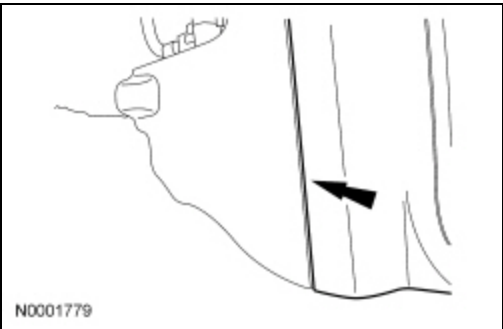

4. Remove the pin-type retainer from the cowl trim panel.

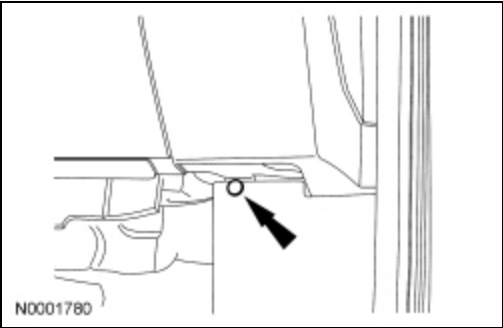

Both sides

5. Remove the cowl trim panel.

6. **NOTE:** *Make sure the cowl side trim panel J-hook is correctly installed.*

To install, reverse the removal procedure.