


Door Trim Panel — Rear, SuperCab



NOTE: LH side shown, RH side similar.

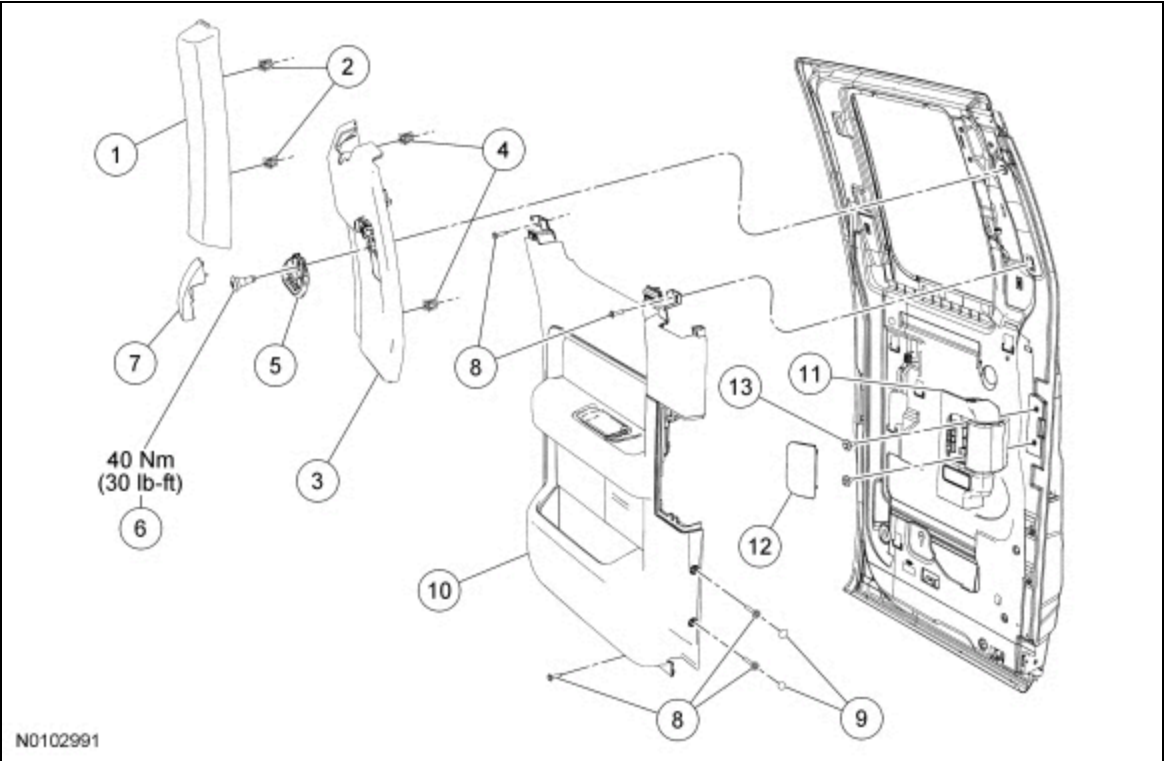

Item	Part Number	Description
1	2550425504-G RH/ 25505-G LH-G RH/ 25505-G LH	Rear door rear garnish moulding
2	W701882W701882	Rear door rear garnish moulding clips (2 required)
3	2550425504-A RH/ 25505-A LH-A RH/ 25505-A LH	Rear door front garnish moulding
4	W701882W701882	Rear door front garnish moulding clips (2 required)
5	—	Safety belt D-ring (part of 612D64 RH/ 612D65 LH)
6	—	Safety belt D-ring bolt (part of 612D64 RH/ 612D65 LH)
7	—	Safety belt D-ring bolt cover (part of 612D64 RH/ 612D65 LH)
8	W701930W701930	Rear door trim panel screws (5 required)
9	—	Rear door trim panel screw covers (part of 27406 RH/ 27407 LH)
10	2740627406 RH/ 27407 LH RH/	Rear door trim panel

	27407 LH	
11	1822601 1822601 LH/ 1822600 RH LH/ 1822600 RH	Rear door inside door handle bolt
12	1822670 1822670	Rear door inside door handle cover
13	W707398 W707398	Rear door inside door handle bolt (2 required)

Removal and Installation

1. Remove the inside door handle cover.
2. Remove the 2 inside door handle bolts.
3. Pull out the inside door handle and position the handle aside.
4. If equipped, remove the window control switch. For additional information, refer to Section 501-11.
5. Remove the rear window rear garnish moulding.
 - Pull outward to release the garnish moulding clips from the door.
6. Remove the safety belt D-ring.
 - Remove the safety belt D-ring cover.
 - Remove the safety belt D-ring bolt.
 - To install, tighten to 40 Nm (30 lb-ft).
7. Remove the rear door front garnish moulding.
 - Pull outward to release the garnish moulding clips from the door.
8. Remove the rear door trim panel screw covers.
9. Remove the 5 rear door trim panel screws.
10. **NOTICE: Do not pull directly outward on the rear door trim panel, as damage may occur.**

Remove the rear door trim panel.

 - Lift upward and remove the rear door trim panel.
11. To install, reverse the removal procedure.