


Headliner — SuperCrew

 [Ford Ecat Electronic Parts Catalog](#)

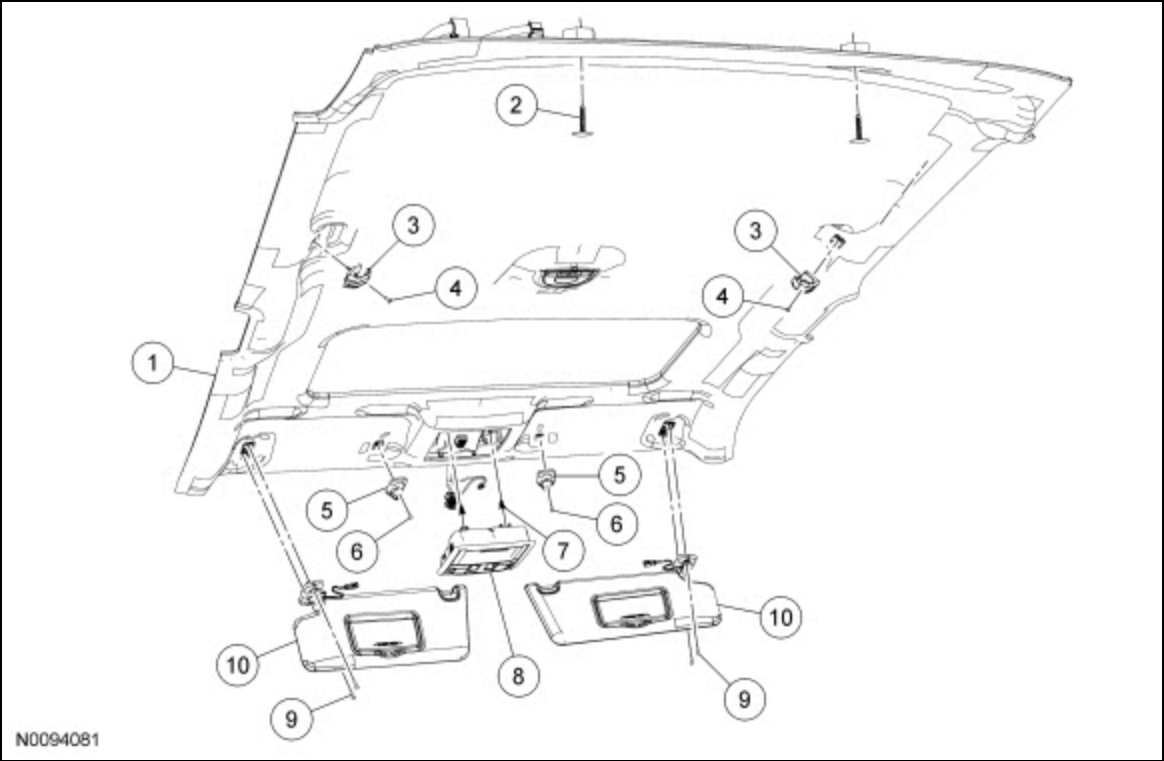


Item	Part Number	Description
1	51944 51944	Headliner
2	W710041 W710041	Headliner pin-type retainer (2 required)
3	29024 29024	Garment hooks
4	N610938A N610938A	Garment hook screws
5	04132 04132	Sun visor clips
6	N610938A N610938A	Sun visor clip screws
7	—	Overhead console clip (part of 519A70) (2 required)
8	519A70 519A70	Overhead console
9	N610938 N610938	Sun visor screws (4 required)
10	04104 04104 RH/ 04105 LH RH/ 04105 LH	Sun visors

Removal

1. Remove the front passenger seat. For additional information, refer to Section 501-10.
2. Remove the driver seat. For additional information, refer to Section 501-10.
3. Remove the floor console. For additional information, refer to Section 501-12.


4. If equipped, remove the audio DSP module. For additional information, refer to Section 415-00E.
5. Remove the A-pillar trim panel. For additional information, refer to A-Pillar Trim Panel in this section.
6. Reposition the B-pillar trim panels. For additional information, refer to B-Pillar Trim Panel — SuperCrew in this section.
7. Reposition the C-pillar trim panels. For additional information, refer to C-Pillar Trim Panel in this section.
8. Remove the overhead console. For additional information, refer to Section 501-12.
9. Remove the sun visor clip screws and clips.

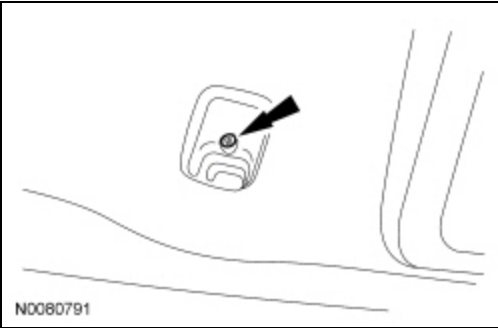


10. Remove the LH and RH sun visors.
 - Remove the sun visor screws.
 - Reposition the sun visor and disconnect the electrical connector.




11. Open the garment hook screw cover.

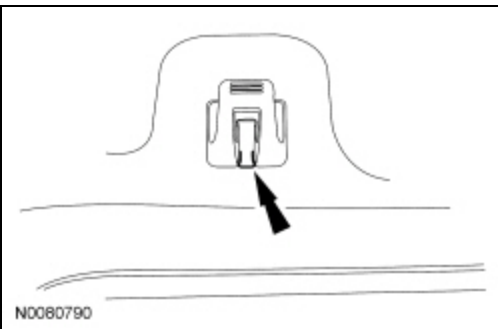


12. Remove the garment hook screw and remove the hook.

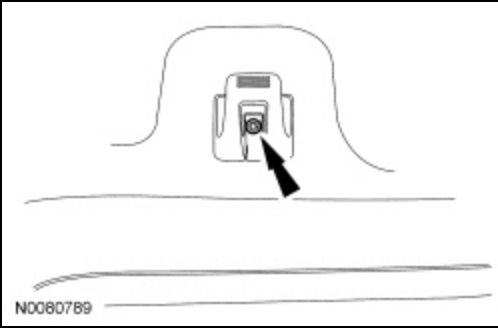


13. Remove the headliner pin-type retainers.

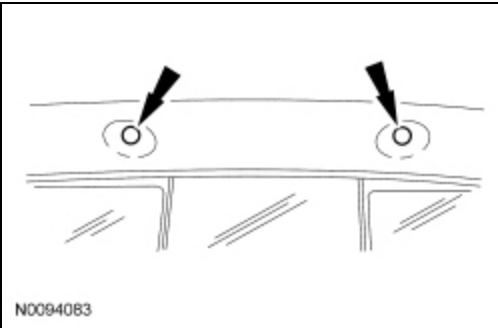

14. If equipped, disconnect the mirror electrical connector and the rain sensor.

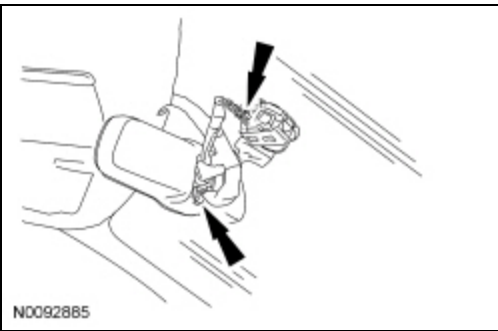

15. Disconnect the headliner electrical connectors.

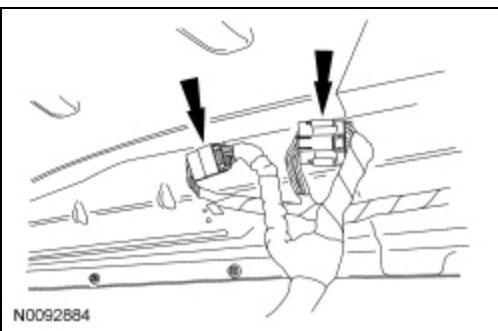

16. With the aid of an assistant, remove the headliner through the passenger door.


17. To install, reverse the removal procedure.

Installation


1. Position the headliner in the vehicle so that the sun visor and coat hook openings are aligned.
2. Install the LH and RH sun visors.
 - Reposition headliner and connect electrical connector.
 - Install the sun visor retainer screws.




3. Install the sun visor clip and sun visor clip screws.

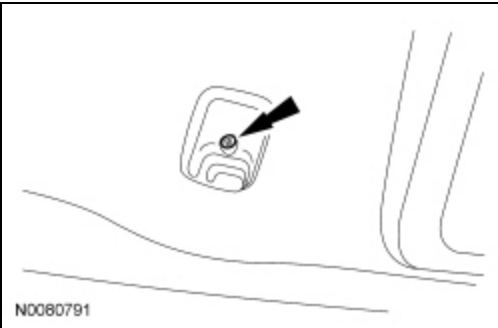

4. Install the garment hooks and garment hook screws.

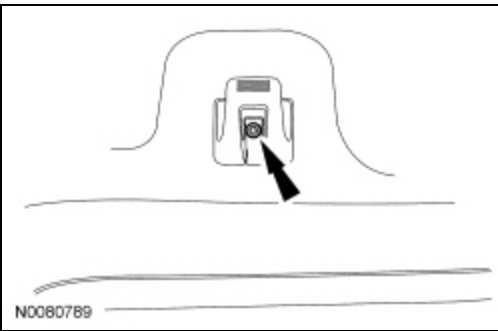


5. Close the garment hook screw covers.

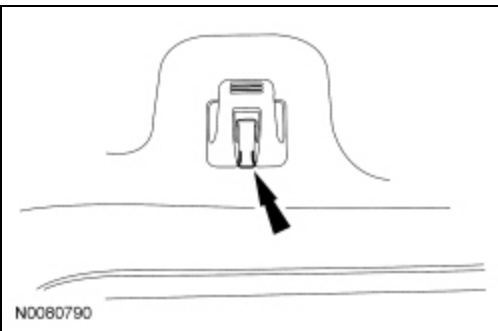


6. If equipped with a roof opening panel, secure the hook-and-loop tape around the front edge of the roof opening panel and then secure the back edge of the roof opening panel so that it is flush and the headliner does not sag. If sagging occurs, loosen the sun visors and coat hooks to realign the headliner. Retighten the sunvisors and coat hooks.


7. Install the headliner pin-type retainers.

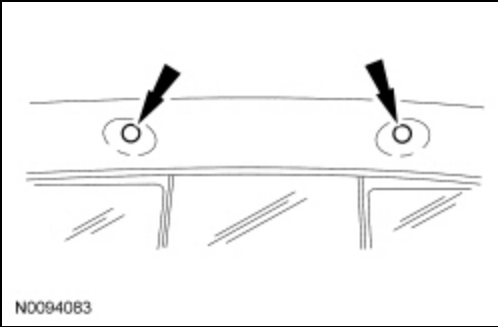

8. Connect the headliner electrical connectors.

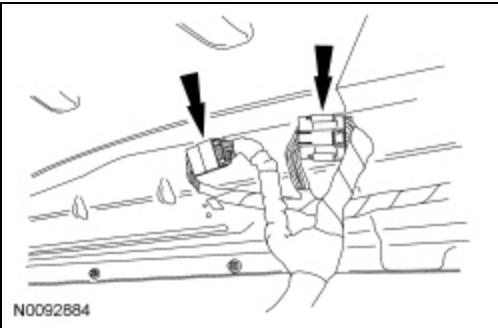

9. If equipped, connect the mirror electrical connector and the rain sensor.

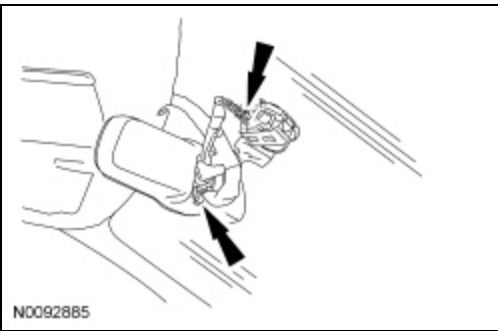

10. Install the overhead console. For additional information, refer to Section 501-12.

11. Install the A-pillar trim panel. For additional information, refer to A-Pillar Trim Panel in this section.

12. Install the B-pillar trim panels. For additional information, refer to B-Pillar Trim Panel — SuperCrew in this section.

13. Install the C-pillar trim panels. For additional information, refer to C-Pillar Trim Panel in this section.

14. If equipped, install the audio DSP module. For additional information, refer to Section 415-00E.

15. Install the floor console. For additional information, refer to Section 501-12.

16. Install the driver seat. For additional information, refer to Section 501-10.

17. Install the front passenger seat. For additional information, refer to Section 501-10.