


Fender Moulding — Front




Removal and Installation

Standard

1. Remove the 2 front fender moulding nuts.
 - Tighten to 3.5 Nm (31 lb-in).

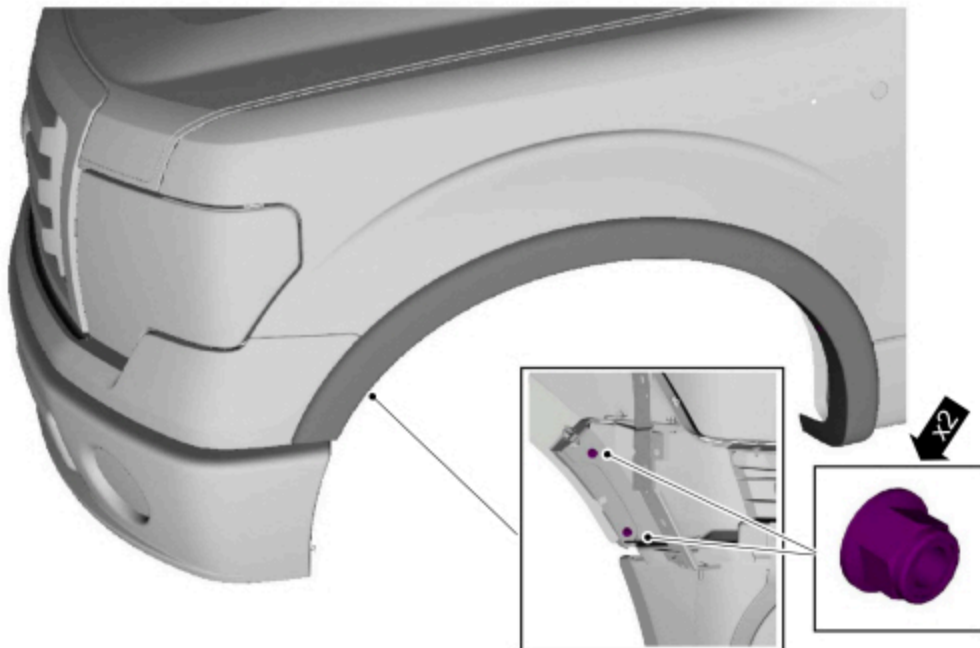

2. Remove the 5 front fender moulding pin-type retainers.
 - Starting at the front of the fender moulding, pull outward to release moulding from the fender.

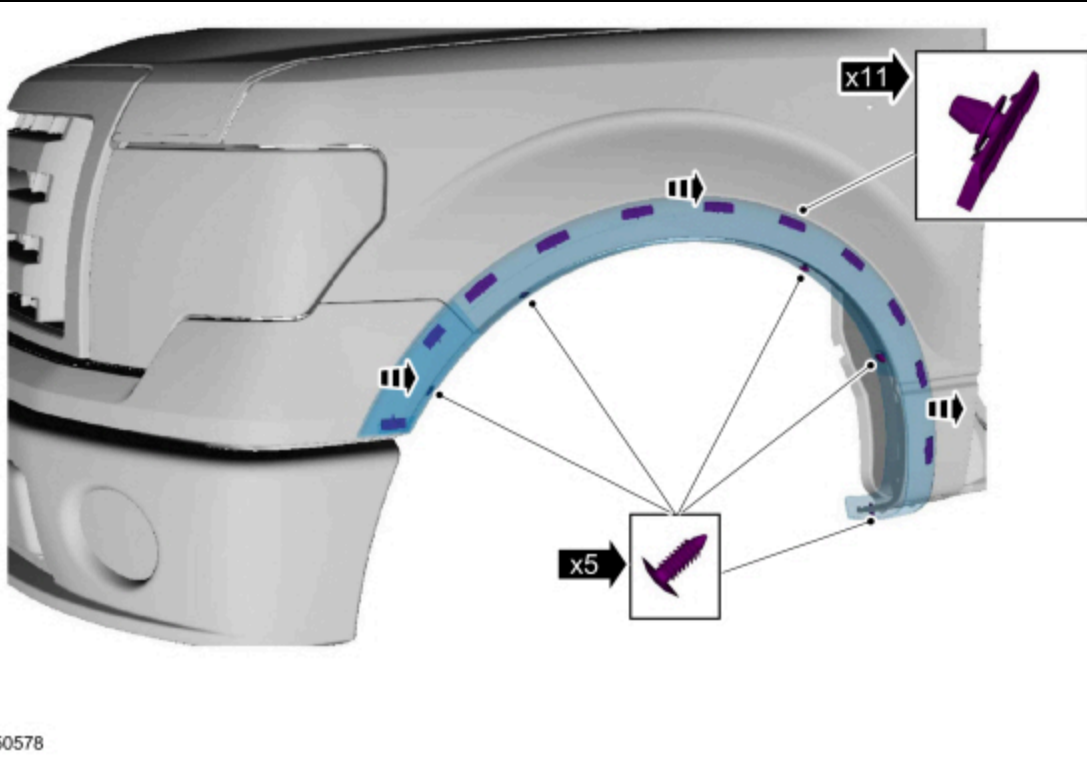

3. Using a non-marring trim tool, carefully pry the moulding outward to gain access to the forward pin-type retainers.
4. **NOTICE: Pry directly on the pin-type retainer. Do not pry on the fender moulding. Failure to follow this direction may result in damage to the component.**


Using a non-marring tool, release the front fender moulding front pin-type retainers.

- Pry outward on the first front fender moulding front pin-type retainer by pushing the handle toward the fender.
- Pry outward on the second front fender moulding front pin-type retainer by pushing the handle toward the fender.
- Follow this sequence for the remaining retainers.

5. Remove the front fender moulding.
 - Pull outward to release the rear fender moulding pin-type retainers.

SVT Raptor

6. Remove the 5 front fender moulding pin-type retainers.

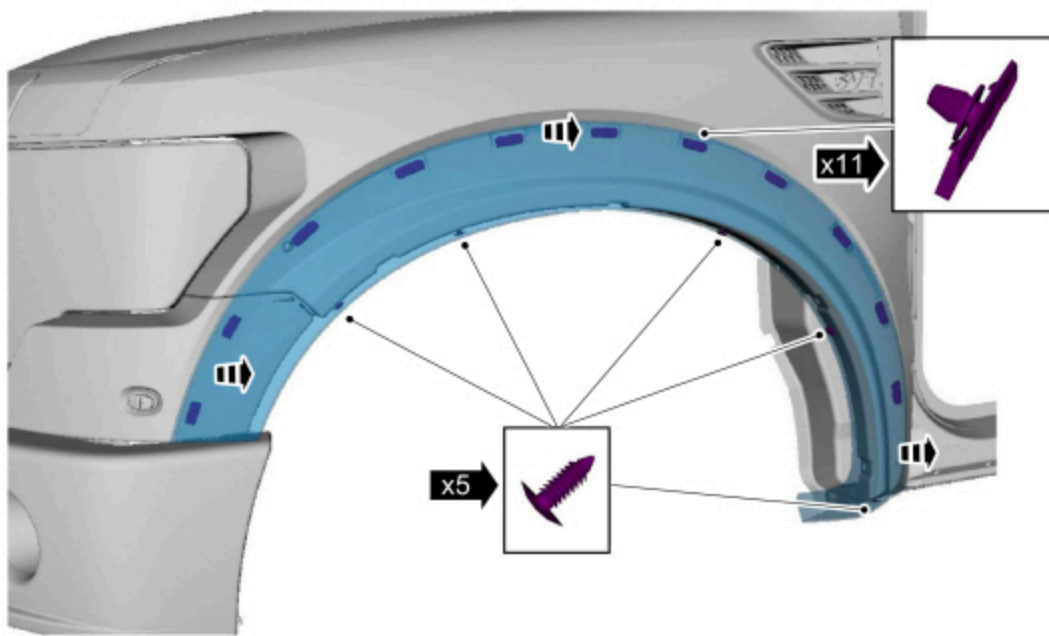

N0151004

7. Using a non-marring trim tool, carefully pry the moulding outward to gain access to the forward pin-type retainers.

8. **NOTICE: Pry directly on the pin-type retainer. Do not pry on the fender moulding. Failure to follow this direction may result in damage to the component.**

Using a non-marring tool, release the front fender moulding front pin-type retainers.

- Pry outward on the first front fender moulding front pin-type retainer by pushing the handle toward the fender.
- Pry outward on the second front fender moulding front pin-type retainer by pushing the handle toward the fender.
- Follow this sequence for the remaining retainers.

9. Remove the front fender moulding.

- Pull outward to release the rear fender moulding pin-type retainers.

All vehicles

10. To install, reverse the removal procedure.