


Power Running Board (PRB) Motor

 [Ford Ecat Electronic Parts Catalog](#)

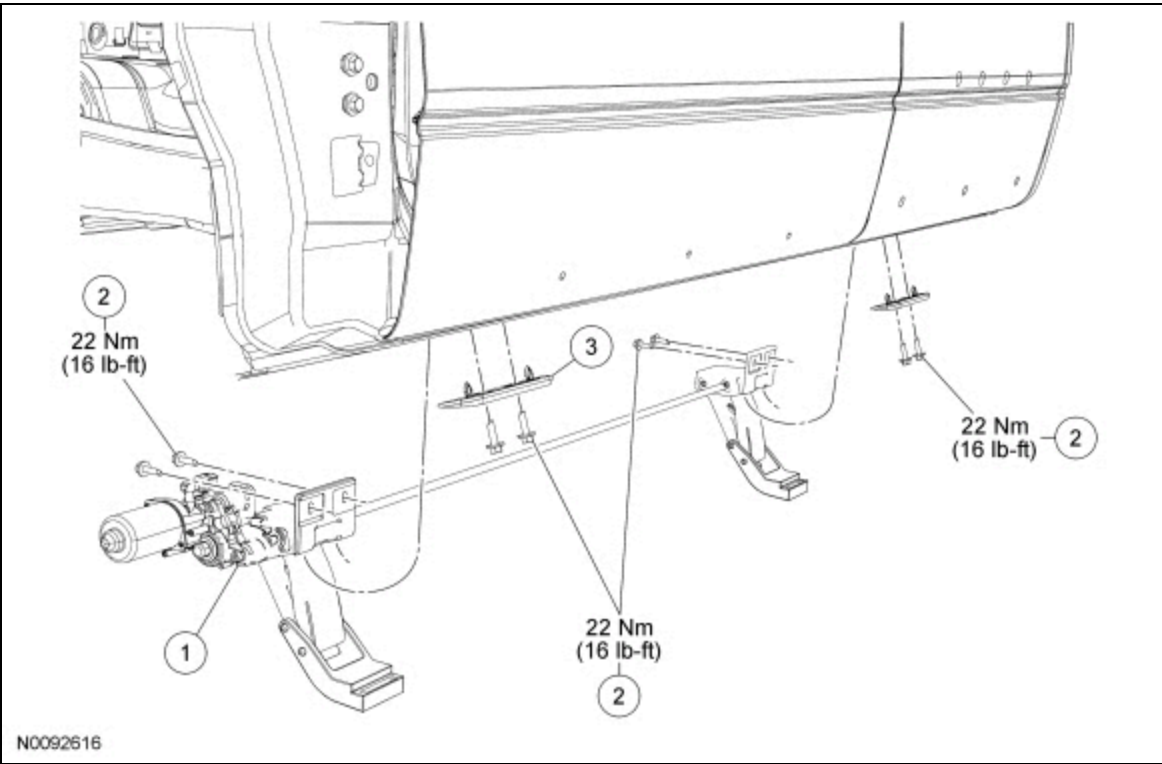

Item	Part Number	Description
1	16A506 16A506 RH/ 16A507 LH RH/ 16A507 LH	Power Running Board (PRB) motor and bracket assembly
2	W705196 W705196	PRB motor and bracket assembly bolts (8 required)
3	16N454 16N454	PRB bracket cover (2 required)

Removal and Installation

NOTE: The Power Running Board (PRB) motor and brackets are serviced as an assembly.

1. Remove the ~~PRB~~ step. For additional information, refer to Power Running Board (PRB) Step in this section.
2. Disconnect the ~~PRB~~ electrical connector.

NOTICE: The following steps require an assistant. Failure to follow this instruction may result in damage to the vehicle.

3. Remove the ~~PRB~~ motor and bracket assembly front bracket upper bolts.
 - To install, tighten to 22 Nm (16 lb-ft).
4. Remove the ~~PRB~~ motor and bracket assembly front bracket lower bolts.
 - To install, tighten to 22 Nm (16 lb-ft).
5. Remove the ~~PRB~~ motor and bracket assembly rear bracket upper bolts.

- To install, tighten to 22 Nm (16 lb-ft).

6. Remove the ~~PRB~~ motor and bracket assembly rear bracket lower bolts.

- To install, tighten to 22 Nm (16 lb-ft).

7. Remove the ~~PRB~~ motor and bracket assembly.

8. To install, reverse the removal procedure.