


Power Running Board (PRB)

 [Ford Ecat Electronic Parts Catalog](#)

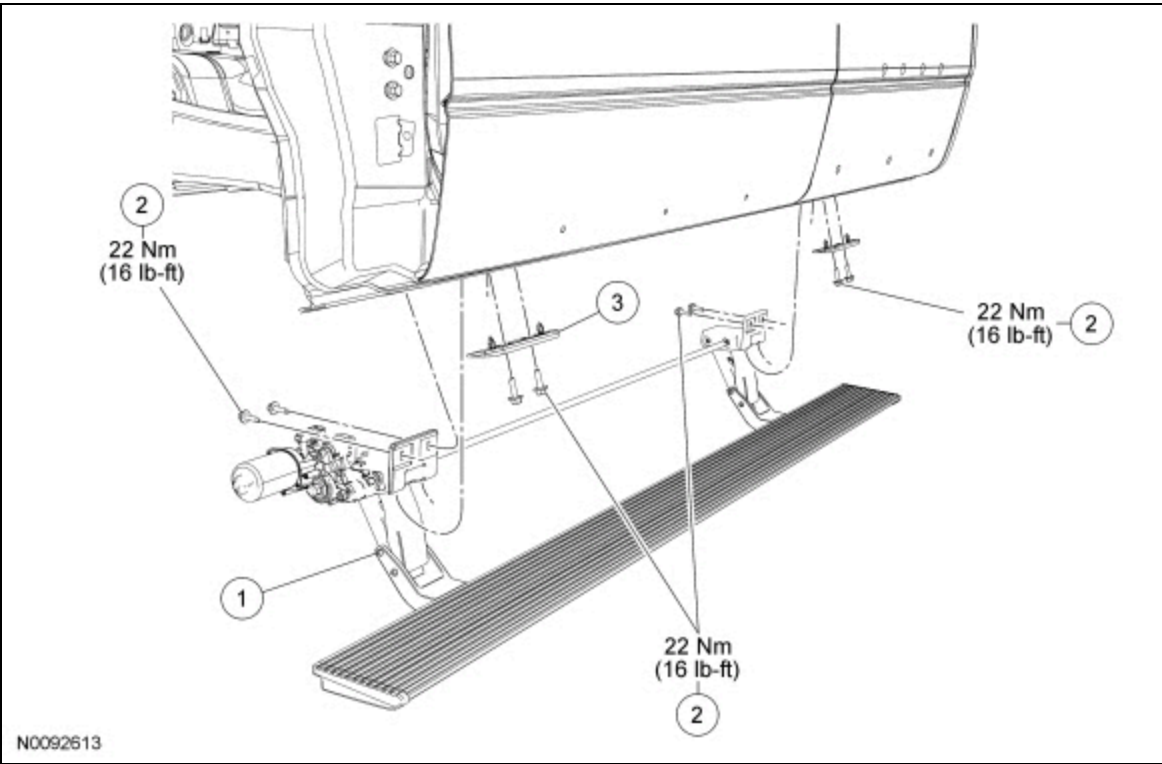

Item	Part Number	Description
1	16451C 16451C LH/ 16450E RH LH/ 16450E RH	Power Running Board (PRB) assembly
2	W705196 W705196	PRB assembly bolts (8 required)
3	16N454 16N454	PRB bracket cover (2 required)

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.

2. **NOTE:** If the Power Running Board (PRB) cannot be extracted, extend the running board by hand.

Extend the PRB .

3. Disconnect the PRB electrical connector.

NOTICE: The following steps require an assistant. Failure to follow this instruction may result in damage to the vehicle.

4. Remove the PRB assembly front bracket upper bolts.

- To install, tighten to 22 Nm (16 lb-ft).

5. Remove the PRB assembly front bracket lower bolts.

- To install, tighten to 22 Nm (16 lb-ft).

6. Remove the ~~PRB~~ assembly rear bracket upper bolts.
 - To install, tighten to 22 Nm (16 lb-ft).
7. Remove the ~~PRB~~ assembly rear bracket lower bolts.
 - To install, tighten to 22 Nm (16 lb-ft).
8. Remove the ~~PRB~~ assembly.
9. To install, reverse the removal procedure.