


Exterior Mirror Cover — Aero




Removal and Installation

NOTE: The power folding mirrors may need to be synchronized anytime the mirrors are folded or unfolded without using the exterior mirror control switch, or if a new power folding mirror is installed. For additional information, refer to Exterior Mirror Motor Synchronization — Power Folding in this section.


1. Remove the exterior mirror glass. For additional information, refer to Exterior Mirror.
2. Remove the 4 exterior mirror lower cover screws.

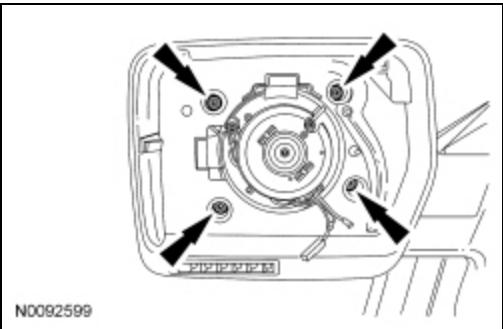

3. Remove the exterior mirror upper and lower covers from the exterior mirror.
 - Pull the exterior mirror upper and lower covers towards the front of the vehicle.

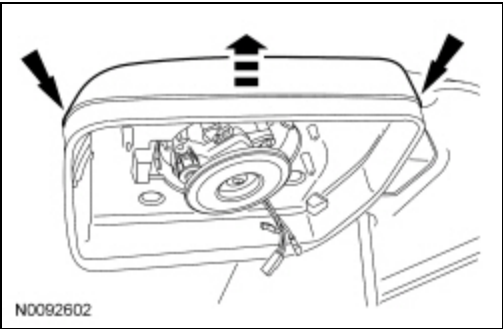

4. Release the exterior mirror cover retaining tabs.

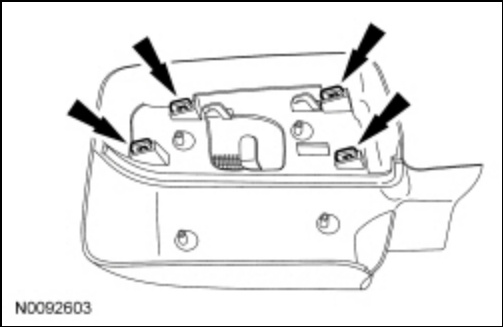

5. Separate and remove the upper exterior mirror cover from the lower exterior mirror cover.
6. To install, reverse the removal procedure.