


Exterior Mirror Cover — Trailer Tow




Removal and Installation

1. Remove the exterior mirror glass. For additional information, refer to Exterior Mirror Glass — Trailer Tow in this section.
2. Insert a flat-blade screwdriver into the clip slots at the top of the mirror and release the clips.

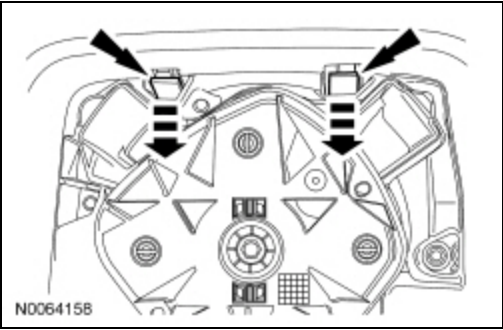

3. Separate and remove the exterior mirror cover from the exterior rear view mirror.

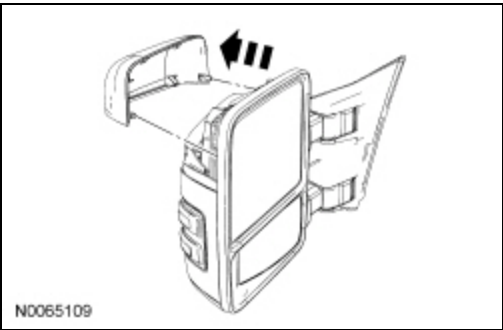

4. To install, reverse the removal procedure.