

Exterior Mirror




Removal and Installation

NOTE: Do not remove the exterior mirror assembly when repairing an individual part. Individual components can be installed without removing the exterior mirror.

NOTE: The power folding mirrors may need to be synchronized anytime the mirrors are folded or unfolded without using the exterior mirror control switch, or if a new power folding mirror is installed. For additional information, refer to Exterior Mirror Motor Synchronization — Power Folding in this section.

NOTE: The aero mirror is shown, the trailer tow mirror is similar.

1. Remove the front door trim panel. For additional information, refer to Section 501-05.
2. Position aside the water shield to gain access to the electrical connector.
3.
 - To install, tighten to 12 Nm (106 lb-in).

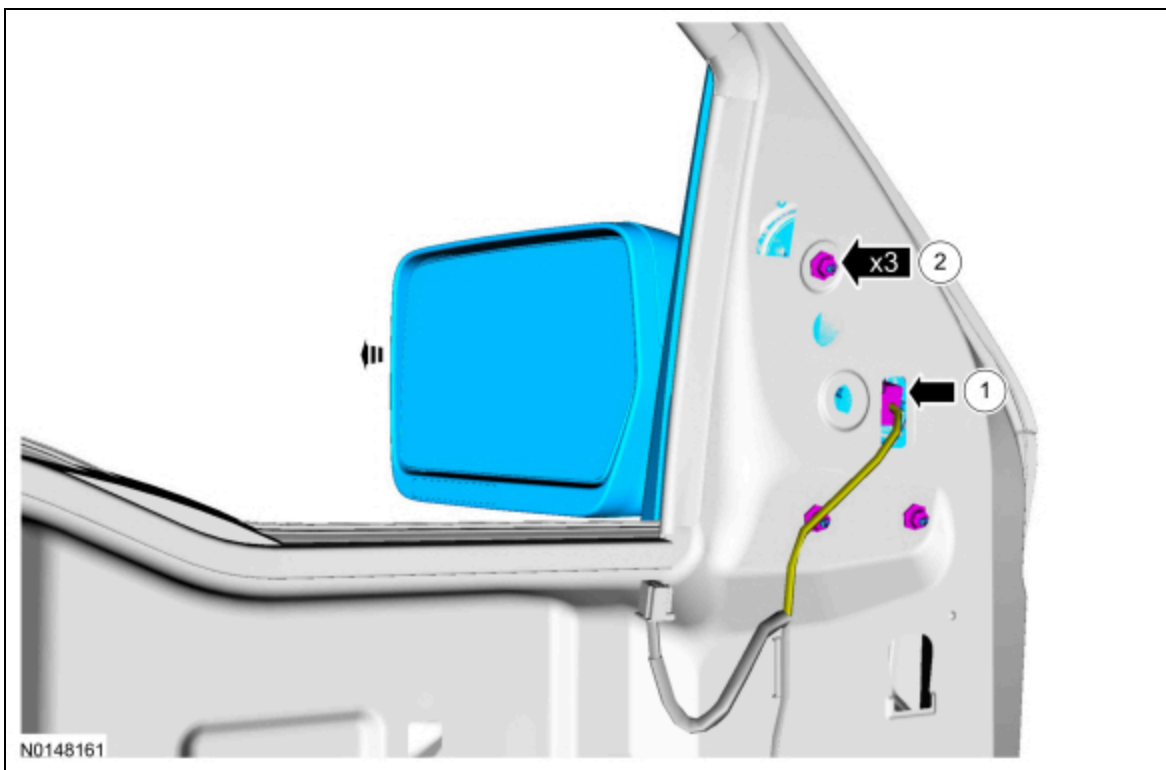

4. Remove the exterior mirror.
5. To install, reverse the removal procedure.
 - If equipped with power folding mirrors, they must be synchronized. For additional information, refer to Exterior Mirror Motor Synchronization — Power Folding in this section.