


Seat Backrest — Rear, SuperCab



Disassembly

NOTE: For parts identification and location, refer to *Seat — Exploded View, Rear, SuperCab* in this section.

1. Remove the seat backrest cover. For additional information, refer to *Seat Backrest Cover — Rear, SuperCab* in this section.
2. Push the release tabs and remove the 3 backrest plastic lock clips (one shown).

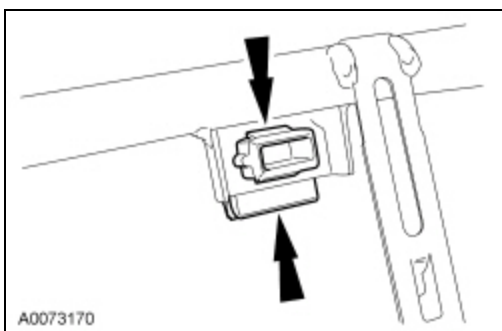

3. To assemble, reverse the disassembly procedure.