

Seat Wire Harness Routing




1. Install the front passenger seat wire harness. For correct installation, refer to the following views. Retainers and electrical connectors are numbered in order of assembly. Match the numbers in the Retainer and Connector Location Views and attach accordingly.

- For manual seat illustrations, refer to Manual Passenger Seat Track.
- For heated seat illustrations, refer to Power Passenger Heated Seat.
- For climate controlled seat illustrations, refer to Power Passenger Climate Controlled Seat.

2. **NOTE:** *Illustration shows Occupant Classification System (OCS) weight sensor bolts in their installed position with the seat in the vehicle (arrow indicates front).*

Verify the correct passenger seat OCS weight sensor bolt electrical connector positions using the illustration.


- For correct identification and placement of the 2 OCS weight sensor bolt electrical connectors, use the wire colors identified in the Wiring Diagrams manual Cell 46. Connecting the incorrect connector to a sensor causes DTCs to set and results in an unsuccessful OCS System Reset.

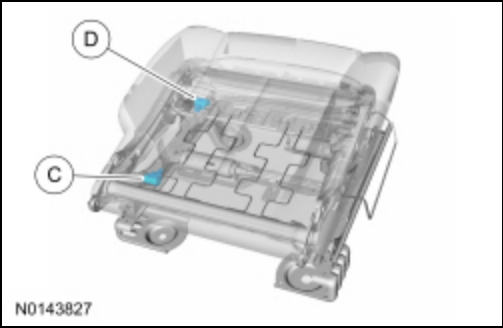

Manual Passenger Seat Track

Manual Seat Wire Harness View

NOTE: *Refer to the steps at the beginning of this procedure for installation instructions.*

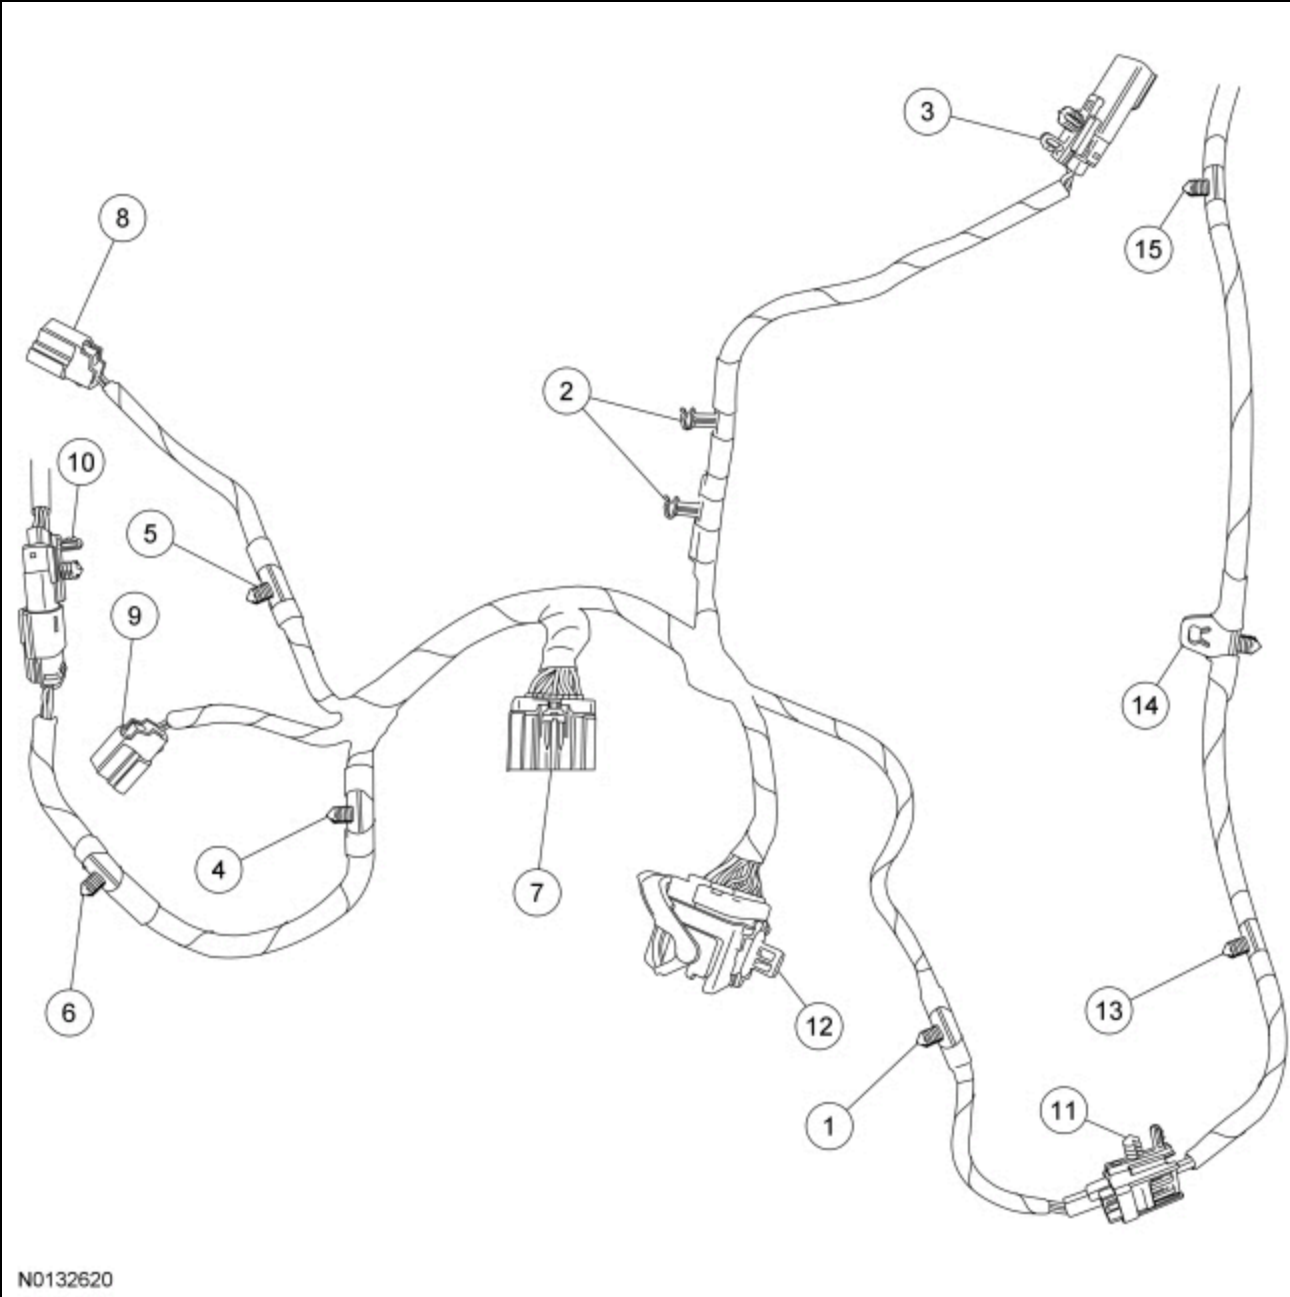

Item	Description
1	Side air bag wire harness retainer
2	BTS wire harness retainers
3 ^a	BTS wire harness electrical connector and retainer
4	Safety belt buckle wire harness retainer
5	OCS weight sensor bolt C wire harness retainer
6 ^b	Safety belt buckle wire harness retainer
7	OCSM electrical connector
8 ^c	OCS weight sensor bolt C electrical connector
9	OCS weight sensor bolt D electrical connector
10 ^b	Safety belt buckle electrical connector and retainer
11	Side air bag wire harness electrical connector
12	Seat wire harness electrical connector

Item	Description
13	Side air bag wire harness retainer
14	Side air bag wire harness retainer
15	Side air bag wire harness retainer




^aRefer to view B.

^bRefer to view A.

^cMake sure wire harness routes on the correct side of seat track lever, as shown.

Wire Harness Retainer and Connector Location View

NOTE: *Harness is attached to the seat track as it should appear in the vehicle.*

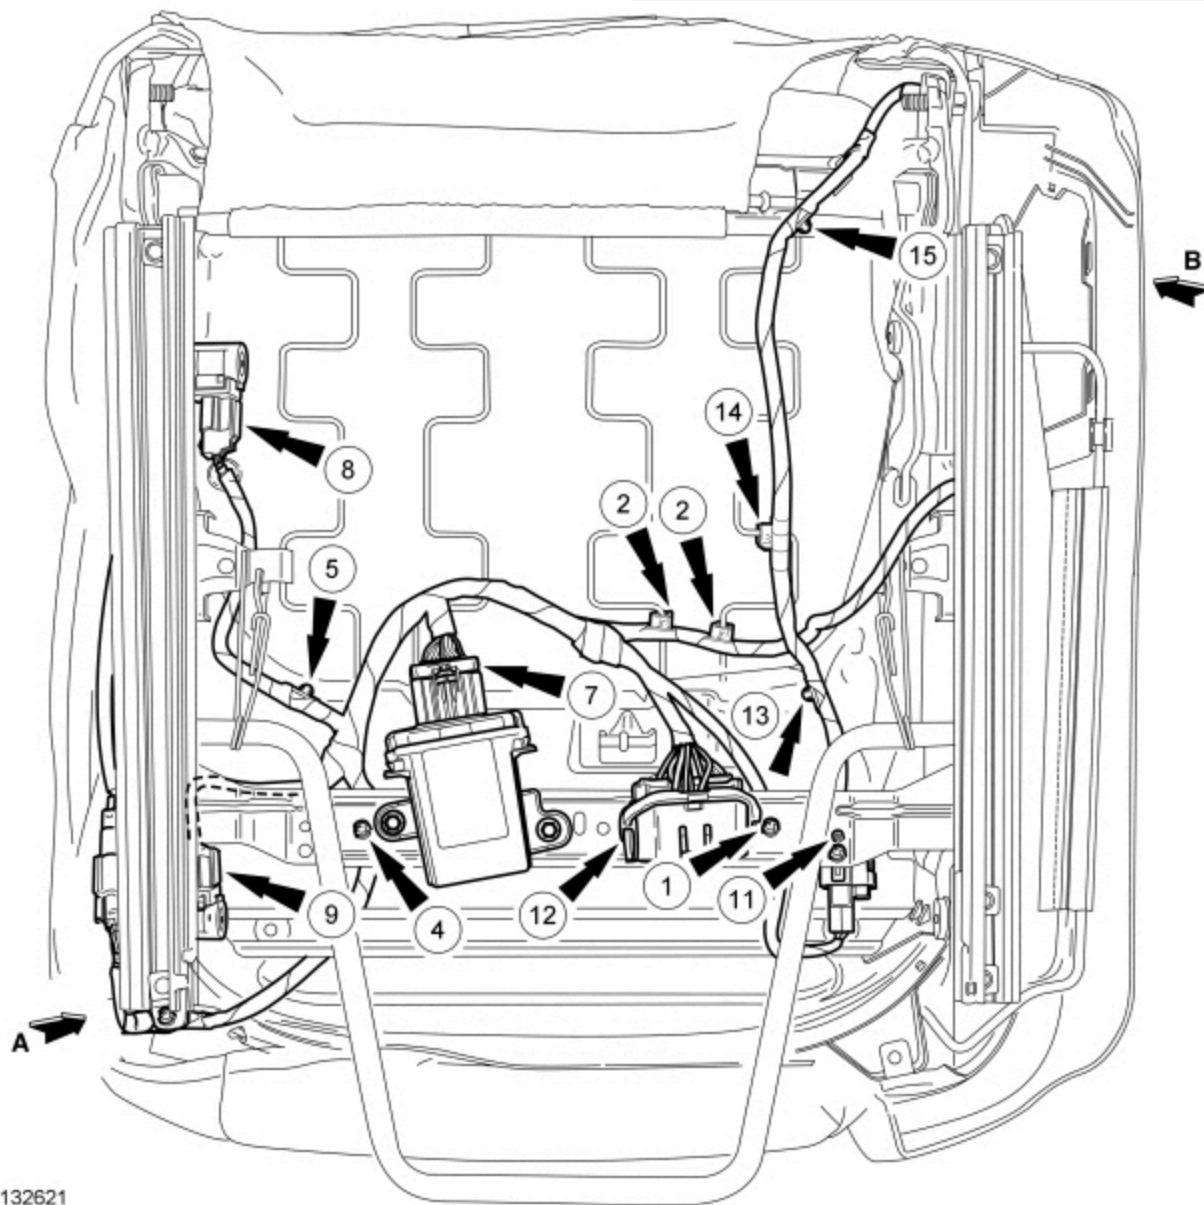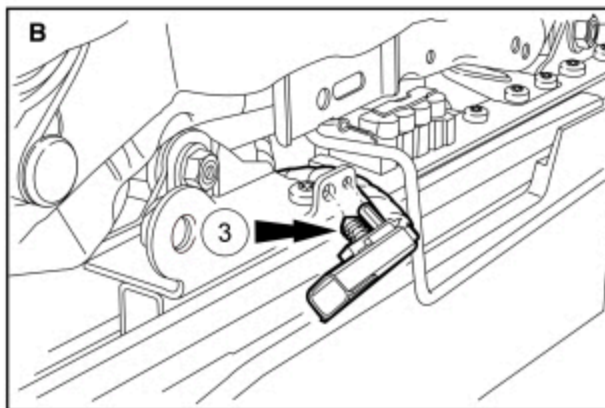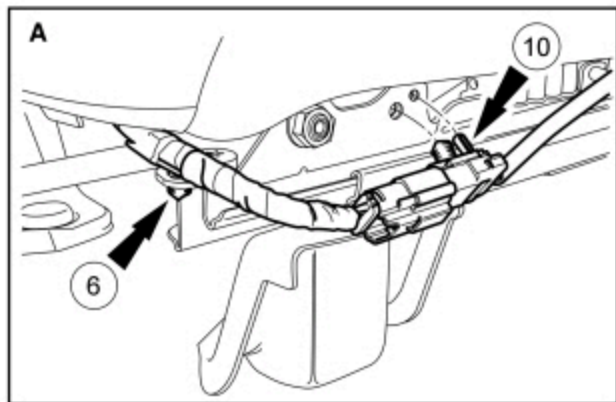


N0132621

1. Compare the seat with Wire Harness Retainer and Connector Location View to verify correct installation.

Power Passenger Heated Seat

Heated Seat Wire Harness View

NOTE: Refer to the steps at the beginning of this procedure for installation instructions.

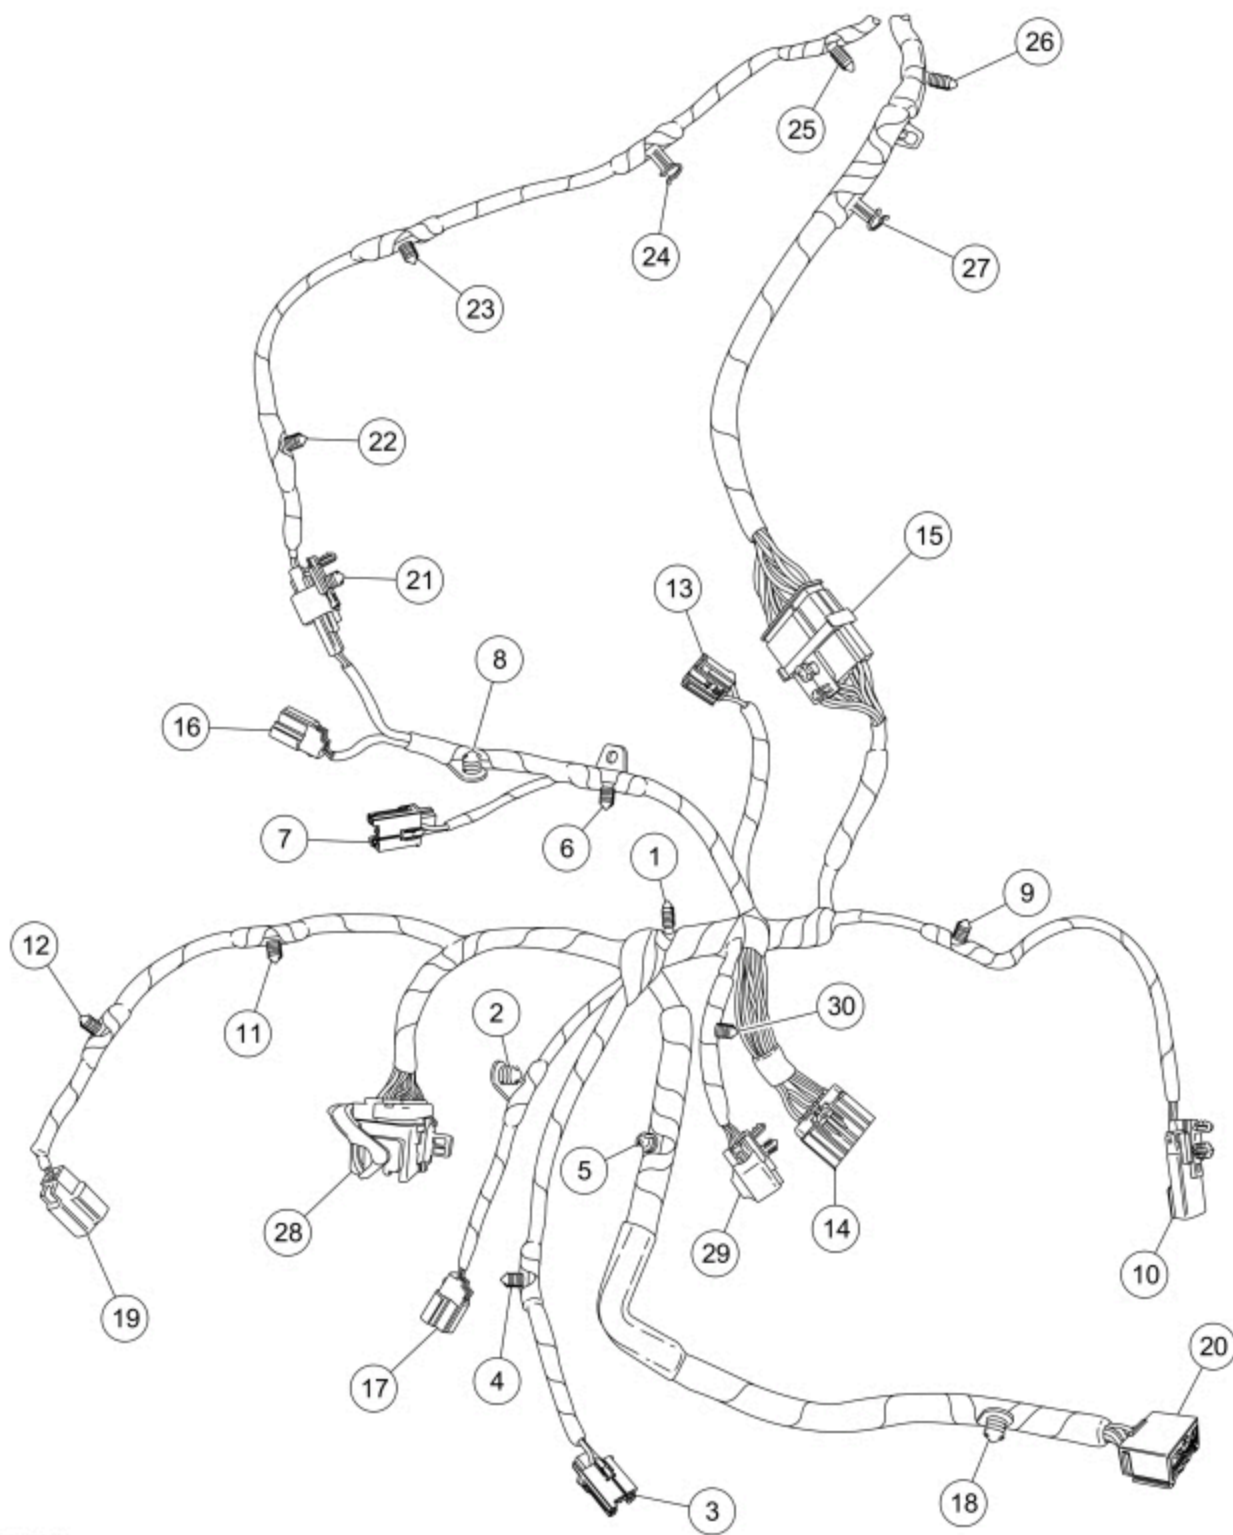

N0147974

Item	Description
1	Seat wire harness main retainer
2	QCS weight sensor bolt D wire harness retainer
3 ^a	Front height motor electrical connector
4 ^a	Front height motor wire harness retainer
5	Seat control switch wire harness retainer
6	QCS weight sensor bolt C wire harness retainer

Item	Description
7 ^b	Horizontal motor electrical connector
8	OCS weight sensor bolt C wire harness retainer
9	BTS wire harness retainer
10 ^c	BTS wire harness electrical connector and retainer
11	Safety belt buckle wire harness retainer
12	Safety belt buckle wire harness retainer
13 ^d	Rear height motor electrical connector
14	OCSM electrical connector
15 ^e	Backrest wire harness electrical connector and retainer
16	OCS weight sensor bolt C electrical connector
17 ^d	OCS weight sensor bolt D electrical connector
18	Seat control switch wire harness retainer
19 ^b	Safety belt buckle electrical connector and retainer
20 ^f	Seat control switch electrical connector
21	Side air bag wire harness electrical connector and retainer
22	Side air bag wire harness retainer
23	Side air bag wire harness retainer
24	Side air bag wire harness retainer
25	Side air bag wire harness retainer
26	Backrest wire harness retainer
27	Backrest wire harness retainer
28	Seat wire harness electrical connector and retainer
29 ^d	Cushion heater mat electrical connector and retainer
30 ^d	Cushion heater mat wire harness retainer

^aRefer to Wire Harness Retainer and Connector Location View — Front Height Motor.

^bRefer to Wire Harness Retainer and Connector Location View — Inboard Side.


^cRefer to Wire Harness Retainer and Connector Location View — Outboard Side.

^dRefer to Wire Harness Retainer and Connector Location View — Front of Seat.


^eElectrical connector must be attached to the seat bottom side, as shown. Refer to Completed Wire Harness Installation View.

^fElectrical connector and wire harness must be routed on the correct side of side shield attachment wire, as shown. Refer to Wire Harness Retainer and Connector Location View — Outboard Side.

Wire Harness Retainer and Connector Location View — Main

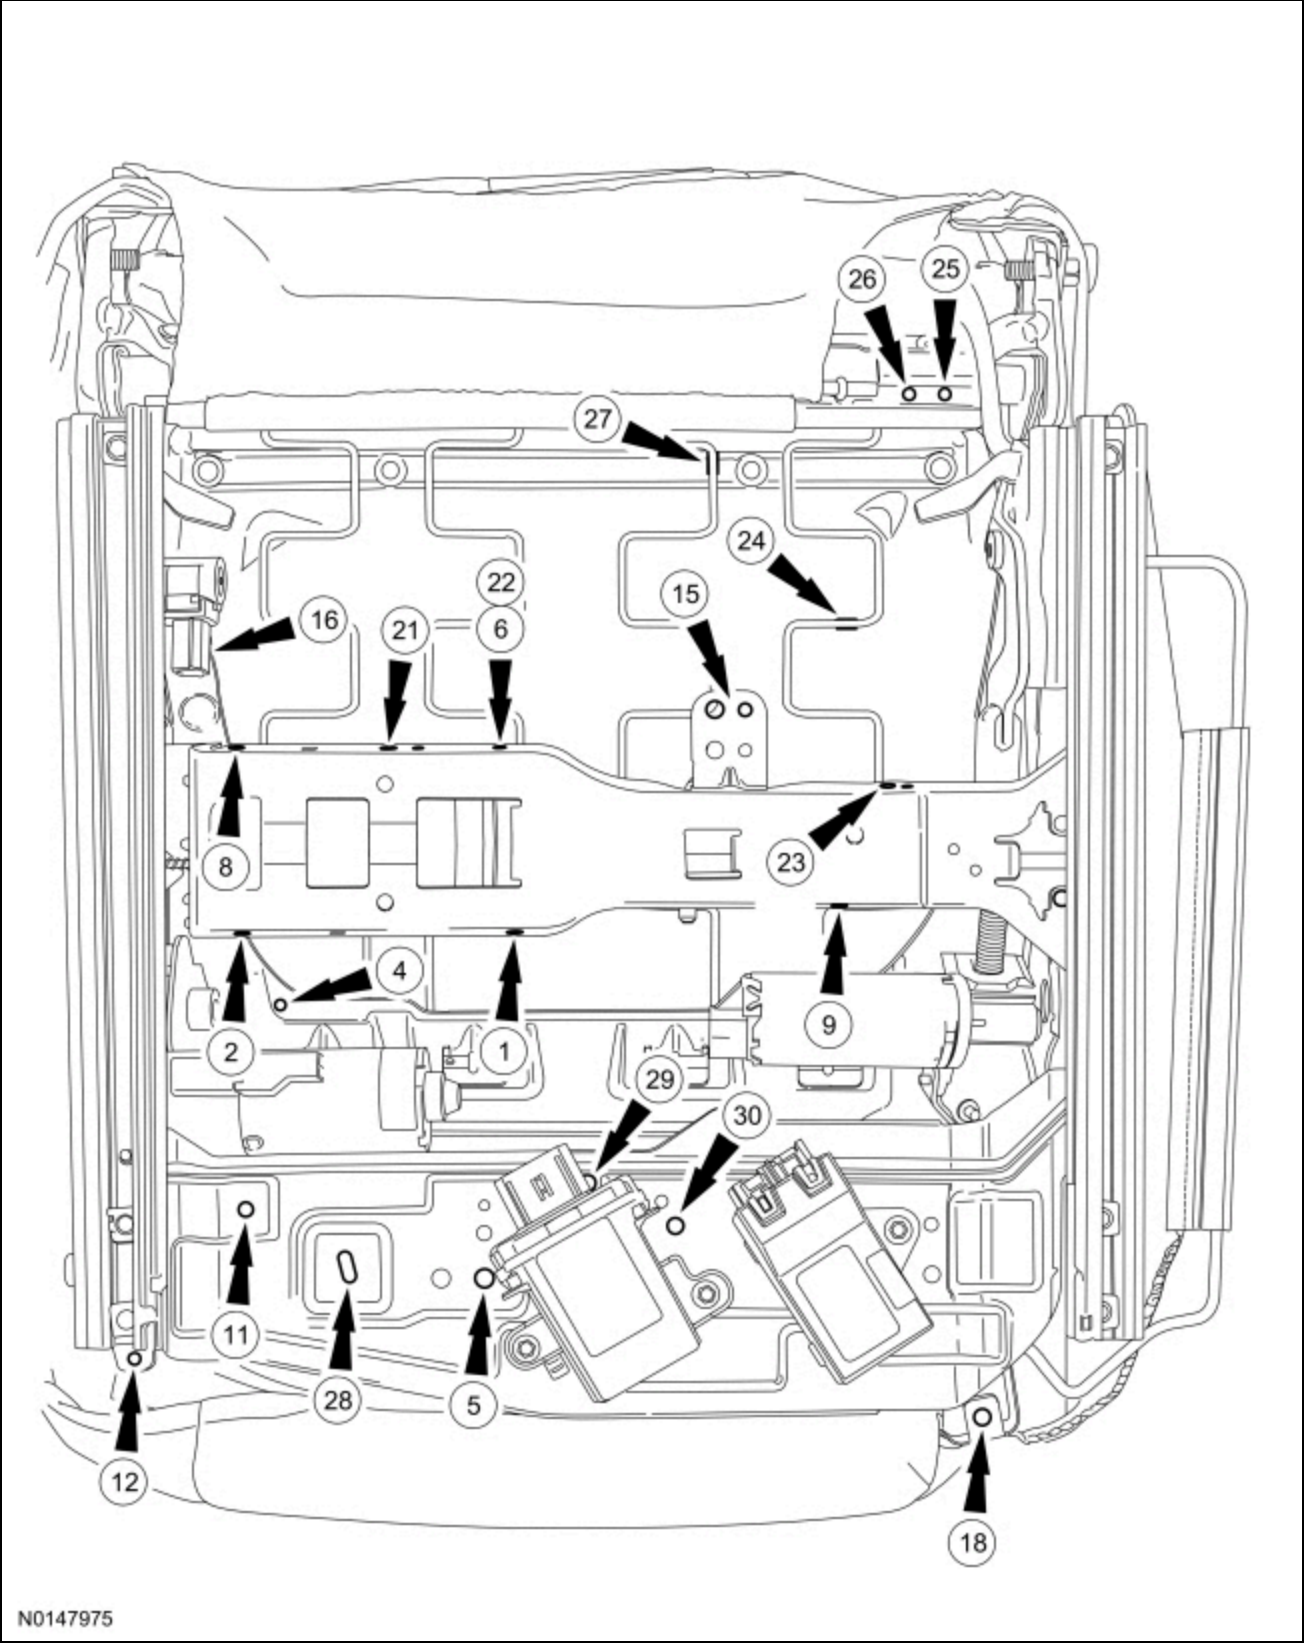


Wire Harness Retainer and Connector Location View — Front of Seat

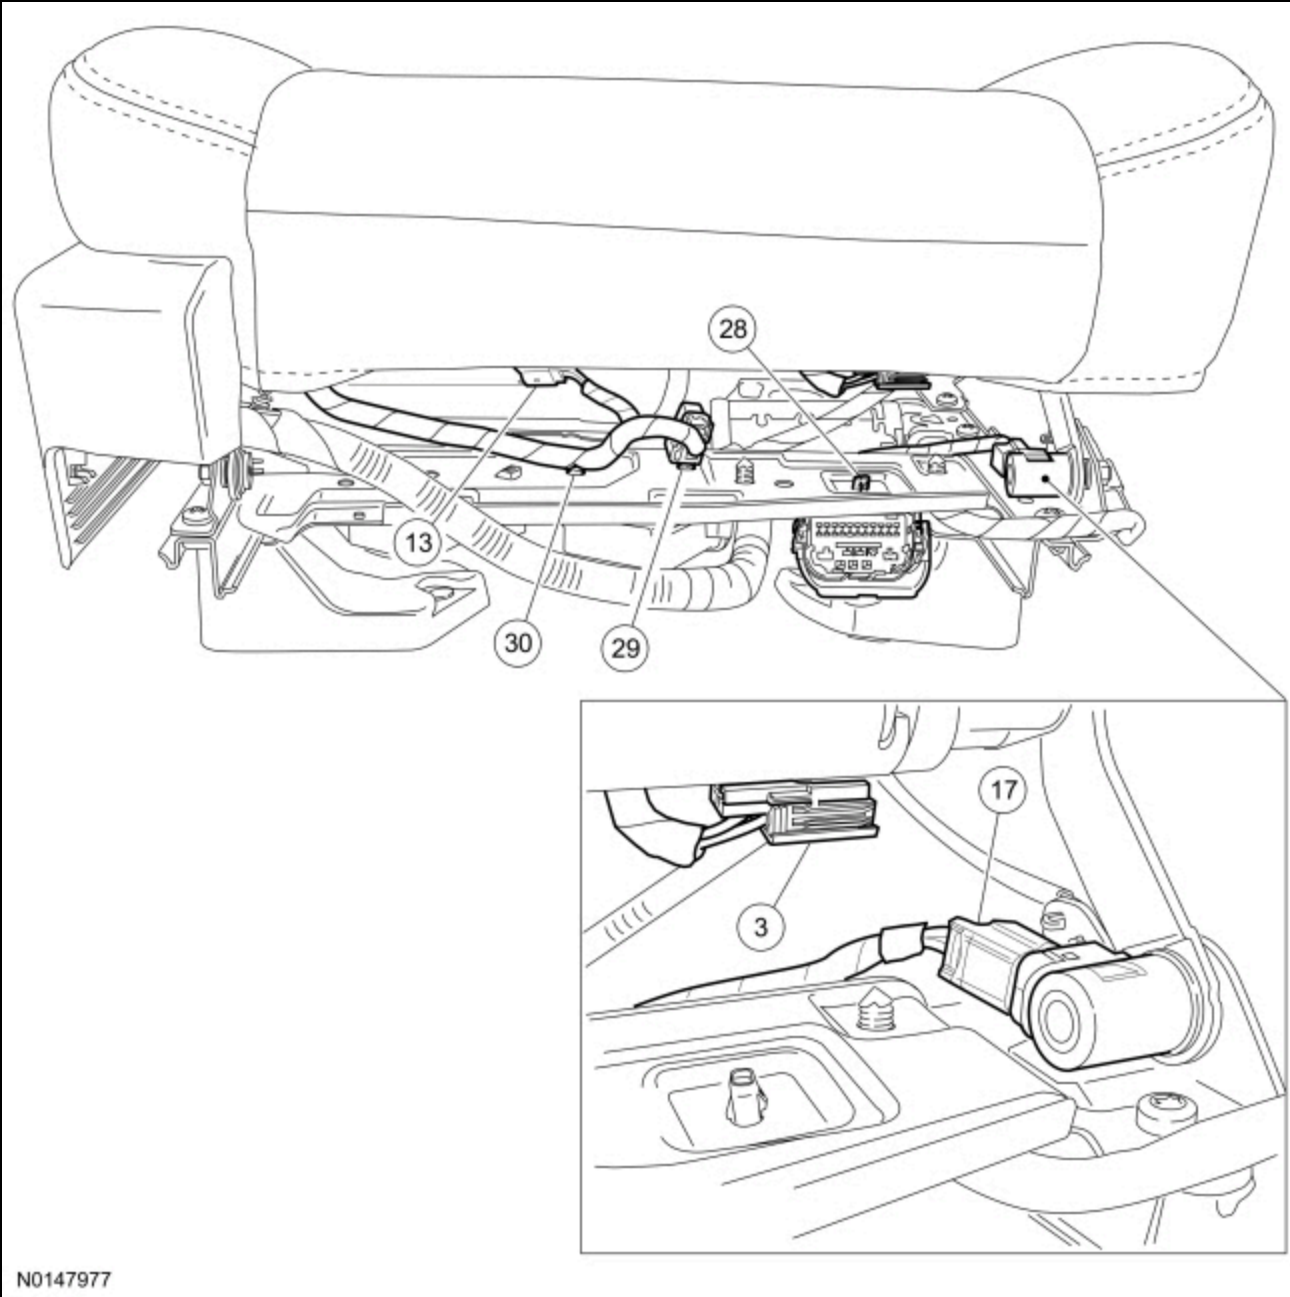


N0147977


Wire Harness Retainer and Connector Location View — Front Height Motor

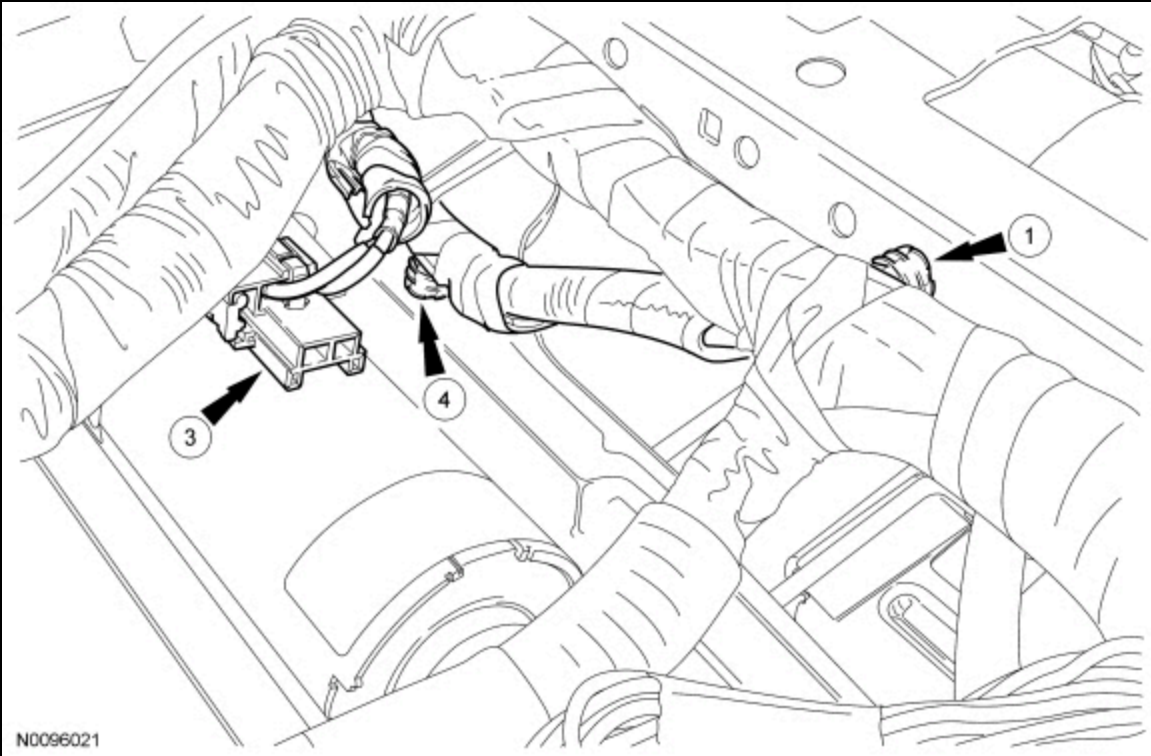

Wire Harness Retainer and Connector Location View — Inboard Side

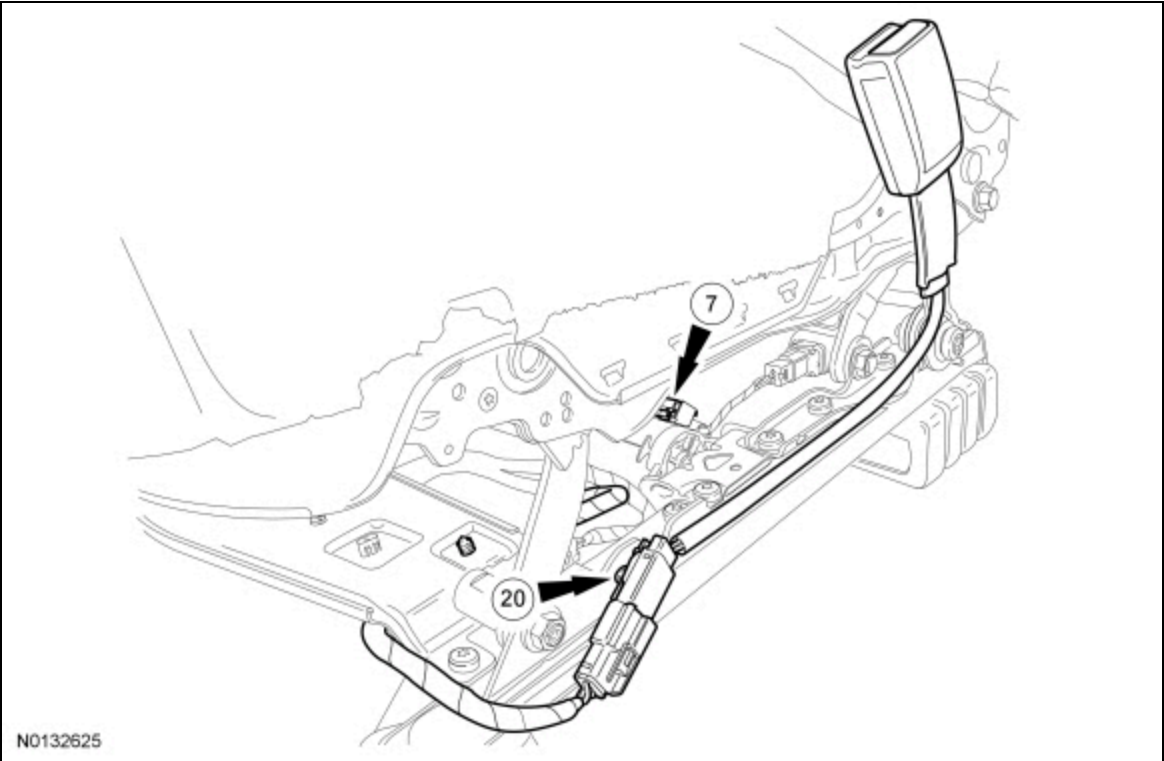


Wire Harness Retainer and Connector Location View — Outboard Side

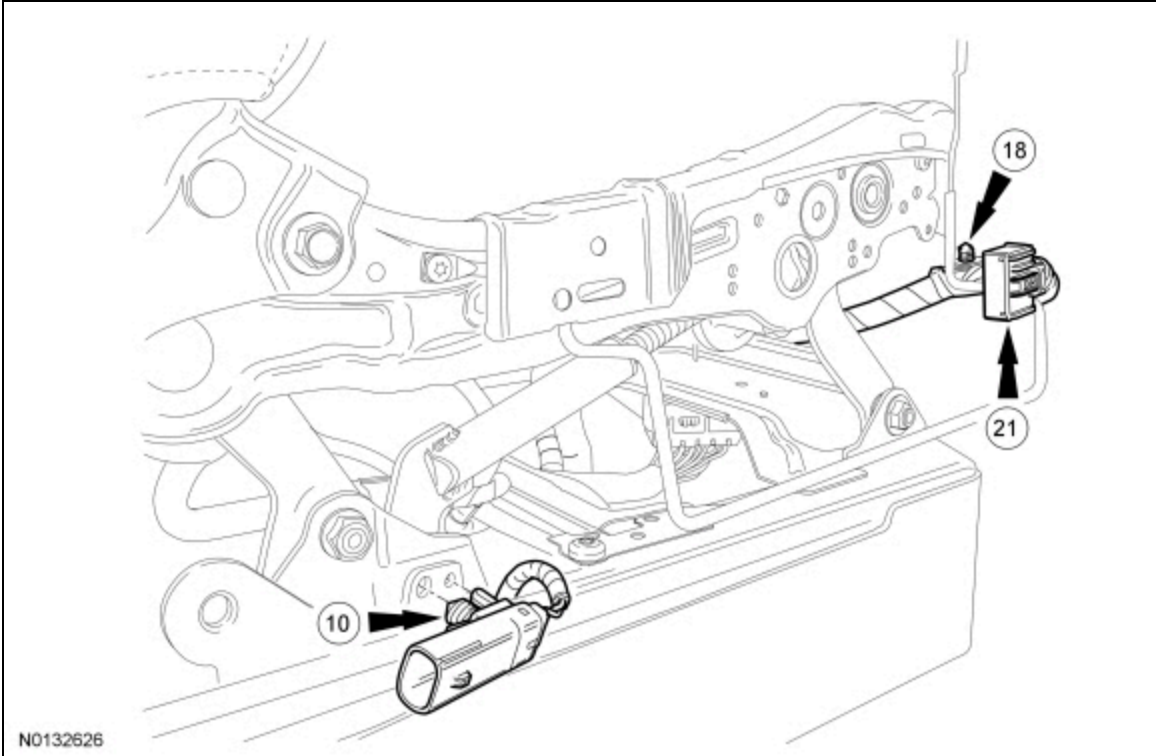

Completed Wire Harness Installation View

NOTE: *Harness is attached to the seat track as it should appear in the vehicle.*

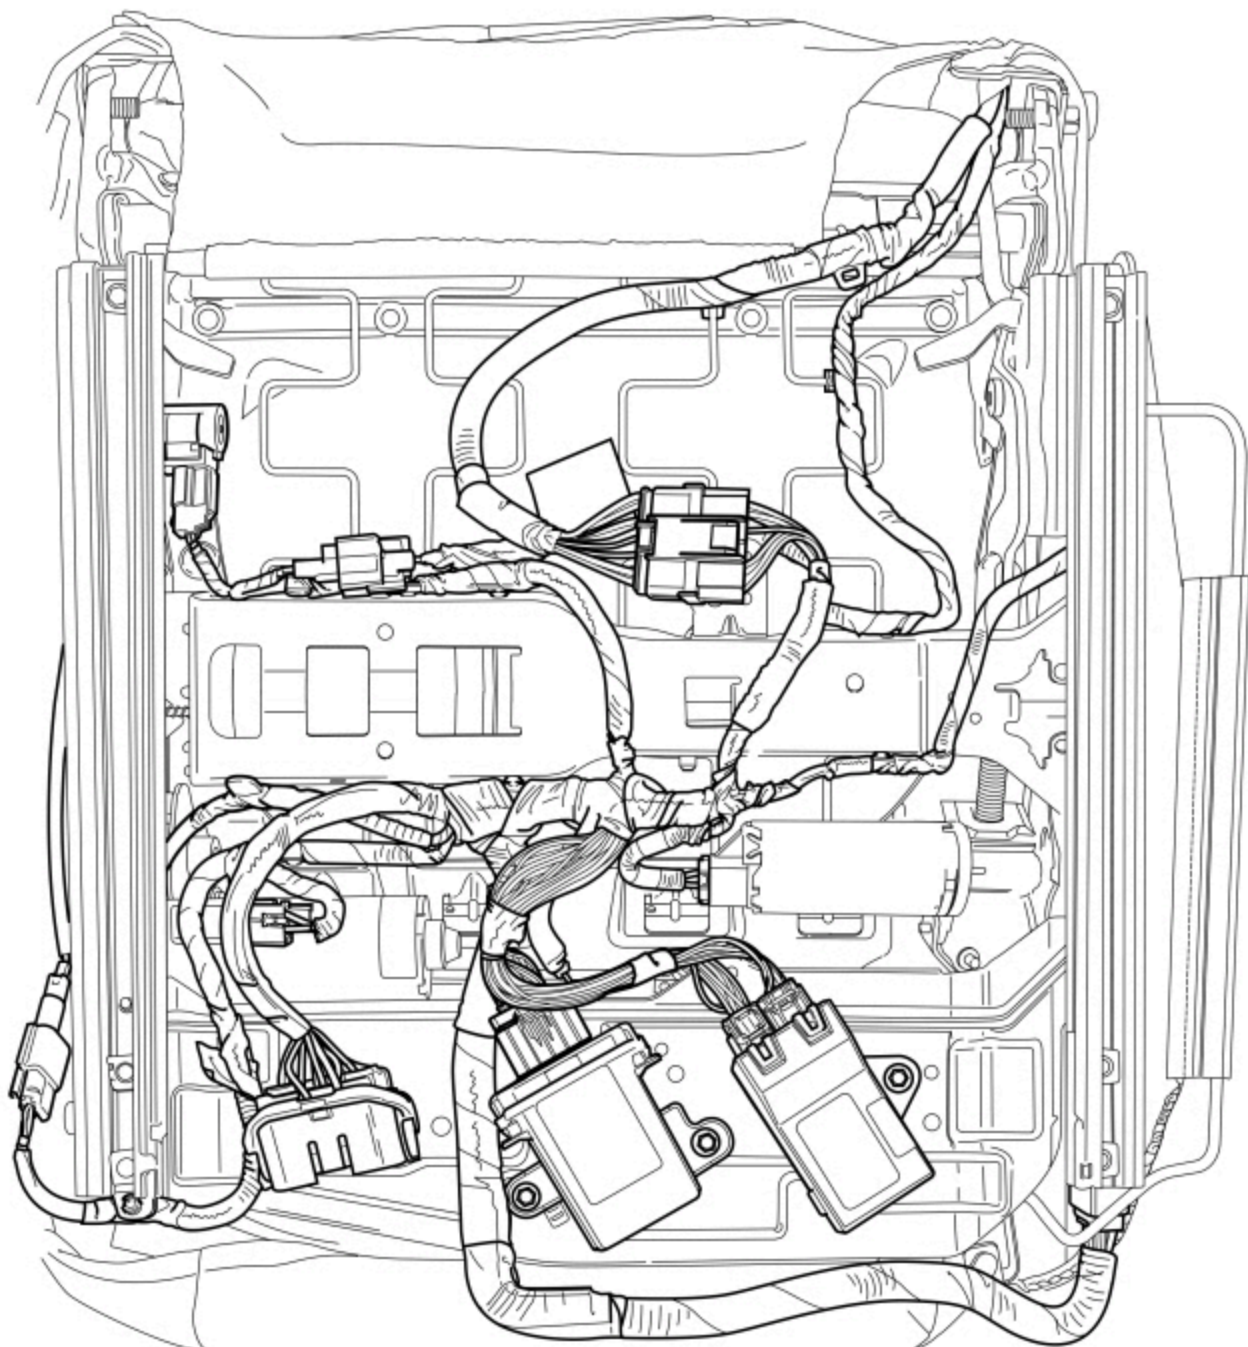


N0133012

1. Compare the seat with Completed Wire Harness Installation View to verify correct installation.

Power Passenger Climate Controlled Seat

Climate Controlled Seat Wire Harness View

NOTE: *Refer to the steps at the beginning of this procedure for installation instructions.*

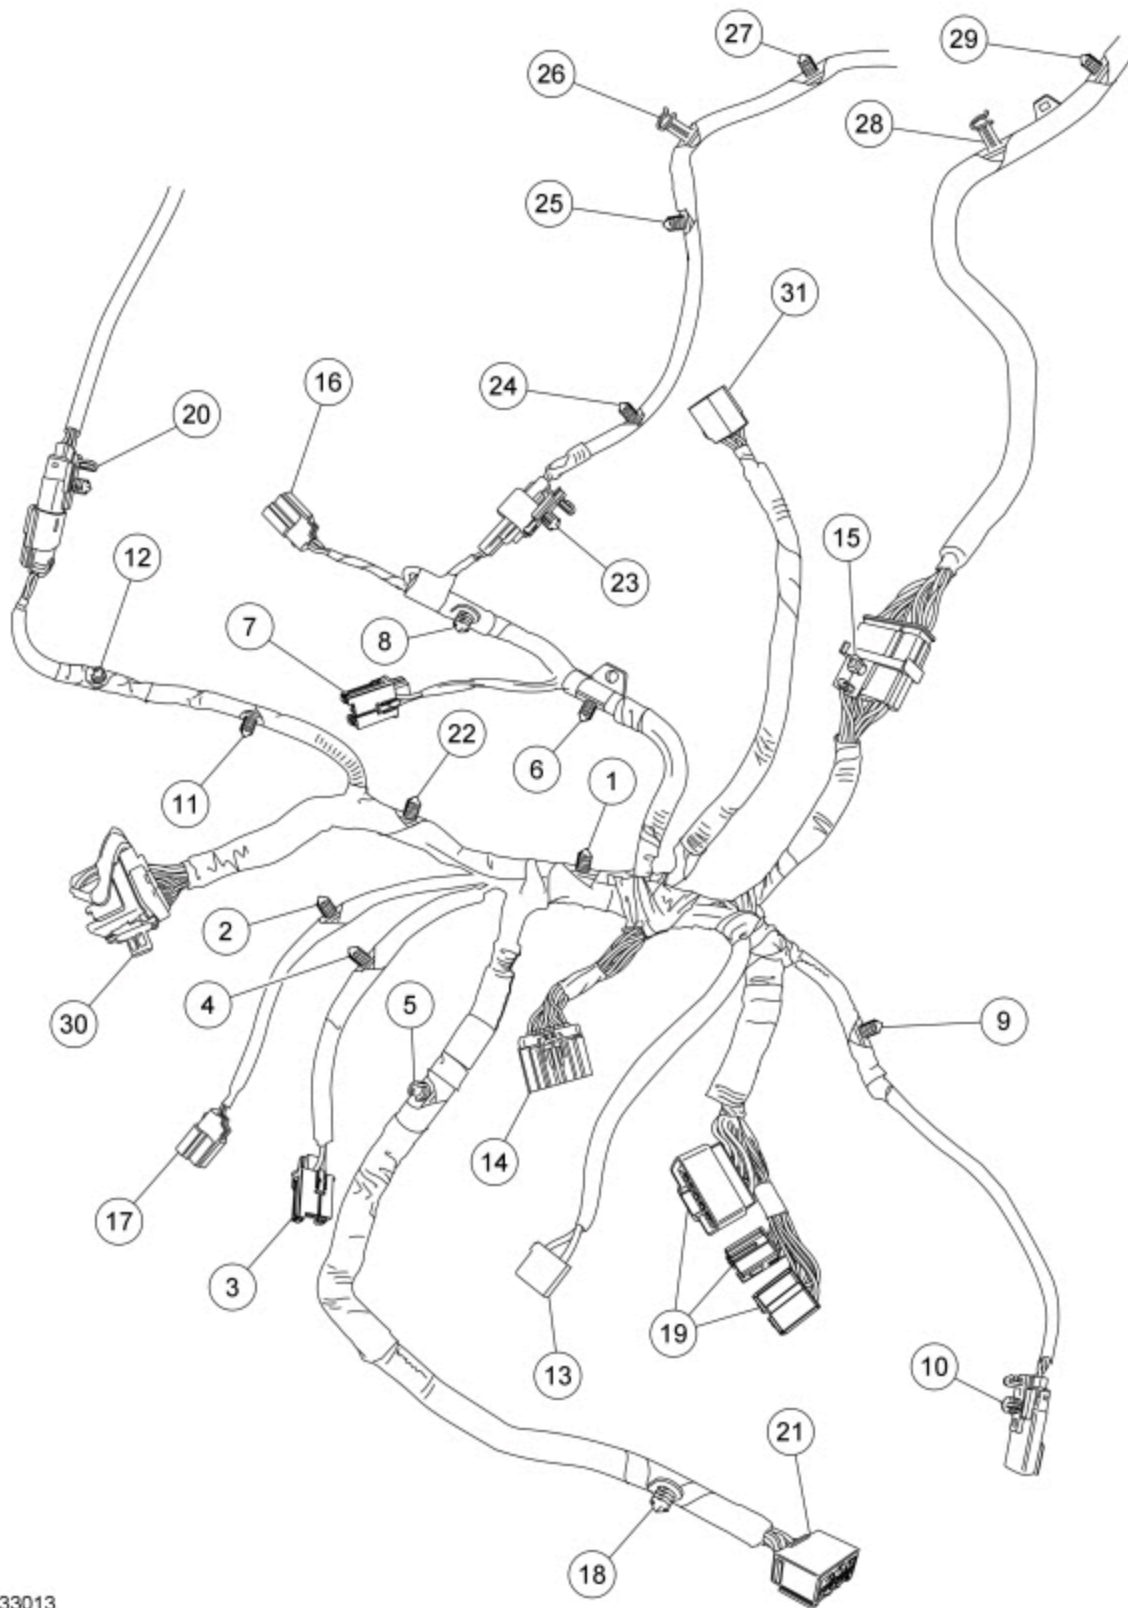

N0133013

Item	Description
1	Seat wire harness main retainer
2	QCS weight sensor bolt D wire harness retainer
3 ^a	Front height motor electrical connector
4 ^a	Front height motor wire harness retainer
5	Seat control switch wire harness retainer
6 ^b	QCS weight sensor bolt C wire harness retainer

Item	Description
7 ^c	Horizontal motor electrical connector
8	OCS weight sensor bolt C wire harness retainer
9	BTS wire harness retainer
10 ^d	BTS wire harness electrical connector and retainer
11	Safety belt buckle wire harness retainer
12	Safety belt buckle wire harness retainer
13 ^e	Rear height motor electrical connector
14	OCSM electrical connector
15 ^f	Backrest wire harness electrical connector and retainer
16	OCS weight sensor bolt C electrical connector
17 ^e	OCS weight sensor bolt D electrical connector
18	Seat control switch wire harness retainer
19	DCSM electrical connectors
20 ^c	Safety belt buckle electrical connector and retainer
21 ^g	Seat control switch electrical connector
22	Wire harness main retainer
23	Side air bag wire harness electrical connector and retainer
24 ^b	Side air bag wire harness retainer
25 ^b	Side air bag wire harness retainer
26	Side air bag wire harness retainer
27	Side air bag wire harness retainer
28	Backrest wire harness retainer
29	Backrest wire harness retainer
30	Seat wire harness electrical connector and retainer
31 ^h	Cushion TED electrical connector

^aRefer to Wire Harness Retainer and Connector Location View — Front Height Motor.

^bRefer to Wire Harness Retainer and Connector Location View — Motor Bracket.

^cRefer to Wire Harness Retainer and Connector Location View — Inboard Side.

^dRefer to Wire Harness Retainer and Connector Location View — Outboard Side.


^eRefer to Wire Harness Retainer and Connector Location View — Front of Seat.

^fElectrical connector must be attached to the seat bottom side, as shown. Refer to Wire Harness Retainer and Connector Location View — Motor Bracket.

^gElectrical connector and wire harness must be routed on the correct side of side shield attachment wire, as shown. Refer to Wire Harness Retainer and Connector Location View — Outboard Side.



hWire harness must correctly pass over other harnesses, as shown. Refer to Wire Harness Retainer and Connector Location View — Motor Bracket.

Wire Harness Retainer and Connector Location View — Main

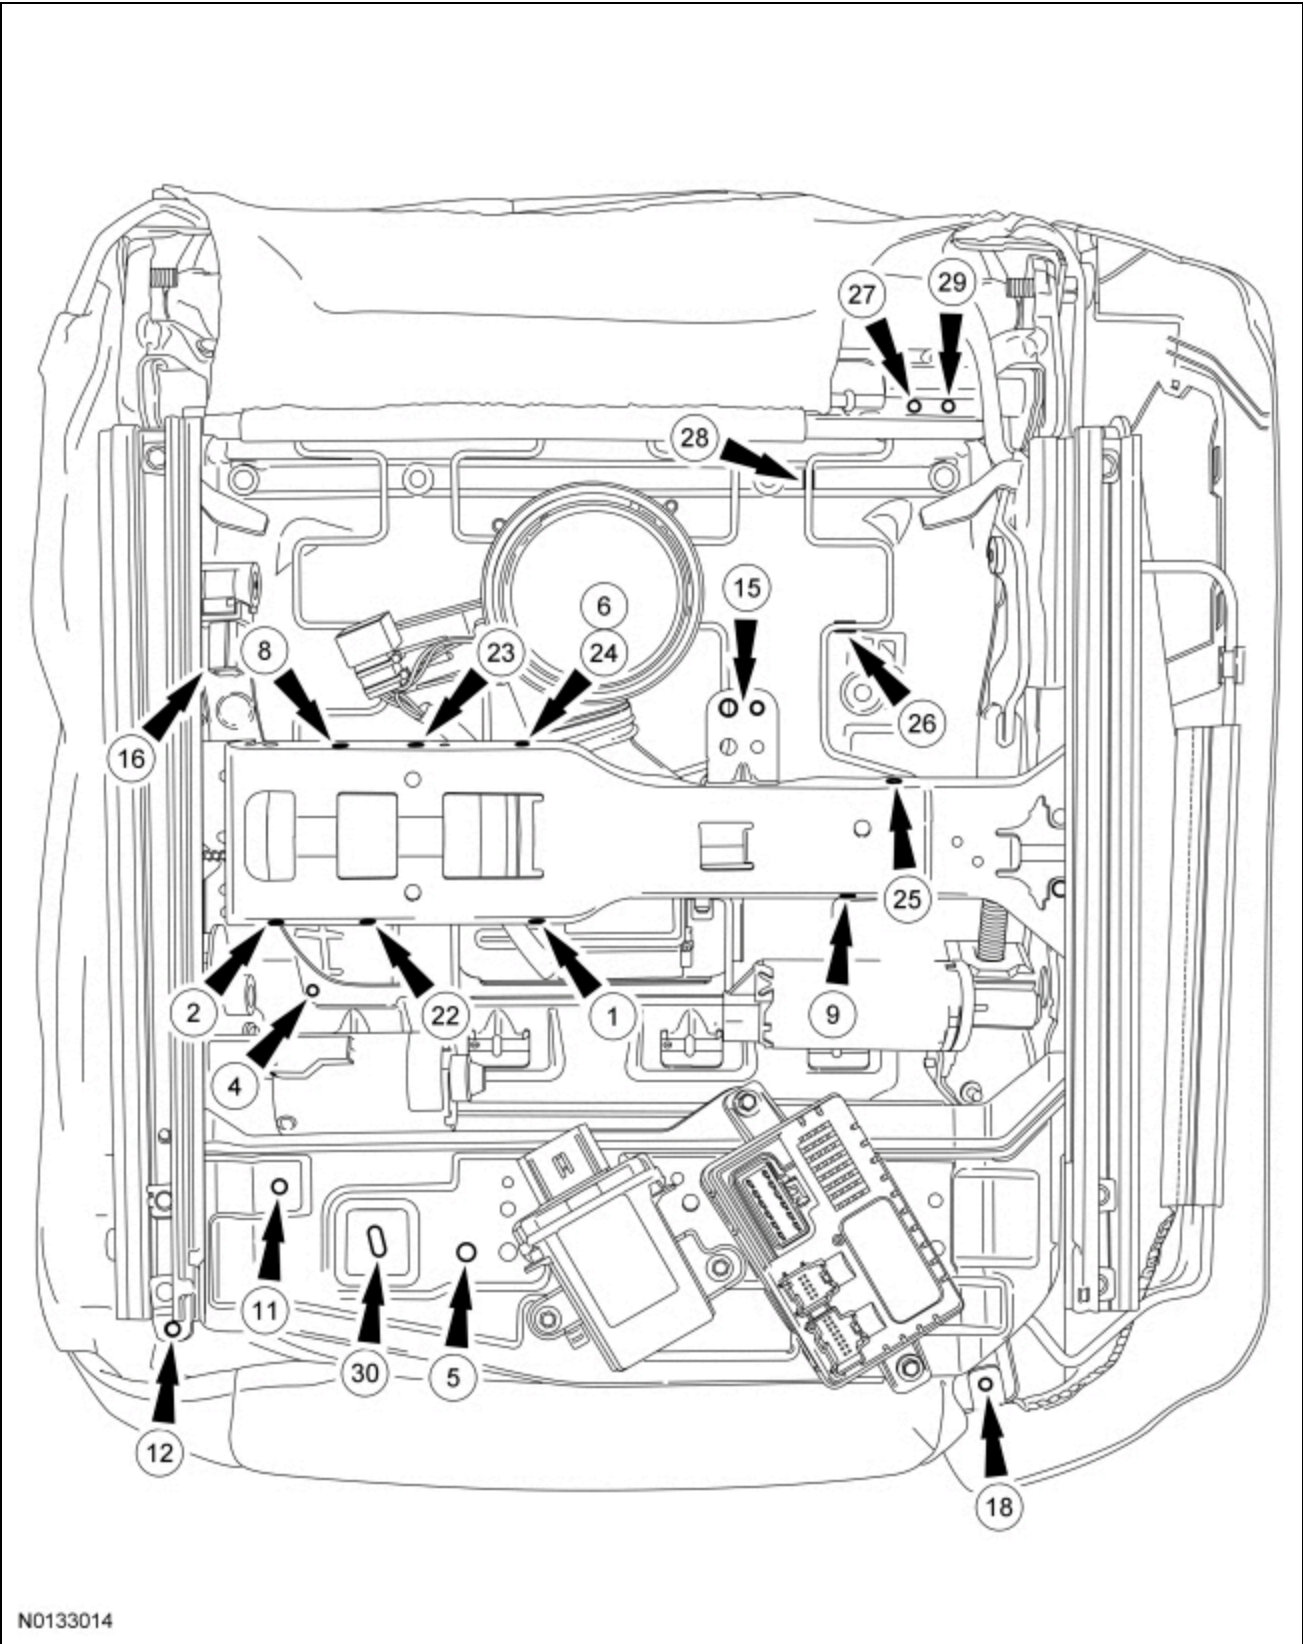


N0133014

Wire Harness Retainer and Connector Location View — Front of Seat

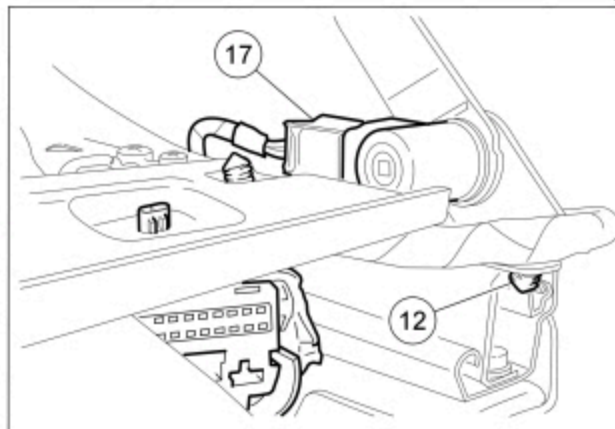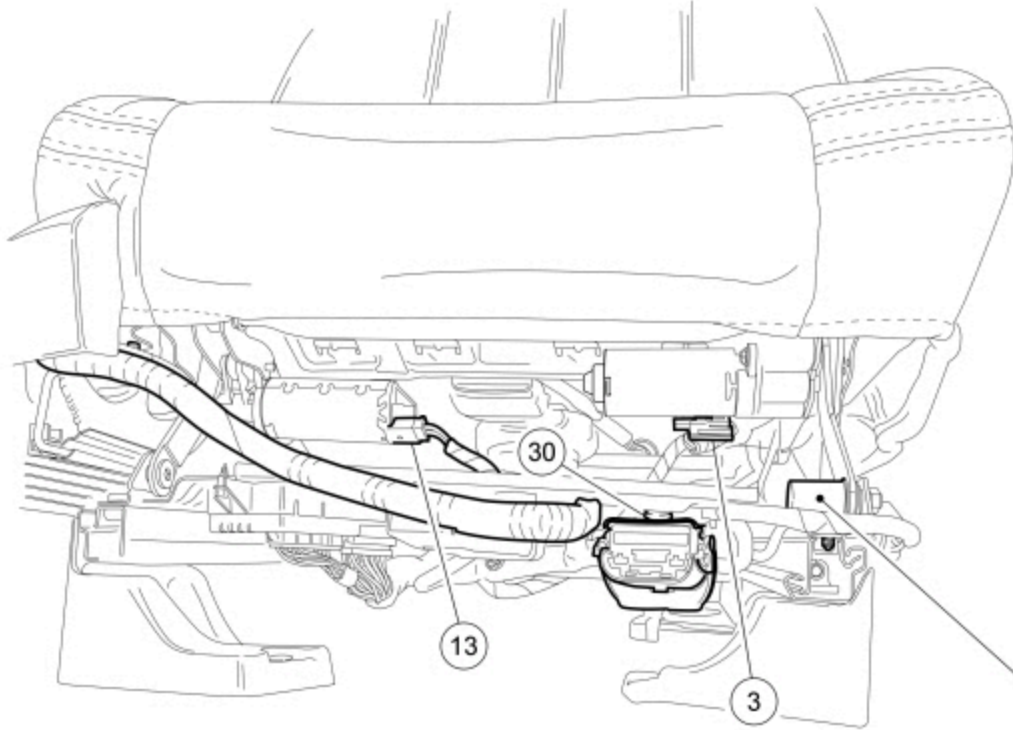


N0133015


Wire Harness Retainer and Connector Location View — Motor Bracket

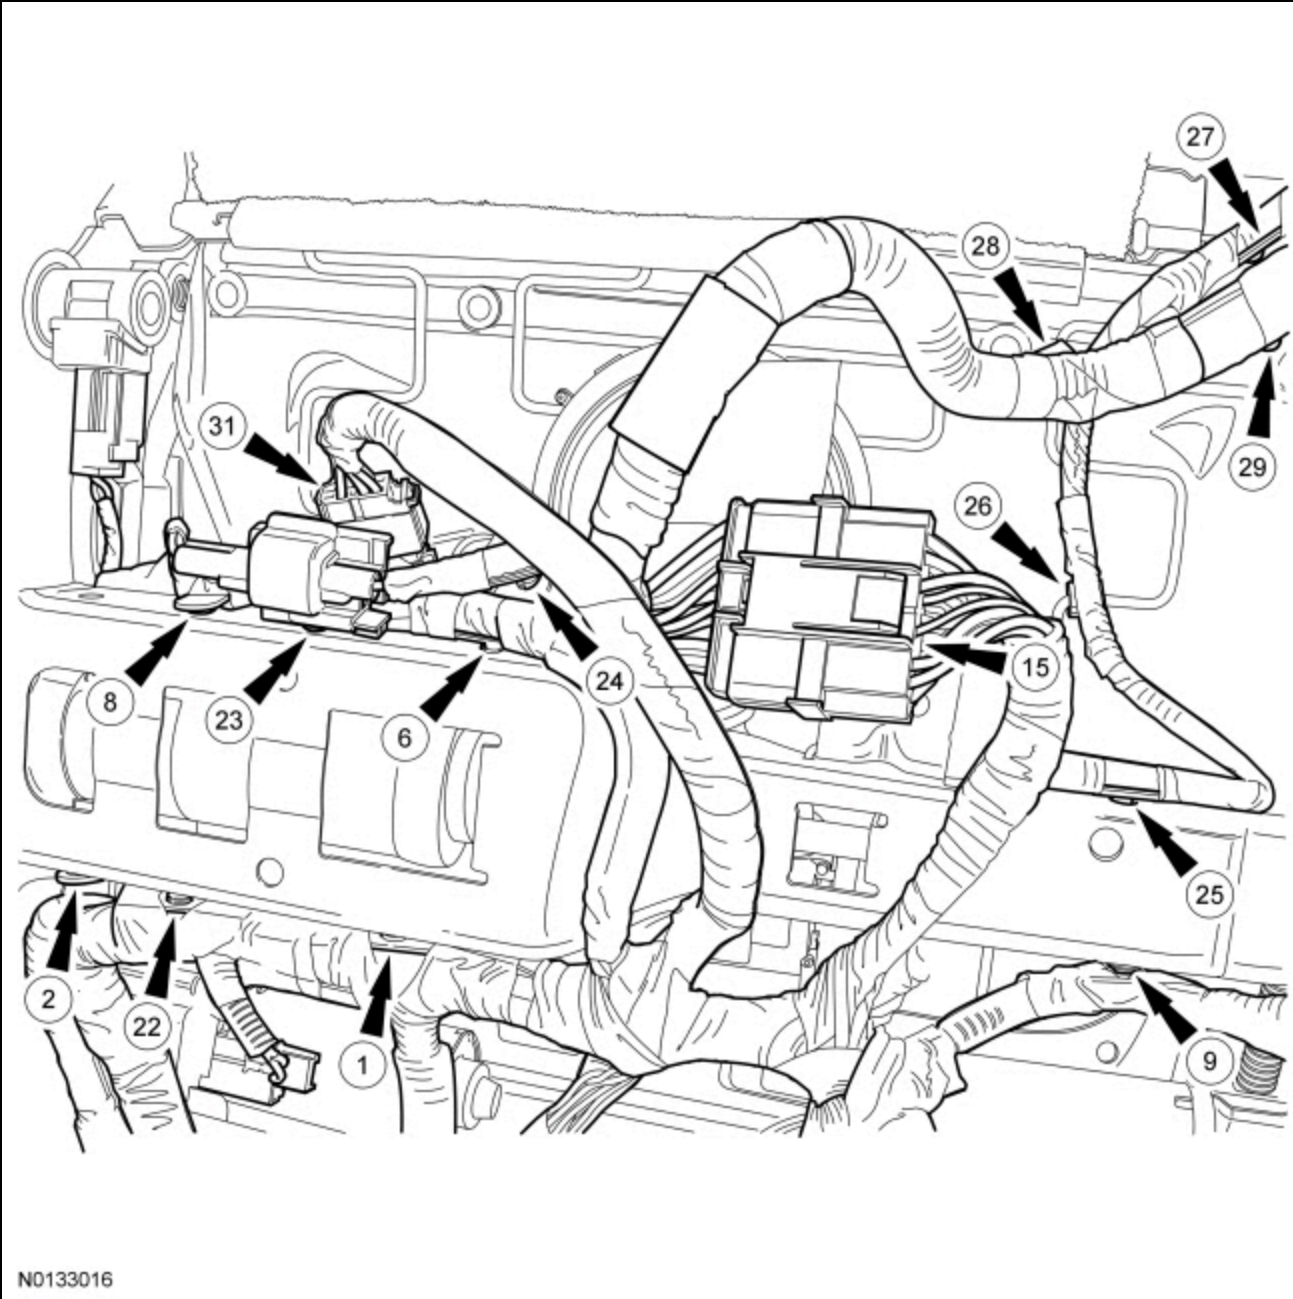


Wire Harness Retainer and Connector Location View — Front Height Motor

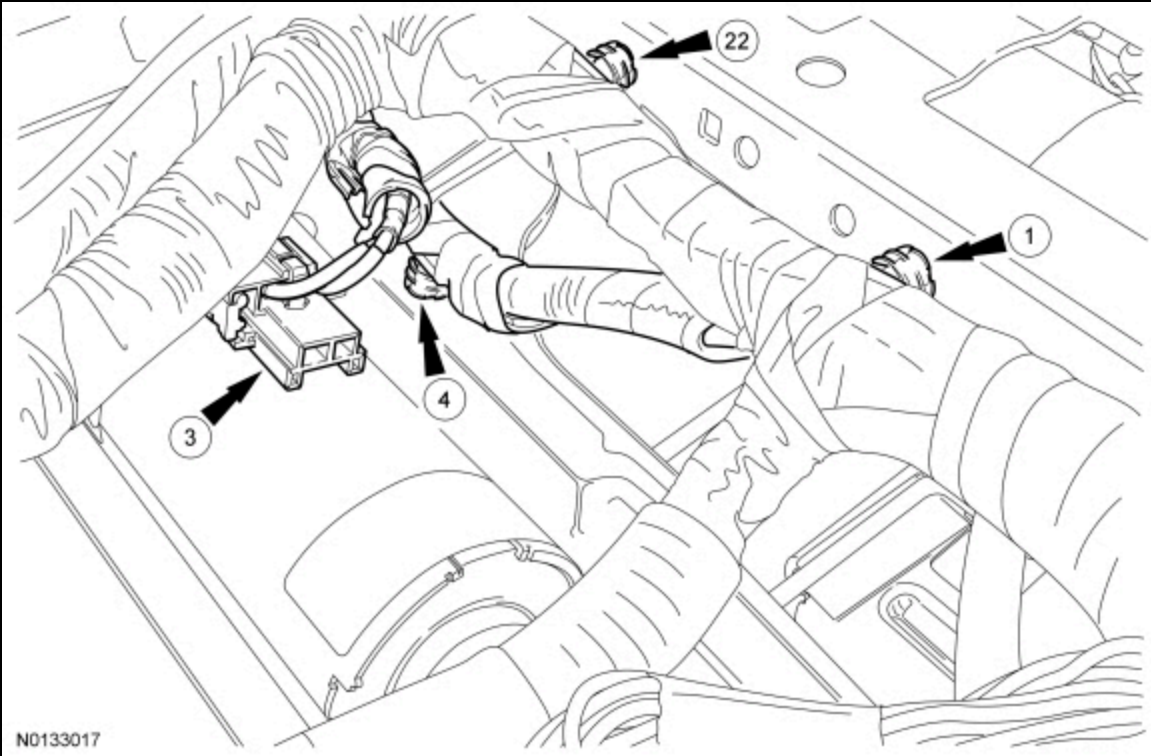

Wire Harness Retainer and Connector Location View — Inboard Side

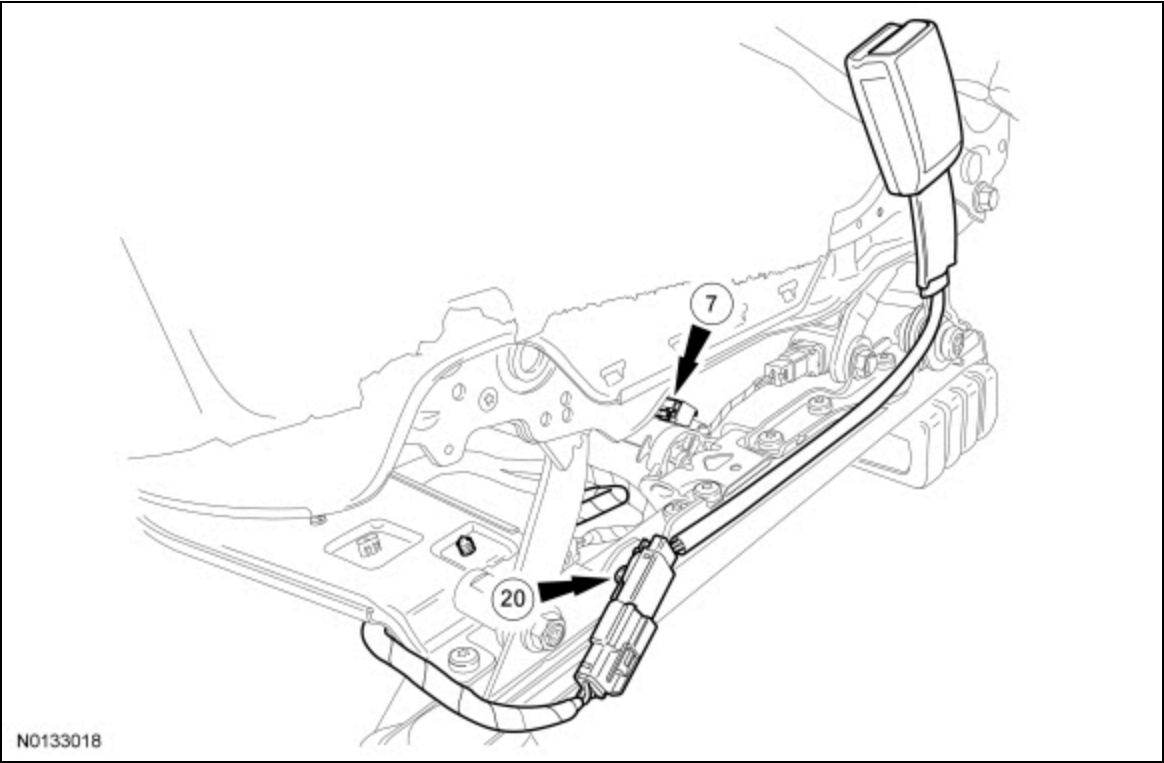


Wire Harness Retainer and Connector Location View — Outboard Side

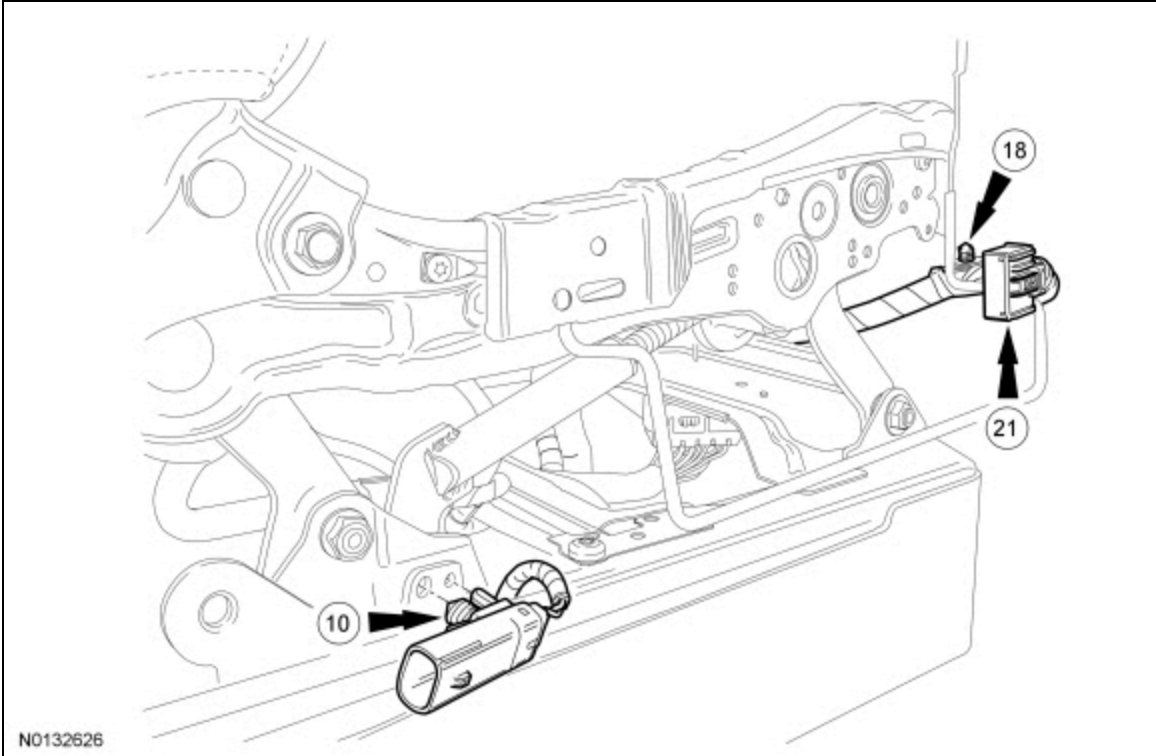

Completed Wire Harness Installation View

NOTE: *Harness is attached to the seat track as it should appear in the vehicle.*

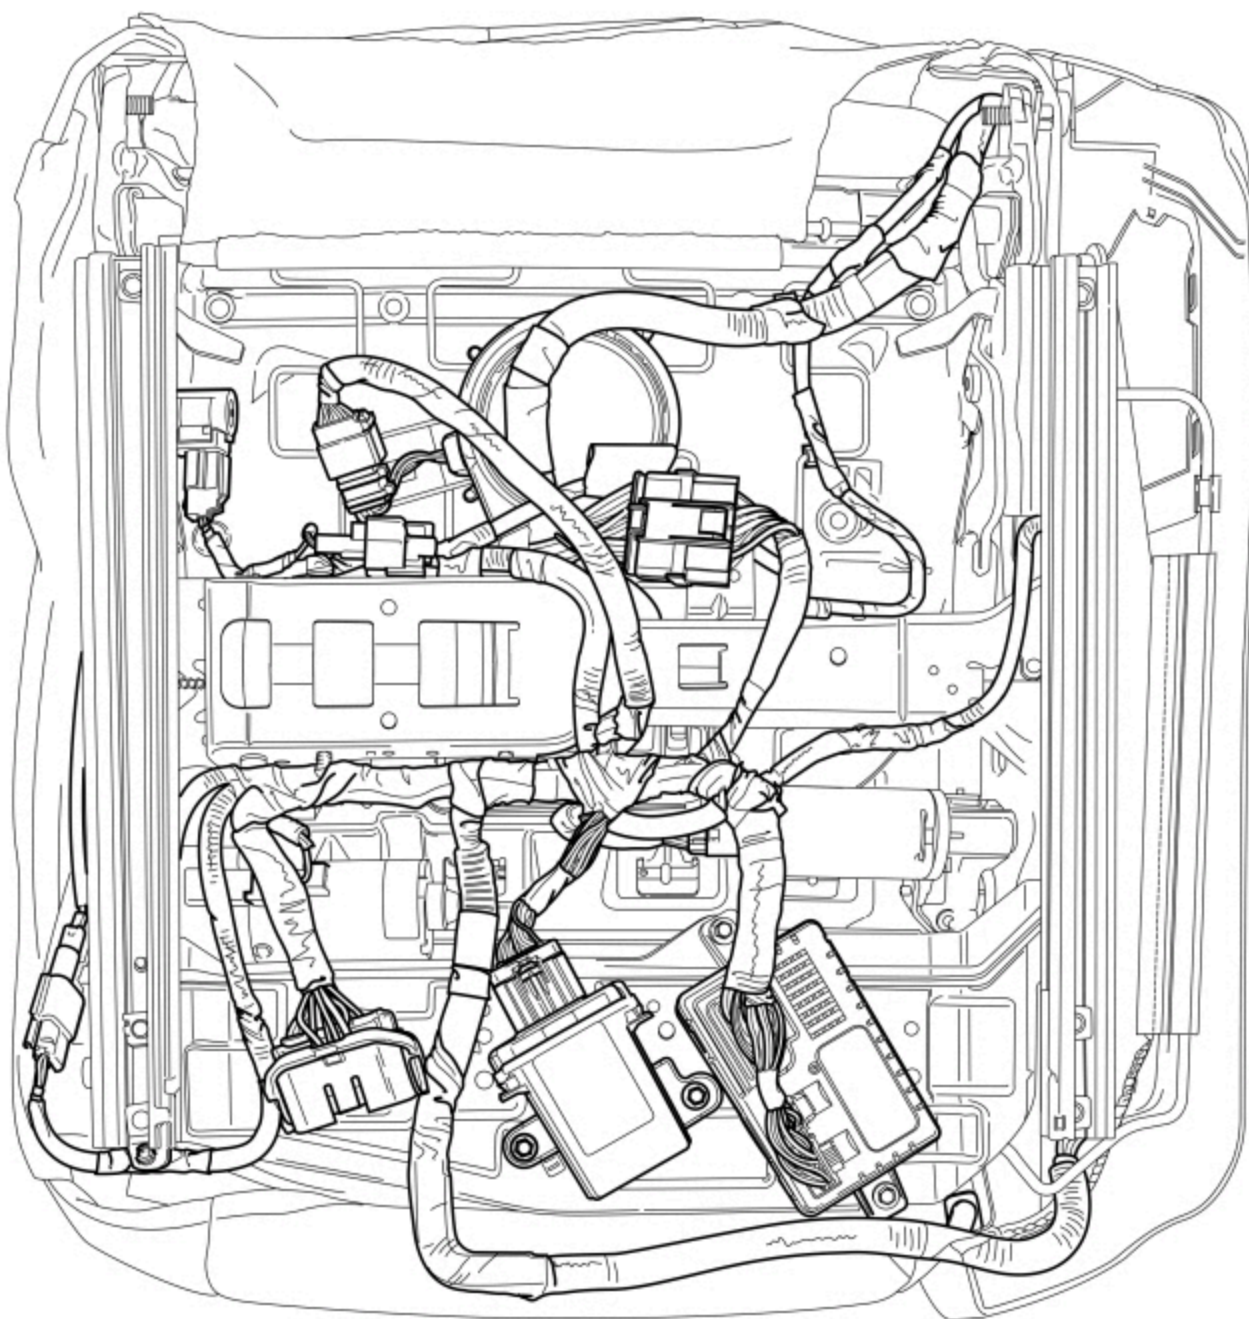

N0133019

1. Compare the seat with Completed Wire Harness Installation View to verify correct installation.