


Dual Climate Controlled Seat Module (DCSM)



Removal and Installation

1. When installing a new Dual Climate Controlled Seat Module (DCSM) , carry out the appropriate steps in the Programmable Module Installation (PMI) procedure. For additional information, refer to Section 418-01.
2. Remove the front passenger seat. For additional information, refer to Seat — Front in this section.
3. Disconnect the 3 DCSM electrical connectors.
 - Release the 2 locking wedges.
 - Disconnect the 3 connectors.

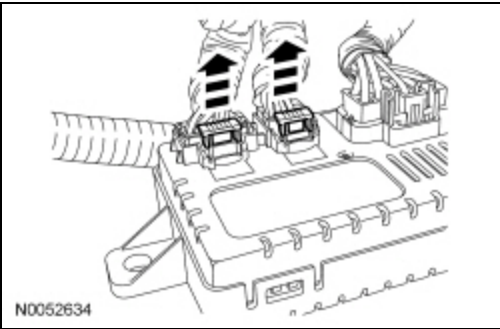

4. Remove the 2 screws and DCSM .
5. To install, reverse the removal procedure.
6. If a new DCSM has been installed, carry out the appropriate steps to complete the Programmable Module Installation (PMI) procedure. For additional information, refer to Section 418-01.